


American Standard

HAMPTON

HAMPTON DIVERTER & PERSONAL SHOWER TRIM KITS

Installation Instructions

T991.712
T991.722
T991.732

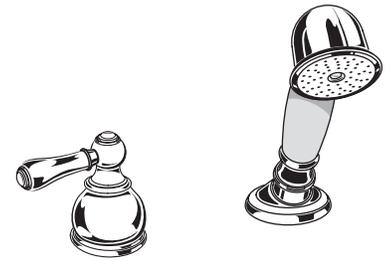


Thank you for selecting American-Standard...the benchmark of fine quality for over 100 years.

To ensure that your installation proceeds smoothly—please read these instructions carefully before you begin.

Certified to comply with ANSI A112.18.1
U.S. Patent No. D403,750

M968357 Rev. 1.2

Recommended tools



Phillips Screwdriver



Screwdriver




Channel Locks





Adjustable Wrench

1 INSTALL DIVERTER


- REMOVE THE DIVERTER GUARD (1).
- Place the ESCUTCHEON SEAL (2) over the DIVERTER BODY (3).
- Align the HANDLE STEM (5) with the SLEEVE (6) as necessary. Thread the VALVE ESCUTCHEON (4) into the BODY (3) until the ESCUTCHEON (4) contacts the finished deck.

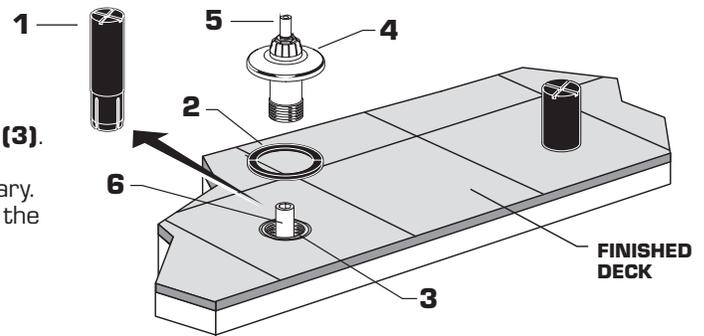

2 INSTALL HANDLES

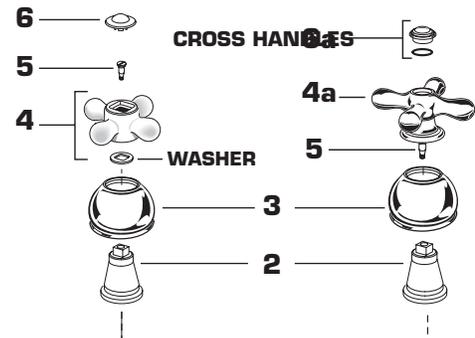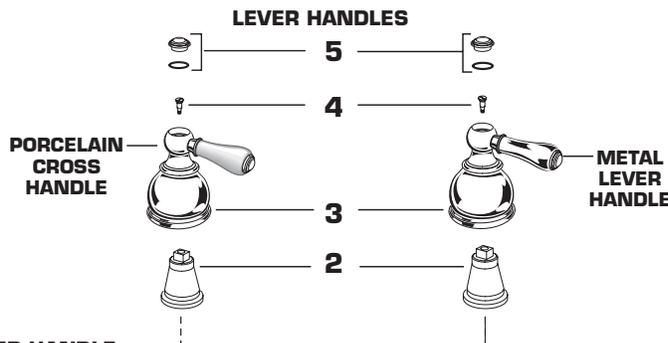


- ### LEVER HANDLE
- Turn HANDLE STEM (1) fully clockwise (Tub Fill position).
 - Push ADAPTER (2) into HANDLE BASE (3) in a way that the male square on the ADAPTER (2) fits in the female square of the HANDLE BASE (3).
 - Push HANDLE BASE (3) and ADAPTER (2) onto VALVE STEM (1).
 - Check alignment, if not satisfactory aligned;
 - Push out ADAPTER (1) carefully.
 - Turn ADAPTER (1) either 45° or 90° so that male square on ADAPTER (1) catches different female square in HANDLE BASE (3).
 - Assemble and tighten HANDLE SCREW (4).
 - Push INDEX CAP (5) in top of HANDLE (6, 6A).

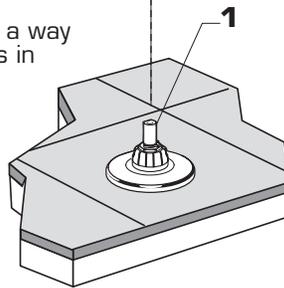

- ### CROSS HANDLE
- Turn HANDLE STEM (1) fully clockwise (Tub Fill position).
 - Push ADAPTER (2) into HANDLE BASE (3).
 - Push HANDLE BASE (3) and ADAPTER (2) onto VALVE STEM (1).
 - Push CROSS (4, 4a) onto ADAPTER (2).
 - Assemble and tighten HANDLE SCREW (5).
 - Push INDEX CAP (6, 6a) in top of HANDLE (4, 4a).


3 INSTALL HAND SHOWER

- Unscrew the HOLDER (3) from the SHOWER ESCUTCHEON (5). Slip the SHOWER HOSE (12) through the HOLDER (3) and the SHOWER ESCUTCHEON (5). Insert a SEAL WASHER (2) into the SHOWER HOSE CONNECTOR (4).
- Pull out the SLEEVE GUARD (9) and HOSE (10). Unthread the SLEEVE GUARD (9) from the HOSE END (8) connection. **Be careful not to allow the HOSE (10) to fall back through the SLEEVE (13).**
- Install SEAL WASHER (7) into HOSE (12). Thread the SHOWER HOSE (12) onto the HOSE END (8) connection and tighten securely.
- Apply a sealant around the HOSE HOLE.
- Thread the SHOWER ESCUTCHEON (5) into the SLEEVE (13) until the ESCUTCHEON (5) contacts the finished deck.
- Loosen the SET SCREW (11) in the SHOWER ESCUTCHEON (5) and rotate the ESCUTCHEON (5) towards the center of the tub. Retighten the SET SCREW (11).
- Thread the HOLDER (3) into the SHOWER ESCUTCHEON (5).
- Insert SEAL WASHER (2) into the SHOWER HOSE CONNECTOR (4). Connect the HAND SHOWER (1) and place the HAND SHOWER into the HOLDER (3).

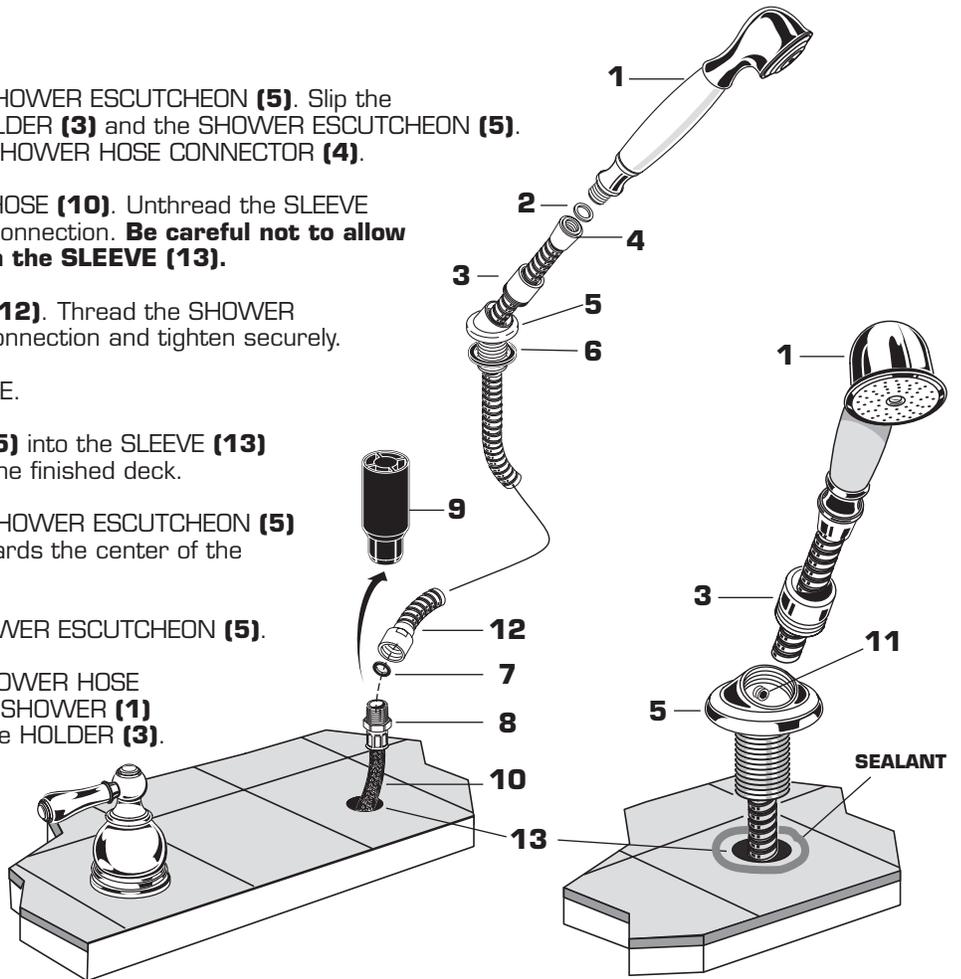

4 TESTING


- Turn the HOT HANDLE (1) clockwise and the COLD HANDLE (2) counterclockwise to the off position.
- Unscrew and remove the SPOUT END (3).
- Slowly turn on the water supplies.
- Operate the HANDLES (1, 2) to flush water lines thoroughly. Check SPOUT (4) connection for leakage.
- Turn the Handles off. Replace the SPOUT END (3).

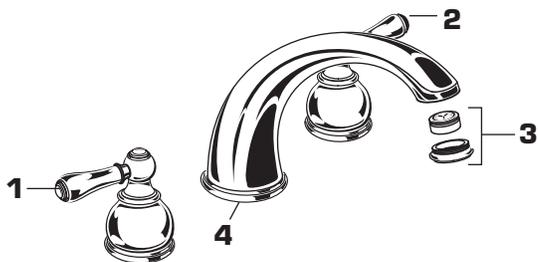

5 SERVICE

To change the direction of handle rotation

- Turn off the water supplies
- Turn HANDLE (1) to the off position.
- Remove the INDEX CAP (2) and the HANDLE SCREW (3). Pull the HANDLE BASE (4) off and remove ADAPTER (5).
- Unscrew the VALVE ESCUTCHEON (6).
- Unscrew the VALVE LOCK NUT (7) and remove. A 17mm deep socket is required.
- Remove the CARTRIDGE (8) by pulling up on the SLEEVE (9).
- Remove the SCREW (10) from the CARTRIDGE (8).
- Remove the SPRING CLIP (11).
- Remove the STOP WASHER (12). Turn it 90° and replace.
- Replace the SPRING CLIP (11).
- Reverse the above steps to reassembly the components.
- If the spout drips, operate the handles several times from the off to the on position. Do not force - the handles only turn 90°

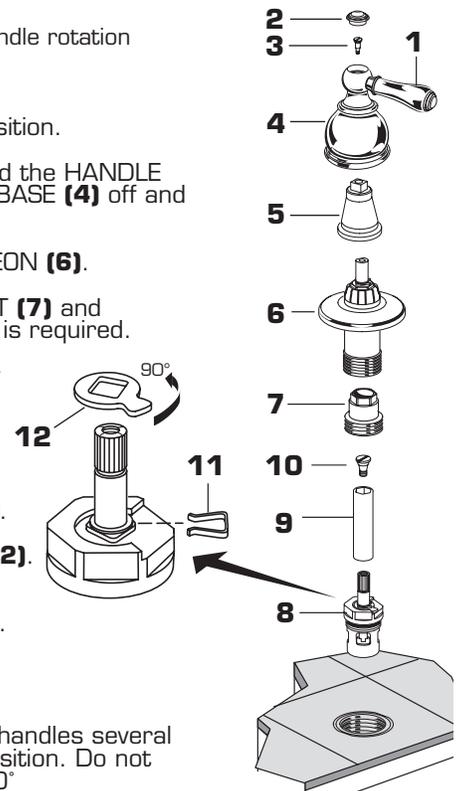

6 CARE INSTRUCTIONS:

DO: SIMPLY RINSE THE PRODUCT CLEAN WITH CLEAR WATER. DRY WITH A SOFT COTTON FLANNEL CLOTH.
DO NOT: DO NOT CLEAN THE PRODUCT WITH SOAPS, ACID, POLISH, ABRASIVES, HARSH CLEANERS, OR A CLOTH WITH A COARSE SURFACE.