

InstallationData

FreedomLine

Table 1

WIDTH DIMENSIONAL TOLERANCE +0, -3/8" (±5mm)					
MODEL #	DIM. A	DIM. B	DIM. C	DIM. D	SKIRT HEIGHT
1363-BFS / 1363-BFSMA	38 1/8" (970mm)	19" (480mm)	38 1/4" (970mm)	19" (480mm)	1 3/4" (45mm)
1363-BFSC / 1363-BFSCST / 1363-BFSCSTMA	38 1/8" (970mm)	19" (480mm)	38 1/4" (970mm)	19" (480mm)	3/4" (20mm)
1363-BFC2P / 1363-BFC2PMA	39 1/8" (995mm)	19 1/2" (495mm)	38 3/4" (985mm)	19 1/2" (495mm)	3/4" (20mm)
1423-BFS	45 3/4" (1160mm)	22 13/16" (580mm)	51 3/8" (1305mm)	11 1/4" (285mm)	2" (50mm)
1423-CBFS	45 1/8" (1145mm)	22 1/2" (570mm)	50 3/4" (1290mm)	7 1/2" (190mm)	3/4" (20mm)
1483-TSCH *	48 1/8" (1220mm)	24" (610mm)	35" (890mm)	17" (430mm)	2 1/2" (65mm)
1483-TSTH *	48 1/8" (1220mm)	24" (610mm)	36 1/4" (920mm)	16" (405mm)	2 1/2" (65mm)
1603-TSCB *	60 1/8" (1525mm)	30" (760mm)	35" (890mm)	17" (430mm)	4" (100mm)
1603-BFST / 1603-BFSTTX / 1603-BFSTMA	62 1/8" (1580mm)	31" (790mm)	36 1/4" (920mm)	17 1/2" (445mm)	3/4" (20mm)
1603-BFSTX / 1603-BFSMA	62 1/8" (1580mm)	31" (790mm)	36 1/4" (920mm)	7" (180mm)	1" (25mm)
1603-CFS	62 1/8" (1580mm)	31" (790mm)	36 1/4" (920mm)	17 1/2" (445mm)	1 3/4" (45mm)
1603-BFSC	62 1/8" (1580mm)	31" (790mm)	36 1/4" (920mm)	17 1/2" (445mm)	3/4" (20mm)
1623-BFST / 1623-BFSTTX / 1623-BFSTMA	62 1/8" (1580mm)	31" (790mm)	32 1/4" (820mm)	15 1/2" (395mm)	3/4" (20mm)

*UNITS THAT ARE NOT BARRIER-FREE.

NOTE: IF BACK WALL IS SHEET ROCK FIRE WALL AND UNIT HAS BACK WALL MIXING VALVE, ADD 2" TO DIMENSION "C" FOR CLEARANCE.

Optional Removable Wheelchair Ramp

[Available on 1423-BFS only]

Be sure attachment clips are installed on unit using (#10x1") sheet metal screws and simply set removable ramp in place. See Fig. 5.

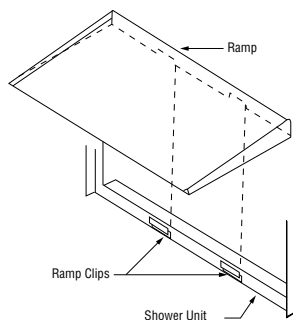


Fig. 5
Optional Removable Wheelchair Ramp
(1423-BFR)

Vinyl Flexible Dam

Fits all barrier-free showers

(See Fig. 6)

Installation

1. Make sure the vinyl flexible dam is of proper length by measuring right to left, in between shower walls.
2. Round all four bottom corners to approximately a 3/8" radius with a sander or utility knife to fit.
3. Before installing, clean the top of shower threshold with lacquer thinner or rubbing alcohol until surface is clean.
4. Beginning from one end, place the vinyl dam on top of the shower threshold, peel away adhesive and press down towards other end.
5. Silicone both inside and outside the entire length of the vinyl dam with clear or white sealant.

Maintenance

Clean with mild detergent and warm water or any non-abrasive, non-petroleum based cleaner. Use of harsh chemicals, petroleum based or abrasive cleaners will damage product.

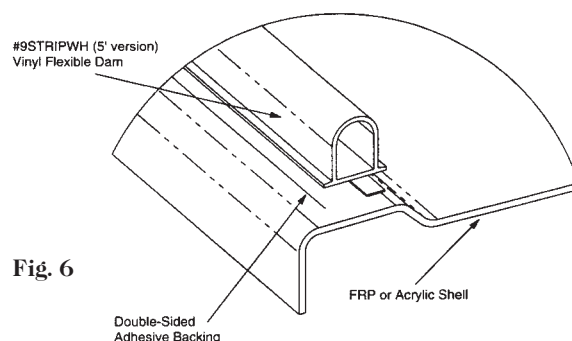


Fig. 6

