


<b>Model:</b>	200003	200007	200036
	200004	200008	200051
	200005	200033	200052
	200006	200034	

**Note : For Ceramic Sinks without overflow**

**Step 1 :** Position countertop opening to ensure clearance between the lavatory, faucet and backsplash. Cut 1-3/4" hole for drain in countertop

**See Figure 1.**

Figure 1.

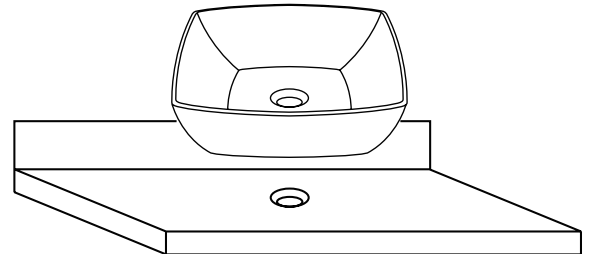


**Step 2 :** Place a generous portion of plumbers' putty under drain cap and insert whole drain body inside the bowl and through the countertop

(There may be a small beveled rubber washer packaged with your drain, please discard this and use plumbers' putty instead)

**See Figure 2.**


Figure 2.

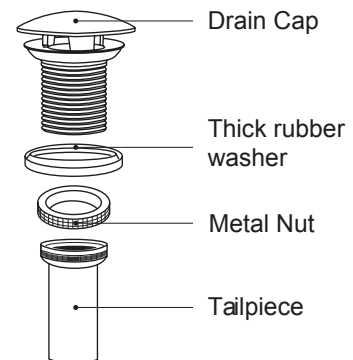

**Step 3 :** From under the drain, insert the thick rubber washer and screw on and tighten the metal nut. Remove excess plumbers' putty

**See Figure 3.**

Figure 3

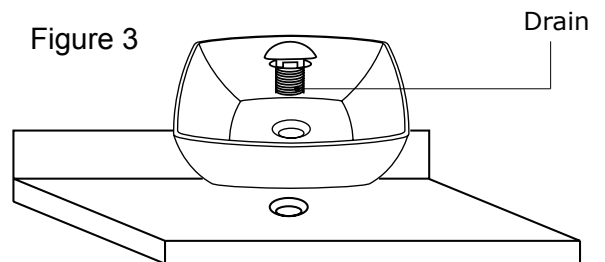

**Step 4 :** Attach p-trap to tailpiece

