


• **Fits Standard Basket Strainers • Includes Washer And Friction Ring**

1. From the underside of the sink remove old nut and washers.
2. Place rubber washer and then the thin metal over large threads. Screw large nut tightly against the washers.
3. Complete the installation by further tightening large nut with nut wrench.

• **Convient Standard Crépines • Comprend Rondelle et la Bague de Friction**

1. Par le dessous de l'évier, retirez les vieux écrou et les rondelles
2. Par le dessous de l'évier, posez d'abord la rondelle de caoutchouc, puis la pièce métallique mince, sur la grosse partie filetée. Vissez ensuite fermement le gros écrou contre les rondelles.
3. Pour achever l'installation, serrez davantage le gros écrou avec une clé à écrou.

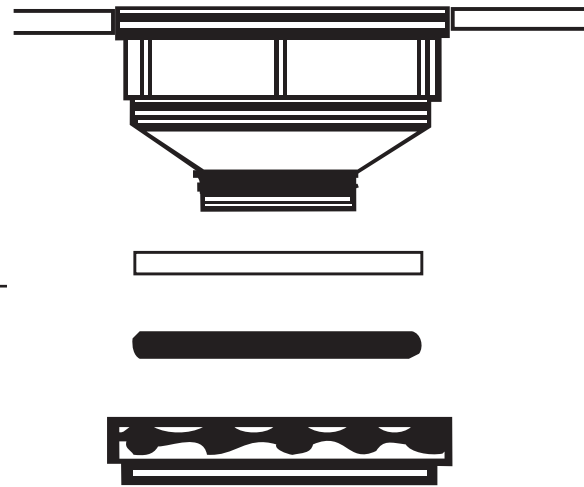

Made in/Fabrique a/Hecho en: CHINA

• **Para Coladeras Estándar**

• **Incluye Arandela y Anillo de Fricción**

1. Desde abajo del fregadero, retire la tuerca y las arandelas usadas.
2. Coloque la arandela de goma y luego la metálica sobre las roscas grandes. Atornille la tuerca grande firmemente contra las arandelas.
3. Complete la instalación ajustando la tuerca grande con una llave inglesa.

Manufactured for/Fabrique pour/
Fabricado para: Lincoln Products
Industry, CA 91748 • © Copyright 2015

