

How to Install

Pacifyre® MK II Fire Sleeve

The Pacifyre® MK II Fire Sleeve is installed simply and easily without using special materials. Only one pair of hands is needed for the entire installation.



1. Wrap the sleeve around the pipe



2. Place closing tabs in proper position



3. Bend and lock closing tabs



4. Slide the sleeve into the aperture and center it.




5. Fill the gap with fire-resistant acrylic, foam or mortar



6. Complete the Universal ID Card and place next to aperture.

Installation benefits:

- Simple and easy to install, without special training
- Just one sleeve per aperture
- Close wall distance
- Close spacing
- For pipes in any direction!

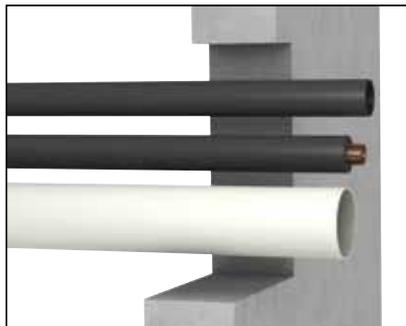

1. Open aperture



2. Completely finished aperture