
DWVV AMERICAN STANDARD

Decorative P-Trap Model D35700.020

Thank you for selecting DXV by American Standard. To ensure that your installation proceeds smoothly, please read these instructions carefully before you begin.

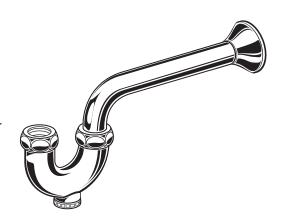



Most of the procedures require the use of common tools and materials, which are available from hardware and plumbing, supply stores. It is essential that the tools and materials be on hand before work is begun.











Ш

ш

 α

ш

⋖


S

Channel Locks

Adjustable Wrench

ape Plumbers' Grease

ROUGHING-IN DIMENSIONS:

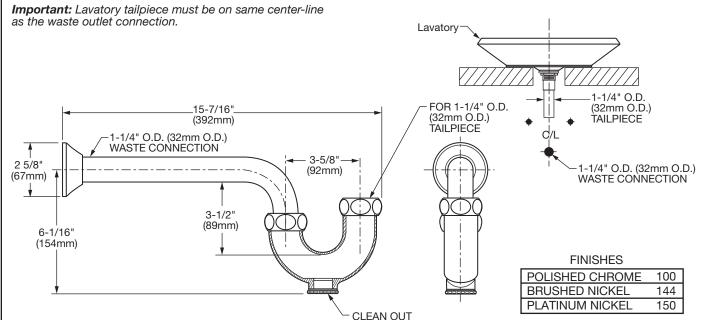

In the United States:

DXV by American Standard One Centennial Avenue Piscataway, New Jersey 08855 Attention: Director of Customer Care

For residents of the United States, warranty information may also be obtained by calling the following toll free number: (800) 227-2734 www.DXV.com

In Canada:

DXV by American Standard 5900 Avebury Road Mississauga, Ontario L5R 3M3 Canada

Toll Free: 1-800-387-0369 Local: 905-306-1093 Fax: 1-800-395-1498 www.DXV.ca

In Mexico:


DXV by American Standard Via Morelos 330 Col. Santa Clara Coatitla Ecatepec, Estado de México 55540

Toll Free: 01-800-8391200 www.DXV.mx

INSTALL WASTE TUBE

- Unthread LOCKNUT (1) and remove the WASTE TUBE (2) from the P-TRAP (3).
- Apply plumber's grease to the end of WASTE TUBE (2). Slide WALL FLANGE (4) onto WASTE TUBE (2). Make sure O-Ring is installed. Fig. 1.
- Install the WASTE TUBE (2) into the waste outlet in the wall and hand tighten. Fig. 2. Do not tighten fully.


Note: If WASTE TUBE (2) is to long, cut to proper length with tubing cutter.

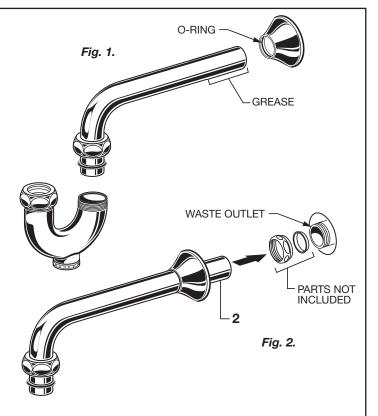

2 INSTALL "P" TRAP

Unthread and remove LOCKNUT (1) and GASKET (2).
 Slide LOCKNUT (1) and GASKET (2) over existing
 TAIPLIECE (3) from lavatory drain. Make sure small end of GASKET (2) is facing up.

Align and insert TAIPLIECE (3) and WASTE TUBE (4) into P-TRAP (5). Hand tighten LOCKNUTS (1&6).
 Do not tighten fully.

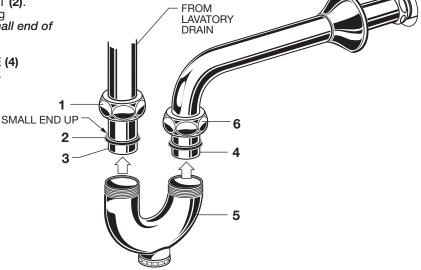

TIGHTEN CONNECTIONS

- When P-TRAP is aligned properly, tighten connections. *Protect finish when tighting.*
- Push WALL FLANGE (1) against finished wall and wipe off excess grease once installation is complete.
- Turn on faucet and check all connections for leaks.
 Tighten if necessary.
- Remove the CLEANOUT (2) for servicing.

