


# INSTALLATION INSTRUCTIONS



AMERICAN STANDARD





## Keefe™ Wall Mounted Accessories

- Robe Hook – Model D35104.210
- Towel Ring 6" – Model D35104.190
- Towel Bar 24" – Model D35104.240
- Tissue Holder – Model D35104.235

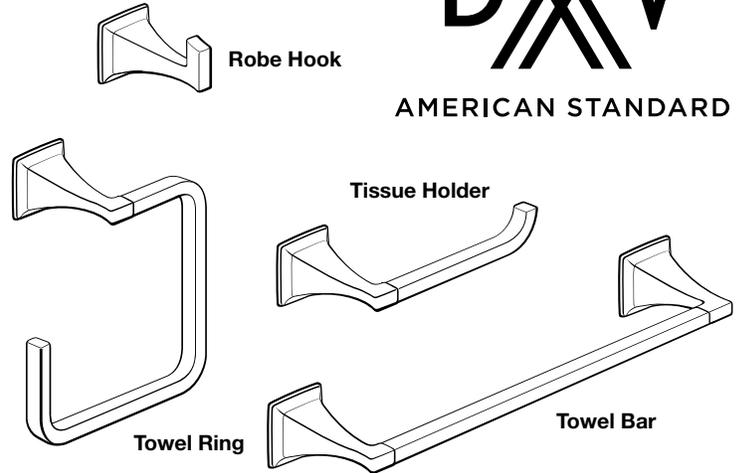


Thank you for selecting DXV by American Standard. To ensure that your installation proceeds smoothly, please read these instructions carefully before you begin.

### RECOMMENDED TOOLS AND MATERIALS

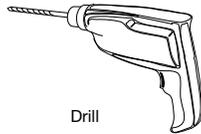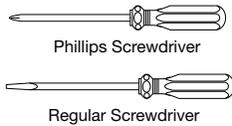

### ROUGHING-IN DIMENSIONS:

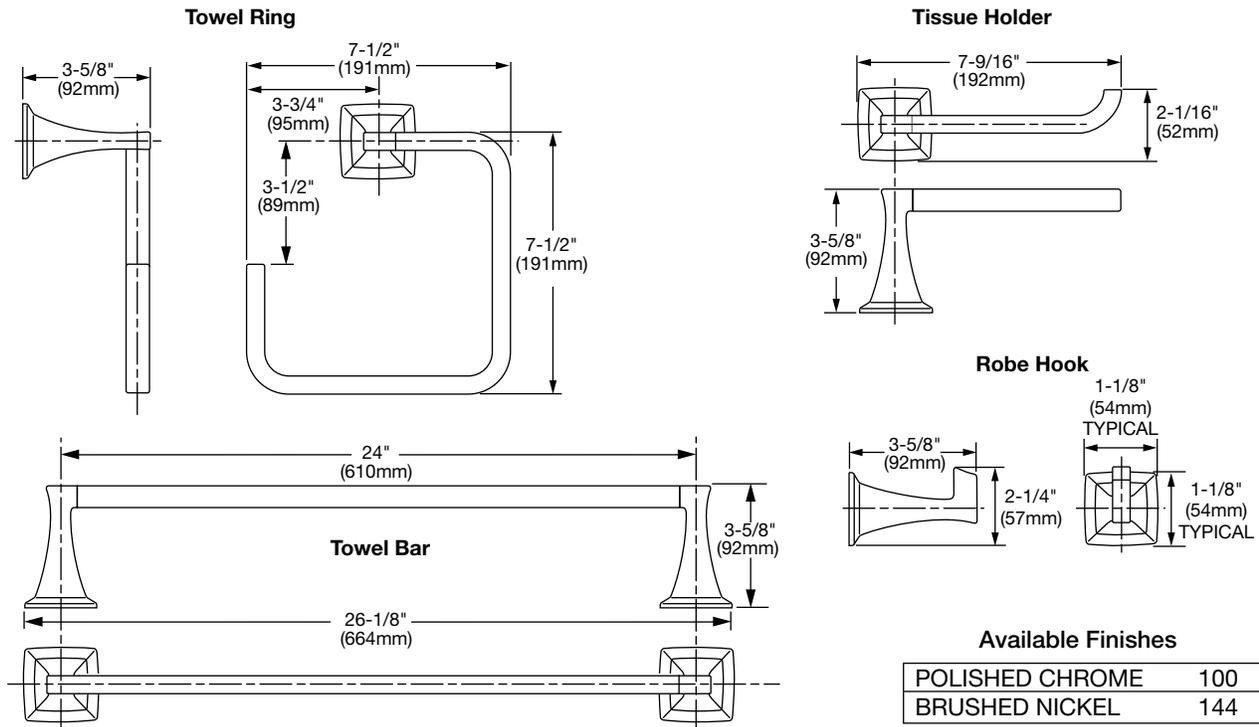

#### Available Finishes

|                 |     |
|-----------------|-----|
| POLISHED CHROME | 100 |
| BRUSHED NICKEL  | 144 |

**In the United States:**  
 DXV by American Standard  
 One Centennial Avenue  
 Piscataway, New Jersey 08855  
 Attention: Director of Customer Care

For residents of the United States, warranty information may also be obtained by calling the following toll free number: (800) 227-2734  
[www.DXV.com](http://www.DXV.com)

**In Canada:**  
 DXV by American Standard  
 5900 Avebury Road  
 Mississauga, Ontario  
 L5R 3M3  
 Canada

Toll Free: 1-800-387-0369  
 Local: 905-306-1093  
 Fax: 1-800-395-1498  
[www.DXV.ca](http://www.DXV.ca)

**In Mexico:**  
 DXV by American Standard  
 Via Morelos 330  
 Col. Santa Clara Coatitla  
 Ecatepec, Estado de México 55540

Toll Free: 01-800-8391200  
[www.DXV.mx](http://www.DXV.mx)


SAVE FOR FUTURE USE

## 1 INSTALL WALL BRACKET


- The wall mounted accessories (1) works best if secured to a wall stud or cross brace within the wall, using the SCREWS (2) supplied.
- If the WALL MOUNTED ACCESSORIES (1) are to be installed on a tile or plaster wall the ANCHORS (3) and SCREWS (2) should be used.
- Determine desired height and location (optional) and mark a center line. **IMPORTANT: The \*center line for the MOUNTING PLATE (4) must be level or the wall accessory will not mount level.** Using the MOUNTING PLATE (4) as a template mark the three spots for the ANCHORS (3). If MOUNTING PLATE (4) is secured to a stud or cross brace drill small pilot holes for SCREWS (2).
- **For installations on drywall or tiled walls:** Use ANCHORS (3) and SCREWS (2) for securing MOUNTING PLATE (4) to finished wall. Drill two 1/4" dia. holes a minimum of 1-3/4" deep. Insert the two ANCHORS (3) flush with face of the finished wall.
- Secure MOUNTING PLATE (4) to wall with SCREWS (2).

## 2 INSTALL ACCESSORY

- Install WALL MOUNTED ACCESSORY (1) onto installed MOUNTING PLATE (4). Push WALL MOUNTED ACCESSORY (1) flush against finished wall and tighten SET SCREW (5) with HEX WRENCH (6) supplied with accessory.

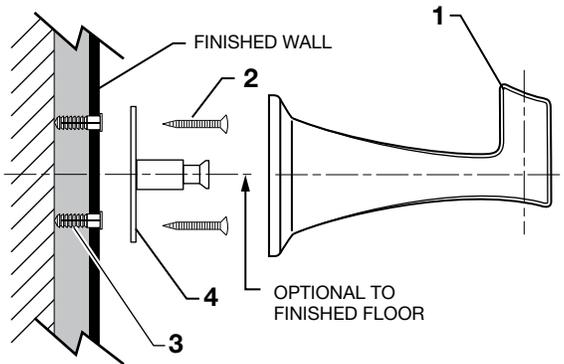


Note: Installation is typical for all wall mounted accessories.

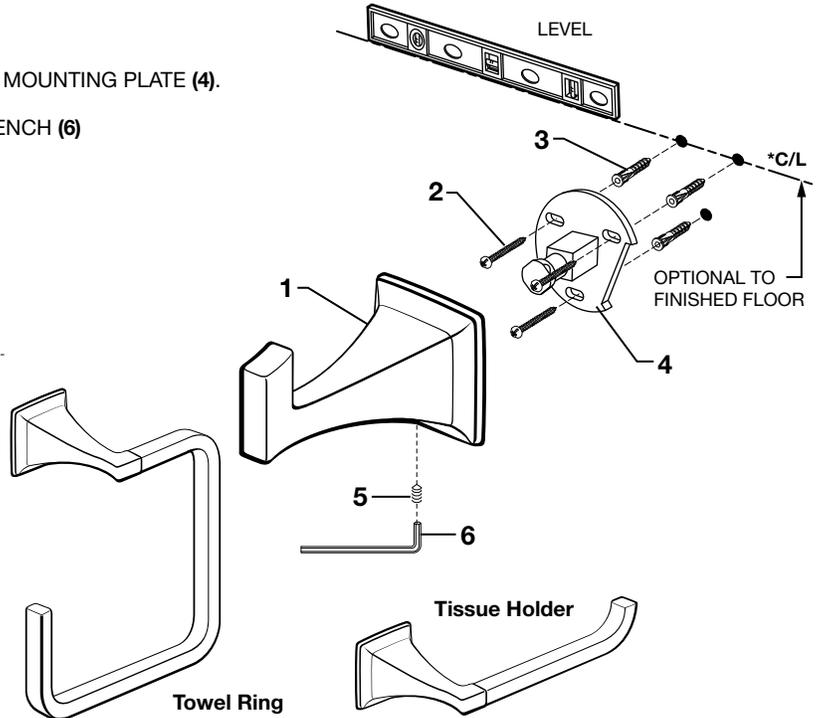

## 3 INSTALL 24" TOWEL BAR

- The TOWEL BAR (4) work best if secured to a wall stud or cross brace within the wall, using the SCREWS (1) supplied.
- If the TOWEL BAR (4) is to be installed on a tile or plaster wall the ANCHORS (2) and SCREWS (1) should be used.
- Determine desired height and location (optional) and mark a center line. **IMPORTANT: The \*center line for the MOUNTING PLATES (4) must be level or the wall accessory will not mount level.** Using the MOUNTING PLATE (3) as a template mark the six spots for the ANCHORS (2). If MOUNTING PLATE (3) is secured to a stud or cross brace drill small pilot holes for SCREWS (2).
- **For installations on drywall or tiled walls:** Use ANCHORS (2) and SCREWS (1) for securing MOUNTING PLATE (3) to finished wall. Drill four 1/4" dia. holes a minimum of 1-3/4" deep. Insert the three ANCHORS (2) flush with face of the finished wall.
- Secure MOUNTING PLATES (3) to wall with SCREWS (1).
- Install TOWEL BAR (4). Push TOWEL BAR (4) flush against finished wall and tighten SET SCREWS (5) with HEX WRENCH (6) supplied with accessory.

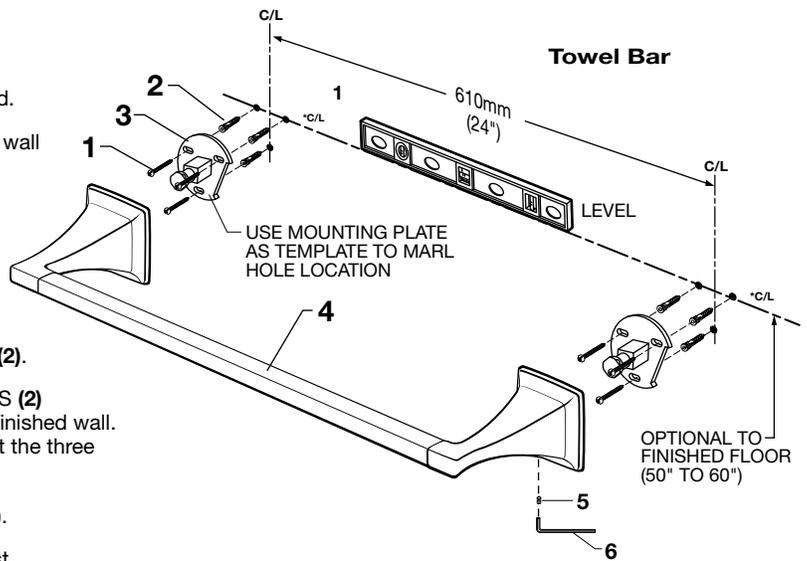

\*FROM CENTER TO CENTER OF WALL BRACKETS  
 \*NOTE: MEASUREMENT IS APPROXIMATE ONLY, PLEASE USE BAR AS TEMPLATE FOR ACTUAL CENTER TO CENTER MEASUREMENTS.