

PRODUCT SERIES NAME

Fairlynn

- 80-02 Towel Bar
- 80-09 Towel Ring
- 80-12 Single Robe Hook
- 80-27 Toilet Tissue Holder

Rydder

- 81-02 Towel Bar
- 81-09 Towel Ring
- 81-12 Single Robe Hook
- 81-27 Toilet Tissue Holder

Bronwen

- 82-02 Towel Bar
- 82-09 Towel Ring
- 82-12 Single Robe Hook
- 82-27 Toilet Tissue Holder

Prezlee/Blayne


- 83-02 Towel Bar
- 83-09 Towel Ring
- 83-12 Single Robe Hook
- 83-27 Toilet Tissue Holder

Haseley



- 88-02 Towel Bar
- 88-09 Towel Ring
- 88-12 Single Robe Hook
- 88-27 Toilet Tissue Holder

**ACCESSORIES INSTALLATION
INSTRUCTION**


RECOMMENDED TOOLS AND MATERIALS

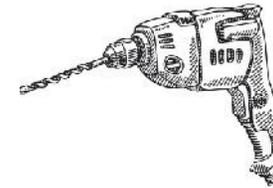

Drill

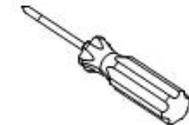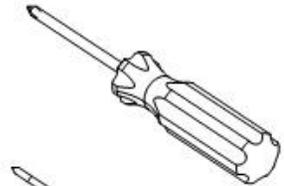

Flathead Screwdriver
Phillips Screwdriver

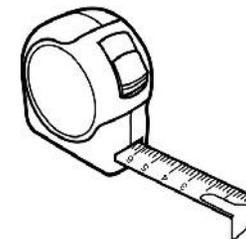


Tape Measure




Hex Wrench

Towel Bar

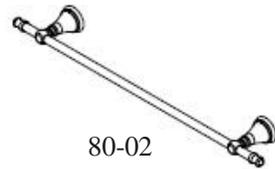


80-02

Towel Ring

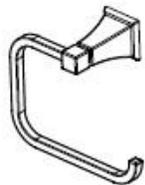


81-09

Single Robe Hook

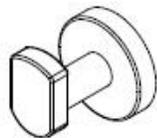


82-12

Toilet Tissue Holder

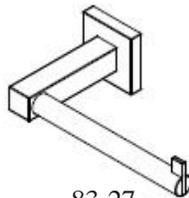


83-27


Towel Bar no	X=inch
8X-02	24

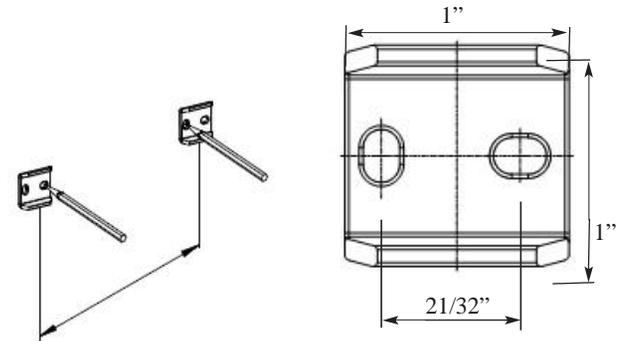


STEP 1 Measure and Mark Holes as above, remember to ensure the holes are level

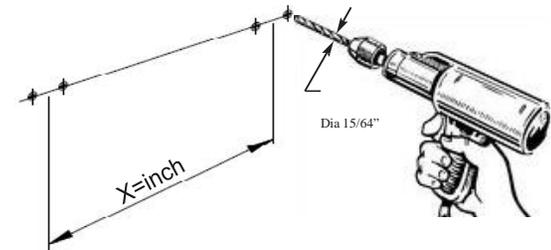

STEP 2

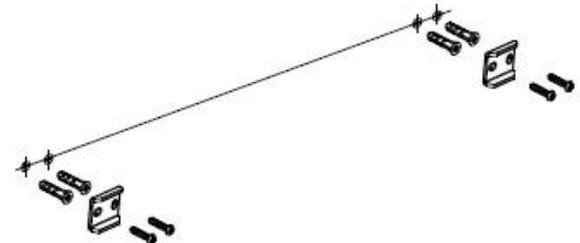

STEP 3

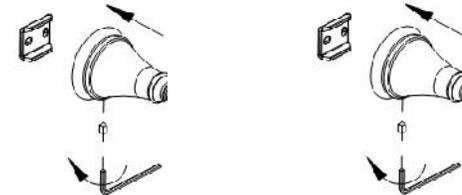

STEP 4

We suggest to use nylon plugs for brick or masonry walls. As per manufacturers instructions. If you are unable to screw into studs, we suggest to use toggle anchors for cavity walls