

### BEFORE YOU BEGIN

#### PRODUCT REQUIREMENTS

This kit is required to install several different handle and spout models to your Coralais Deck-Mount valve.

Follow only the instructions that apply to your handle model.

**NOTE:** Actual handle styles vary from those illustrated.

### SPOUT INSTALLATION

Refer to the instructions packed with your spout trim.

### HANDLE INSTALLATION

#### ALL HANDLES

Remove and discard the existing handles, sidebody extensions, and spline adapters (if present).

Thread the adapter nuts to the valves, and securely hand tighten.

Proceed to the steps that apply to your handle model.

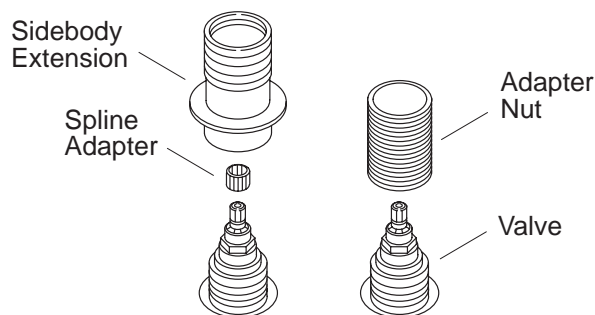


Fig. #1

#### FINIAL HANDLES

Study Fig. #2 to select the correct hardware for this installation.

Press the spline adapters completely on the valve stems.

Install the stem extensions onto the spline adapters.

Install the handles according to the instructions packed with the handles.

Discard the remaining hardware from this kit.

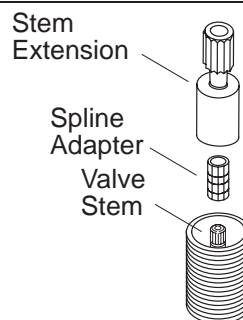


Fig. #2

#### ALTERNA, TRITON, FAIRFAX, AND TABORET (SQUARE AND SWIRL) HANDLES

Study Fig. #3 to select the correct hardware for this installation.

Press the spline adapters completely on the valve stems.

Install the stem extensions onto the spline adapters, and secure in place with the appropriate screws.

**NOTE:** Actual handle style varies from that shown.

Install the handles according to the instructions packed with the handles.

Discard the remaining hardware from this kit.

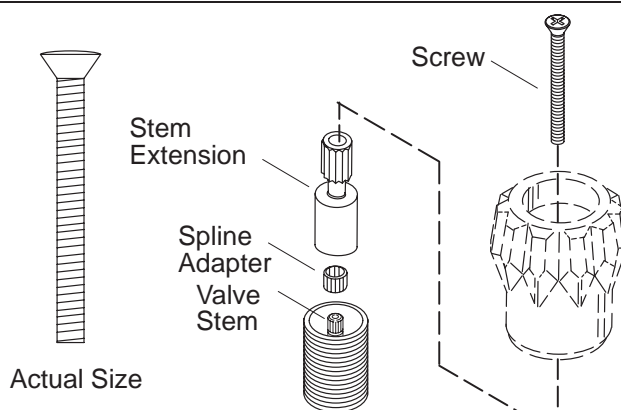


Fig. #3

## REVIVAL HANDLES

Study Fig. #4 to select the correct hardware for this installation.

Press the spline adapters completely on the valve stems.

Install the stem extensions onto the spline adapters.

Install the handles according to the instructions packed with the handles.

Discard the remaining hardware from this kit.

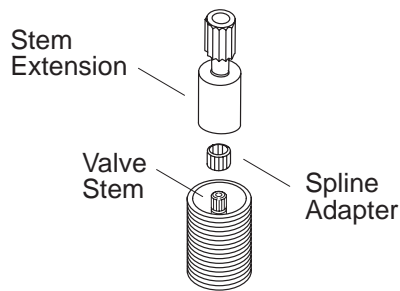


Fig. #4

## TABORET LEVER HANDLES

Study Fig. #5 to select the correct hardware for this installation.

Press the spline adapters completely on the valve stems.

Install the stem extensions onto the spline adapters, and secure in place with the appropriate screws and lock washers.

**NOTE:** Actual handle style varies from that shown.

Install the handles according to the instructions packed with the handles.

Discard the remaining hardware from this kit.

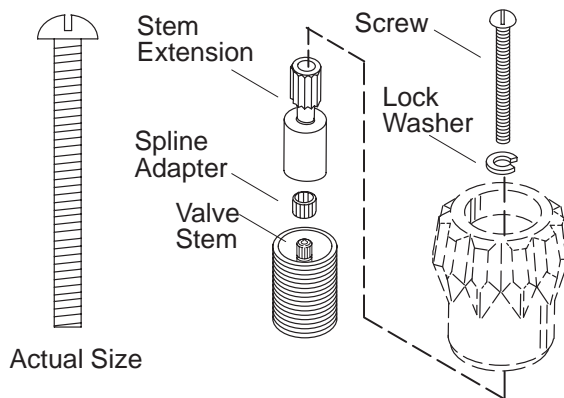


Fig. #5

## FINESSE HANDLES

Study Fig. #6 to select the correct hardware for this installation.

Press the spline adapters completely on the valve stems.

Install the stem extensions onto the spline adapters, and secure in place with the appropriate screws.

**NOTE:** Actual handle style varies from that shown.

Install the handles according to the instructions packed with the handles.

Discard the remaining hardware from this kit.

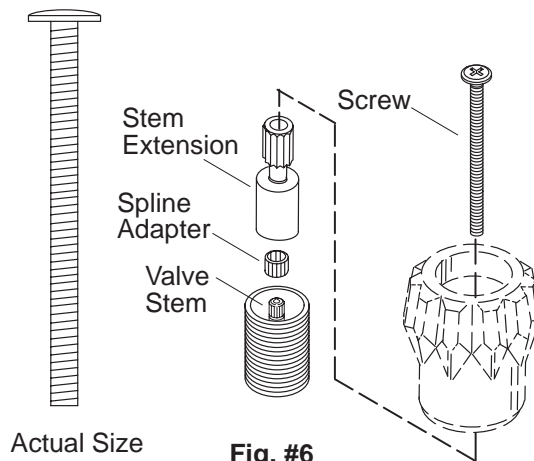


Fig. #6

## FLAIR HANDLES

Study Fig. #6 to select the correct hardware for this installation.

Press the spline adapters completely on the valve stems.

Install the stem extensions onto the spline adapters, and secure in place with the appropriate screws.

**NOTE:** Actual handle style varies from that shown.

Install the handles according to the instructions packed with the handles.

Discard the remaining hardware from this kit.

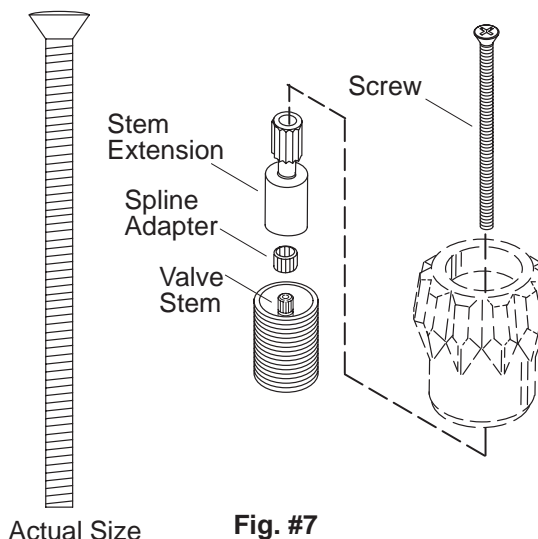


Fig. #7