
TECHNICAL DATA

Jamestown[®]-Set Screw

TOILET PAPER HOLDER

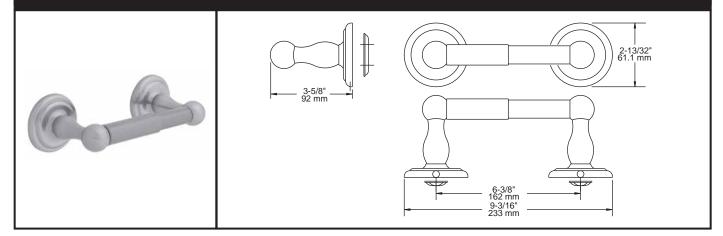

- MATERIALS: Posts Zinc Die Cast Roller - Plated ABS Wall Plates - Steel, Zinc Plated
- INSTALLATION: Mount wall plate bracket(s) per installation instructions with supplied fasteners. Slip product over wall plate(s) and tighten set screws until secure.

OPTIONAL FASTENER INFORMATION:

Wood blocking is preferable behind all wall surfaces. If wood blocking is not available, the following fasteners are suggested: Tile/Masonry -Plastic or Lead Anchors, Plaster/Drywall - Toggle Bolts.