
INSTALLATION DIMENSIONS


Critical Dimensions:	
Minimum Hole Size	1 - 1 1/2 Dia. Thru Hole 3 Places
Valve Centerline to Back Splash	2 5/16 Min.

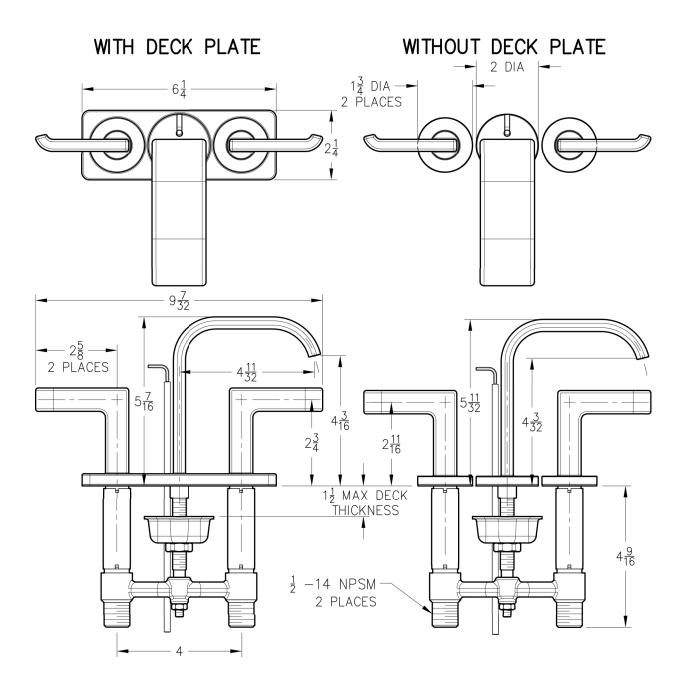

Mini-Widespread Faucet







Connect inlet supply lines by assembling brass supply nut (A), friction ring (B) and cone washer (C) onto 3/8" O.D. straight copper tube. Eead or flare. Wrench tighten.

Dimensions are in Inches

1-800-PFAUCET www.pricepfister.com 19701 DaVinci, Lake Forest, CA 92610 08/4/10

Price Pfister.