30" Double Wall Oven

800 Series - Stainless Steel HBL8651UC





HBL8651UC Stainless Steel

Also available in:

Black Stainless HBL8642UC Steel

The Bosch wall oven installs flush and features a QuietClose® door.

Features & Benefits

Dampened hinges softly and quietly guide the QuietClose® door shut.

A full-extension telescopic rack offers safe access to the oven cavity.

Touch control with SteelTouch™ buttons makes operating the oven easier.

The wall oven is designed to be installed flush with cabinetry.

Bosch wall ovens are compatible with most competitors' cutouts.

General Properties	
Cooking modes – upper cavity	Bake, Variable Broil (hi & low), Roast, Warm, Sabbath, Proof Dough, Convection Bake, Convection Roast, Pizza, Multi Rack Genuine European Convection, Convection Conversion, Temperature Probe, Fast Preheat
Cooking modes – lower cavity	Bake, Variable Broil (hi & low), Roast, Warm, Sabbath
Cleaning type – upper & lower cavity	Self Clean
Telescopic rack	1
Illumination type – upper & lower cavity	Incandescent
Interior lights – upper cavity	2
Interior lights – lower cavity	1







Oven Performance		
Bake / Broil element wattages – upper & lower cavity	2,400 / 3,800 W	
Convection element wattages – upper cavity	2,000 W	
Technical Details		
Watts (W)	8,495 W	
Volts (V), Frequency (Hz), Circuit breaker (A)	240 / 208 V, 60 Hz, 40 A	
Power cord length (in); Plug type	50"; Fixed connection, no plug	
Energy source	Electric	
Dimensions & Weight		
Overall appliance dimensions (HxWxD)(in)	52 1/16" x 29 3/4" x 24 1/2"	
Required cutout size (HxWxD) (in)	49 3/4" - 51 1/2" x 28 1/2" x 23 1/2"	
Oven cavity size (cu. ft.)	4.6	
Overall oven interior dimensions (HxWxD) (in)	17 13/16" x 24 1/8" x 18"	
Usable oven interior dimensions (HxWxD) (in)	12 5/16" x 23 1/4" x 15 1/4"	
Net weight (lbs)	261 lbs	
Accessories-Included		
Included	Upper Oven: 1 Telescopic and 2 Standard Oven Racks, Temperature Probe	

Accessories-Optional



HEZTR301 30" Telescopic Rack

Lower Oven: 2

Standard Oven

Racks

Accessories: To purchase Bosch accessories, cleaners & parts please visit www.bosch-home.com/us/store or call 1-800-944-2904 (Mon to Fri 5 am to 6 pm PST, Sat 6 am to 3 pm PST).

Notes: All height, width and depth dimensions are shown in inches. BSH reserves the absolute and unrestricted right to change product materials and specifications, at any time, without notice. Consult the product's installation instructions for final dimensional data and other details prior to making cutout.


Warranties: Please see Use & Care manual or Bosch website for statement of limited warranty.


30" Double Wall Oven

800 Series - Stainless Steel HBL8651UC



Installation Details

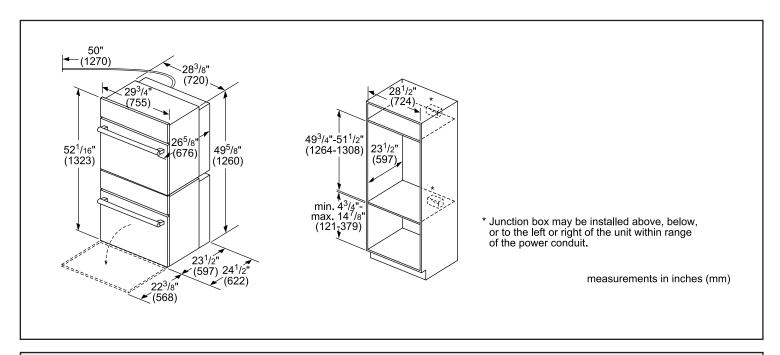

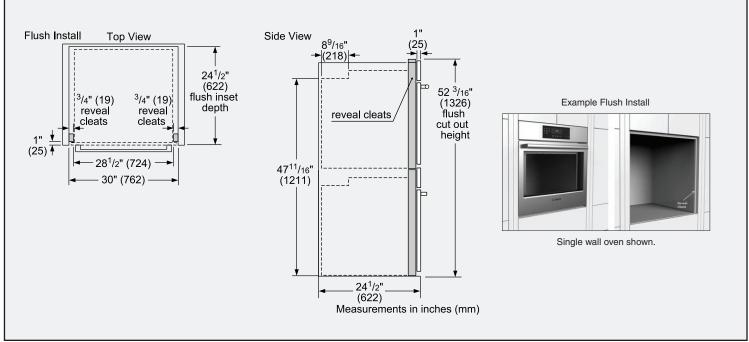

Accessories: To purchase Bosch accessories, cleaners & parts please visit www.bosch-home.com/us/store or call 1-800-944-2904 (Mon to Fri 5 am to 6 pm PST, Sat 6 am to 3 pm PST).

Notes: All height, width and depth dimensions are shown in inches. BSH reserves the absolute and unrestricted right to change product materials and specifications, at any time, without notice. Consult the product's installation instructions for final dimensional data and other details prior to making cutout.


Warranties: Please see Use & Care manual or Bosch website for statement of limited warranty.

30" Double Wall Oven

800 Series - Stainless Steel HBL8651UC



Installation Details

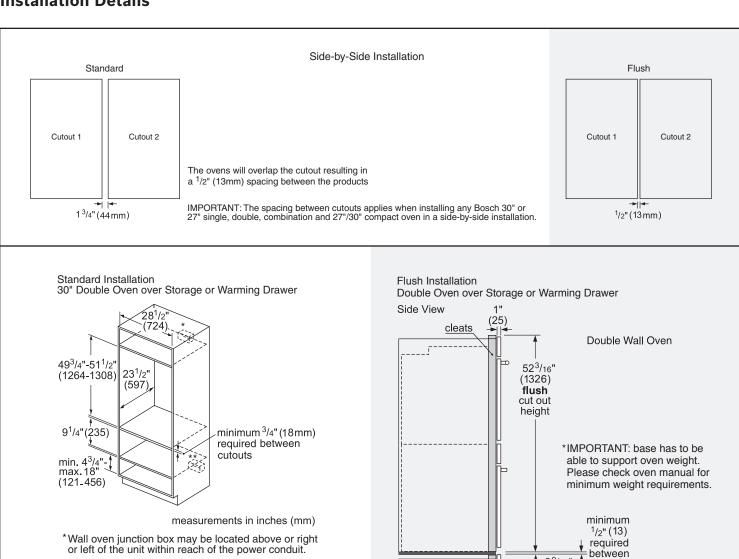

Accessories: To purchase Bosch accessories, cleaners & parts please visit www.bosch-home.com/us/store or call 1-800-944-2904 (Mon to Fri 5 am to 6 pm PST, Sat 6 am to 3 pm PST).

Notes: All height, width and depth dimensions are shown in inches. BSH reserves the absolute and unrestricted right to change product materials and specifications, at any time, without notice. Consult the product's installation instructions for final dimensional data and other details prior to making cutout.

cleats

24¹/₂" (622)

(243)

flush

cut out height cutouts*

Warming Drawer

measurements in inches (mm)

Warranties: Please see Use & Care manual or Bosch website for statement of limited warranty.

**Electrical hook up may be located below

(depending on space) or next to the drawer within the reach of the power cord.