


SYMPTOMS	CORRECTIVE ACTION	PARTIAL SERVICE PARTS
1. Poor flush.	A. Adjust the tank water level to match the waterline. B. Fully open the water supply shut-off valve. C. Clear obstructions from the trapway, jet, or bowl rim holes. D. Clear obstructions from the waste line.	 <p>1057940 Cap 78132 Nut 1033209 Hose 1042212** Trip lever 83143 Seal 51261 Clip Waterline 1083167 Fill Valve 1042313 Flapper 1016219 Seal 85307 Washer 1057941 Locknut 1042499 Flush Valve 42398 Washer 1014580 Nut 42397 Nut 1014065 Attachment Plate 1018165-A Gasket 1024390 Accessory Pack (2 ea.)</p> <p>**Finish/color code required.</p>
2. No flush.	A. Reconnect the flapper chain to the trip lever or flush valve. B. Adjust the flapper chain assembly to remove excess slack.	
3. The fill valve turns on/off by itself without the toilet being flushed, or it runs allowing water to enter the tank.	A. Adjust the flapper chain for proper slack so the flapper closes. B. Clean or replace the flapper if it is worn, dirty, or misaligned with the opening. C. Clean the area around the opening to allow the flapper to seal. D. Remove the tank and tighten the flush valve nut if flush valve gasket is leaking. Do not overtighten. If leakage continues, replace the gasket. E. Adjust the tank water level if it is too high. F. Replace the fill valve if the valve float sinks.	
4. Tank takes excessive time to fill.	A. Fully open the water supply shut-off valve. B. Clean the valve inlet, valve head, or supply line. Flush the lines.	
5. There is excessive noise when the tank is filling.	A. Partially close the water supply shut-off valve if the water pressure to the toilet is too high. Check the toilet performance following any such adjustment. B. Remove dirt or obstructions from the valve head. Flush the lines.	
IMPORTANT: Use only genuine Kohler parts as shown to avoid property damage.		
If unable to correct the problem, contact Customer Service: 1-800-4-KOHLER (USA), 1-800-964-5590 (Canada), or www.kohler.com.		

Color/Finish



Vibrant French Gold
AF

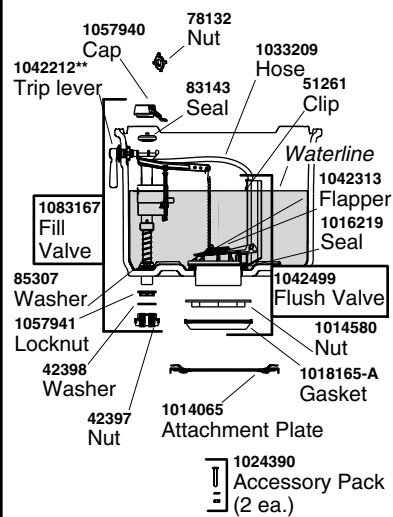

Polished Gold
AU



Polished Nickel
SN



Brushed Nickel
BN



Polished Brass
PB



Satin/Polished Chrome
SC



Polished Chrome
CP



Brushed Chrome
G



Burnished Brass
BF



Rough Plate
RP



Satin Black
TB



White
0



Skylight
6



Black Black™
7



Jersey Cream™
12



Teal
17



Mexican Sand™
33



Wild Rose™
45



Almond
47



Navy
52



Raspberry Puree™
53



Innocent Blush™
55



Tender™ Grey
56



Thunder™ Grey
58



Lemon Twist™
70



Seafoam Green™
71



Merlot
85



Desert Bloom™
89



Ice™ Grey
95



Biscuit
96



Timberline™
97



Chamois™
98



Bright Chrome
BC



Matte Black
BL



Vibrant Stainless
B4/B6



**Polished Chrome/
Polished Brass**
CB



**White/
Polished Brass**
PW



Vibrant Brushed Bronze
BV

KOHLER Stone Insets



Grey Granite
GG



Chestnut Marble
HM



Black Marble
MR



White Marble
WM