




Frigidaire

Factory Parts Catalog

Product No.	CFES355EB4	CFES355ES4
	37651335E5064	37651335E5014
Series	30" slide-in	30" slide-in
Color	black	white
Market	Canada	Canada
Wiring Diagram	318271906	318271906
Owner's Guide	318203822	318203822
Installation Instructions	318201611	318201611
Timer Guide	318200183	318200183

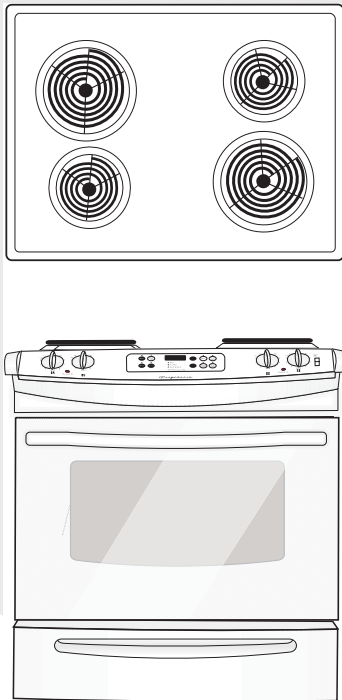

Electrolux Major Appliances
North & Latin America
5855 TERRY FOX WAY
MISSISSAUGA, ONTARIO, CANADA L5V
3E4


Publication No.
5995536728
09/03/30
(EN/SERVICE/ECL)
377

30-INCH SLIDE-IN ELECTRIC RANGE

Model No.
CFES355E

Copyright © 2009 Electrolux Home Products, Inc.
All rights reserved.

BACKGUARD

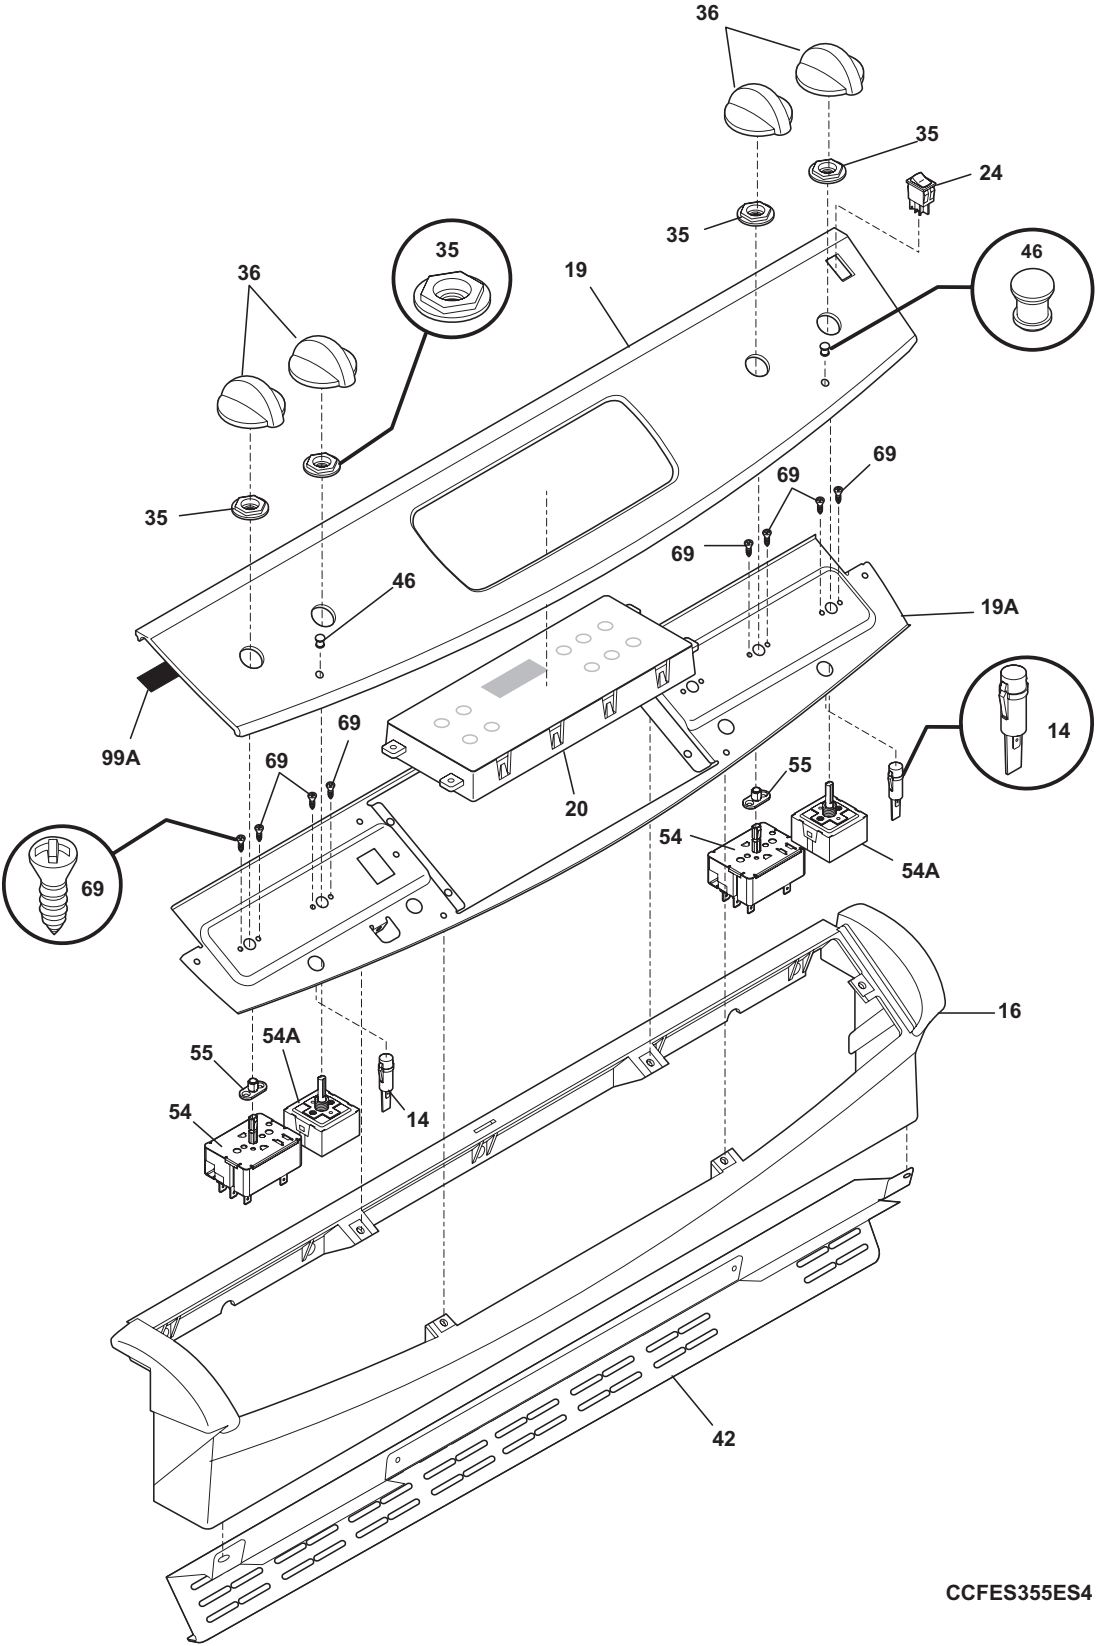


CCFES355ES4

BACKGUARD

Model Index: A CFES355E (CFES355ES4)
B CFES355E (CFES355EB4)

POS. NO	PART NO.		DESCRIPTION
14 #	318293901	A B	Light, indicator, 125v, (2)
16	318299100	A -	Console, assy., white
16	318299102	- B	Console, assy., black
16*	5304447071	A B	Clip, console, (2)
19	318235187	A -	Panel, control, white
19	318235188	- B	Panel, control, black
19A	318224401	A B	Panel, control mtg.
20 #	318185455	A -	Controller, electronic, white, ES300
20 #	318185457	- B	Controller, electronic, black, ES300
20*	318214512	A -	Overlay, control, white
20*	318214514	- B	Overlay, control, black
20*	5304453707	A B	Screw, 8-18 X 1/2
24 #	316005607	A -	Switch, rocker, white
24 #	316005602	- B	Switch, rocker, black
35	318183100	A B	Support, glass, black
36	316223028	A -	Knob, control, white
36	316223027	- B	Knob, control, black
42	318298011	A B	Trim, vent, black, upper
46	318228301	A B	Lens, indicator light
54 #	318293830	A B	Switch, infinite, (2)
54A#	318120521	A B	Switch, surface unit
55	318402901	A B	Bushing, switch
69	5303323134	A B	Screw, 8-32 x 3/16, (4)
99A	318223900	A B	Gasket, dark grey
* #	318228866	A B	Harness, wiring, main, backguard
* #	318224812	A B	Harness, wiring, timer
*	08016432	A B	Screw, truss head, 8-18 x 0.375
*	5303300265	A B	Screw, 8-18 X 1/2, (4)
*	5303311333	A B	Screw, 8-32 x 3/8

BODY

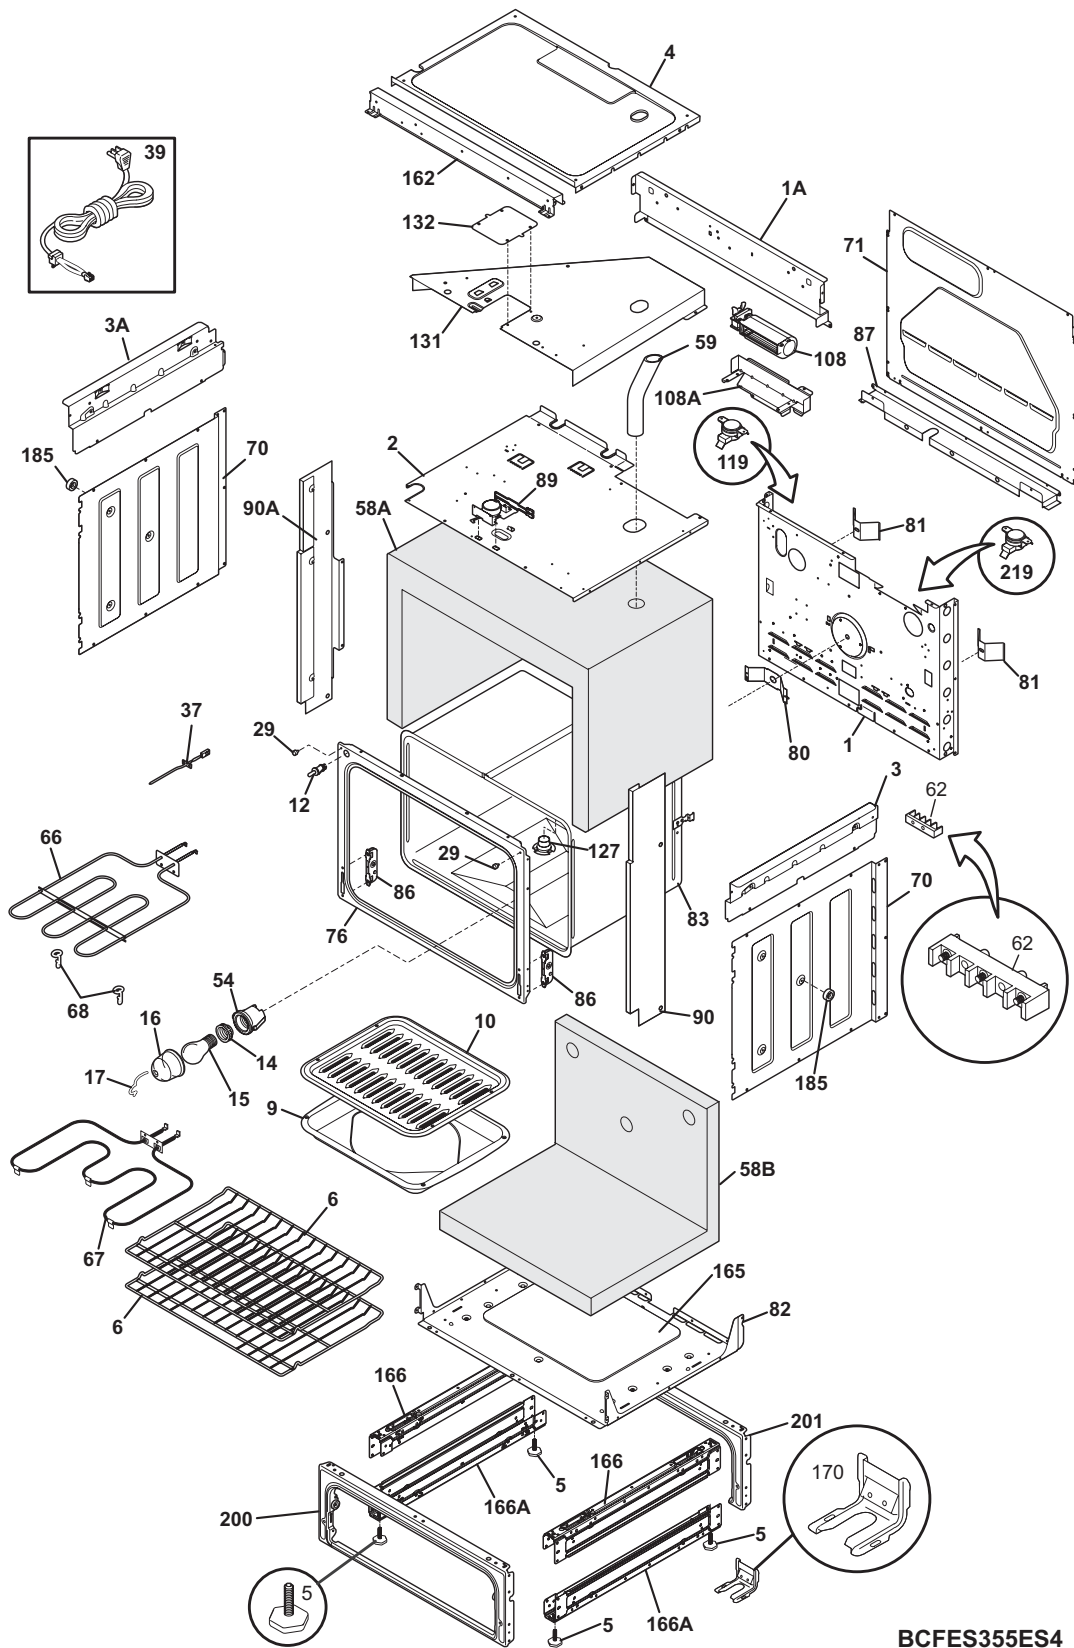


BCFES355ES4

BODY

Model Index: **A** CFES355E (CFES355ES4)
B CFES355E (CFES355EB4)

POS. NO	PART NO.		DESCRIPTION
1	318259220	A B	Back, main
1A	318225110	A B	Panel, main back, upper
2	318258902	A B	Shield, insulation, upper
3	318225210	A B	Panel, bodyside, upper RH
3A	318225211	A B	Panel, bodyside, upper LH
4	318073906	A B	Panel, subtop
5	318175508	A B	Screw, leveling
6	318345207	A B	Rack, oven
9	316081900	A B	Pan, broilerOPTIONAL ACCESSORY
10	316082000	A B	Insert, broiler panOPTIONAL ACCESSORY
12 #	318394801	A B	Switch, light, door
14	318224000	A B	Receptacle, oven light
15	5303013071	A B	Bulb/Lamp, light
16	318406100	A B	Lens, oven light, glass
17	5304400195	A B	Retainer, light cover
29	316517600	A B	Spacer, oven door
37 #	316217002	A B	Probe, oven temp
39 #	318113111	A B	Cord, electric
54	318222400	A B	Housing, oven light
58A	318386100	A B	Insulation, oven wrapper
58B	318133791	A B	Insulation, oven back, back/bottom
59	318072572	A B	Tube, vent, oven
62	5303935061	A B	Terminal Block Kit
62*	5303323139	A B	Screw, 10-24 x 0.906
66 #	318255600	A B	Element, broil, 2750W
67 #	318255401	A B	Element, bake, 3400W
68	5304403015	A B	Support, hanger, (4), broil element
70	318259100	A B	Shield, insulation, sides, (2)
71	318260007	A B	Panel, rear box
76	318056292	A B	Front, oven
80	5303320846	A B	Plate, oven mtg
81	318192400	A B	Spring, oven
*	5303323129	A B	Screw, 8 X 0.750
82	318258707	A B	Shield, insulation, lower
83	318261403	A B	Liner, oven assy
86	318561100	A B	Receptacle, hinge, (2)
87	318260605	A B	Bracket, cable mtg.
89 #	318261205	A B	Motor, latch assy
90	318296902	A -	Panel, filler, white, RH
90	318296904	- B	Panel, filler, black, RH
90A	318296903	A -	Panel, filler, white, LH
90A	318296905	- B	Panel, filler, black, LH
108#	318073028	A B	Motor, blower
*	08016432	A B	Screw, truss head, 8-18 x 0.375
108A	318251300	A B	Bracket, fan support
119#	318005202	A B	Switch, thermal cutout
127	318317100	A B	Adapter Assembly, vent tube, w/converter
131	318272901	A B	Box, vent
132	318003000	A B	Plate, shield


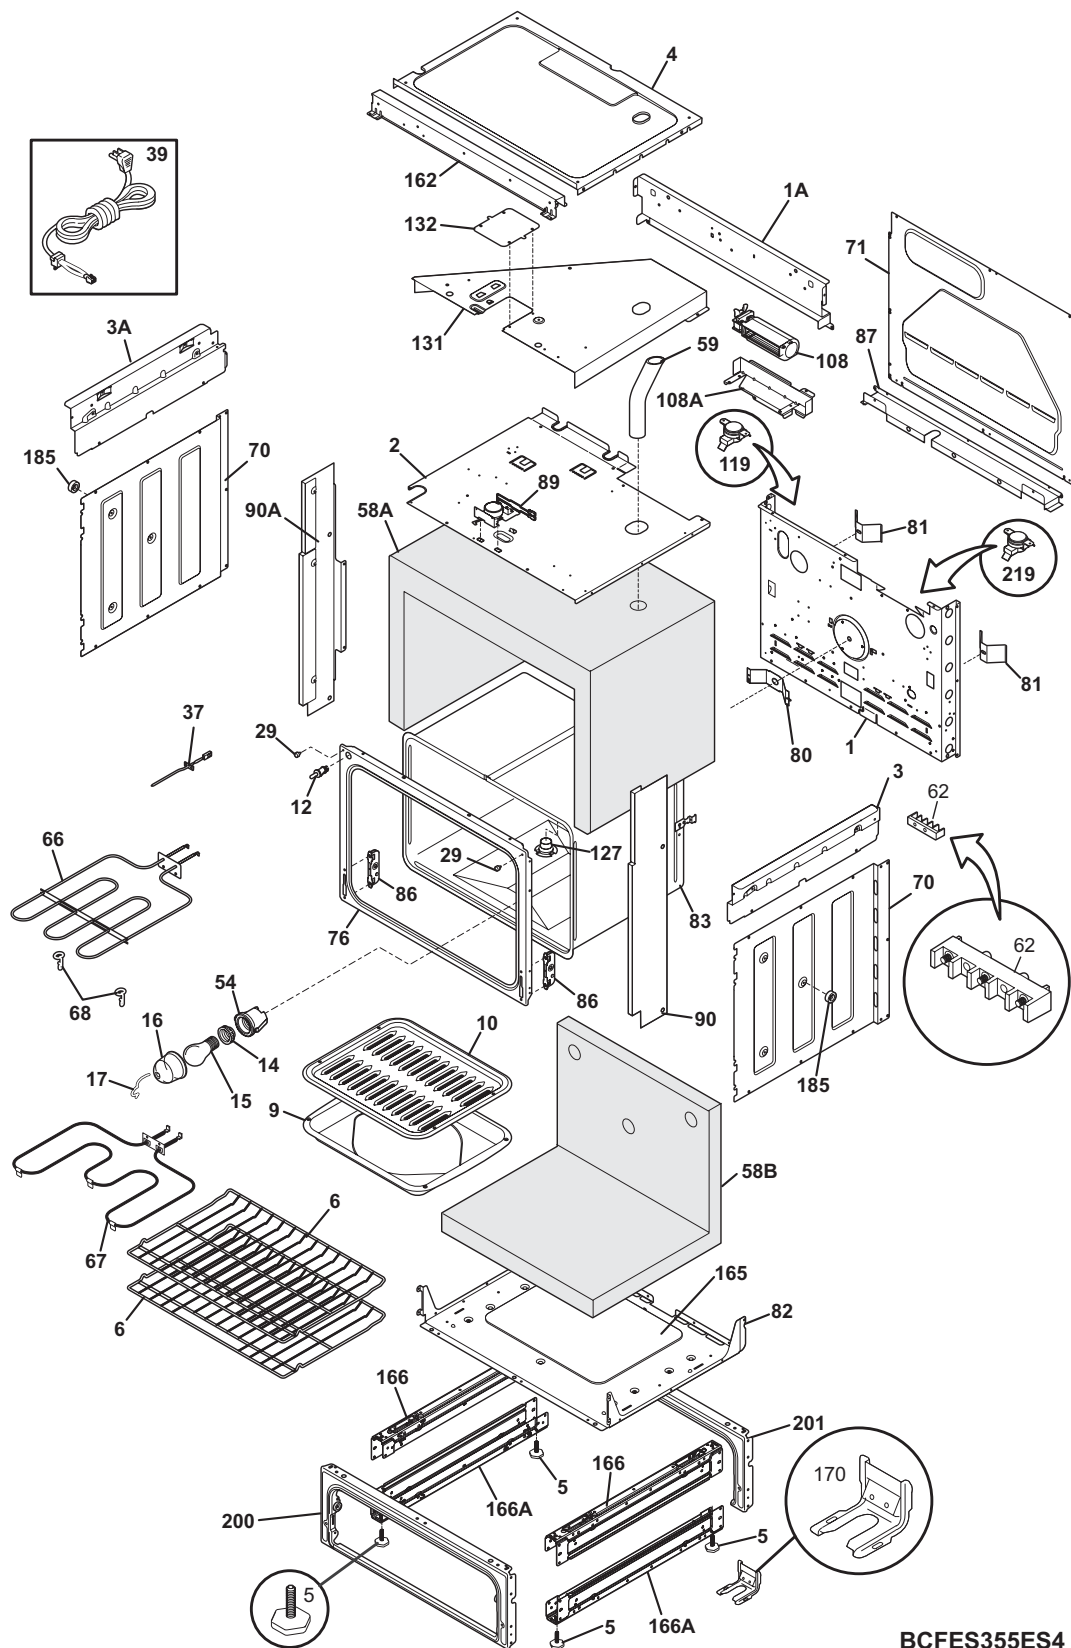
BODY**BCFES355ES4**

BODY

Model Index: **A** CFES355E (CFES355ES4)
 B CFES355E (CFES355EB4)

POS. NO	PART NO.		DESCRIPTION
162	318225810	A B	Box, extension
165	318322600	A B	Plate, shield
166	318298410	A B	Bracket, base support, (2)
166A	318298403	A B	Bracket, base support, lower, (2)
170	318335500	A B	Anti-tip & accessories
185	318165800	A B	Spacer
200	318335600	A B	Frame & Wheel Assembly, black
201	318298210	A B	Frame, drawer
219#	318003606	A B	Thermostat, safety, .945" mtg., 140/170
* #	318224925	A B	Harness, wiring, main
*	3051050	A B	Screw, shoulder
*	3201861	A B	Screw, 6 x 0.375, (4)
*	5303211311	A B	Screw, 8 x 0.500
*	5303307980	A B	Screw, 8-32 x 0.437, (8)
*	5304415832	A B	Screw, 8-18 x 0.406
*	5304436875	A B	Screw, 8-18 X 1/2, black

TOP/DRAWER

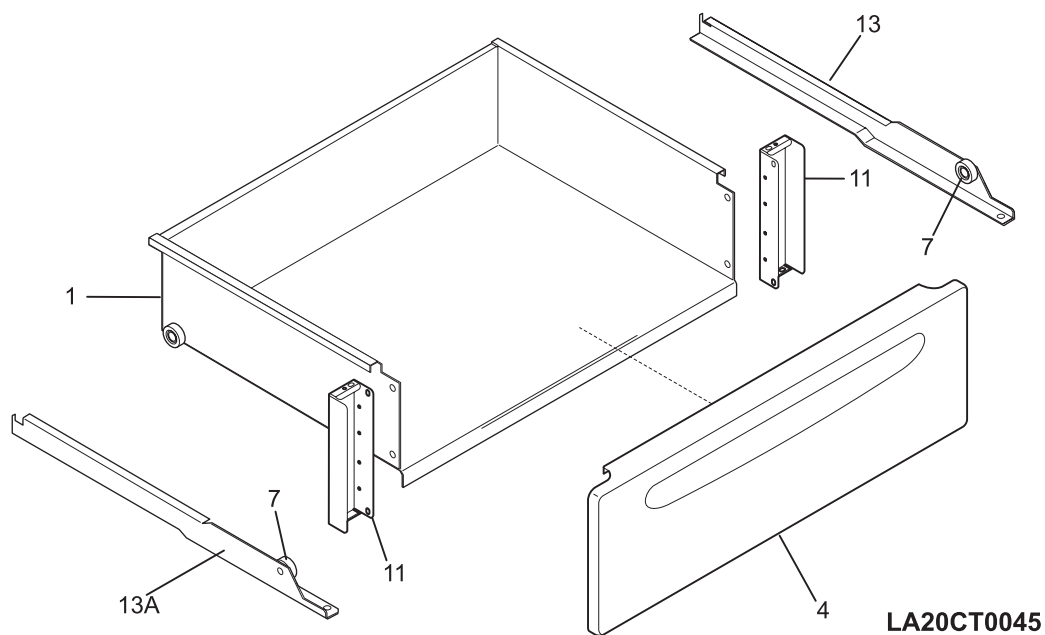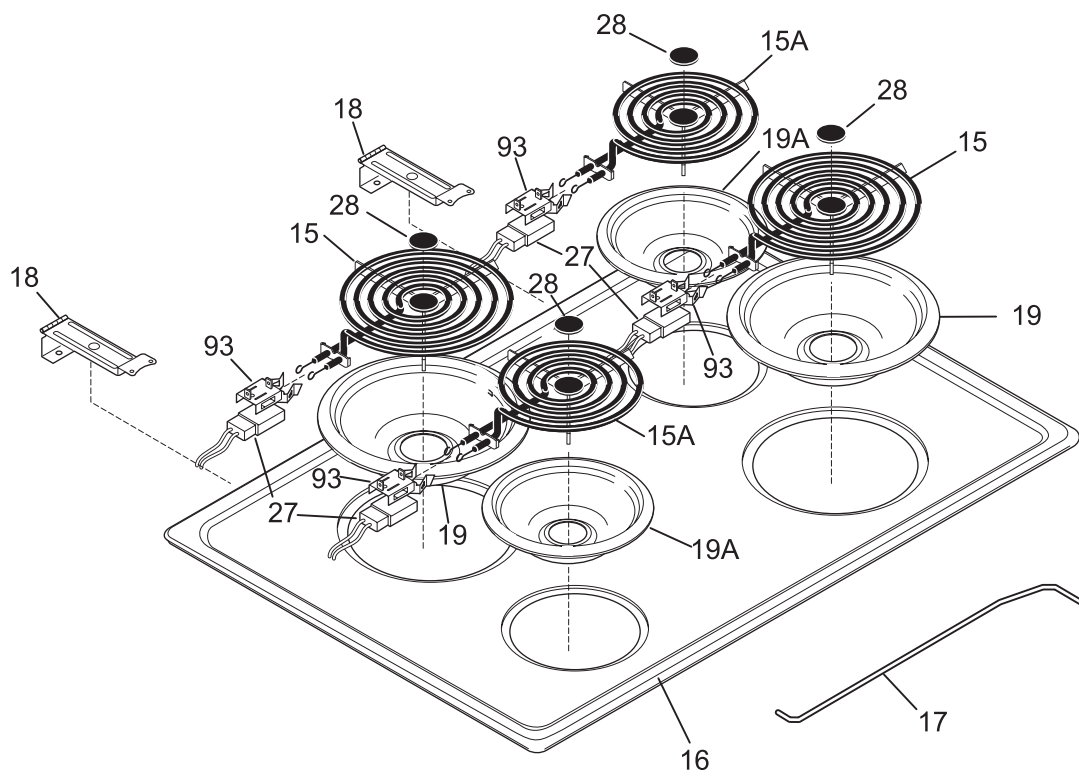


LA20CT0045

TOP/DRAWER

Model Index: **A** CFES355E (CFES355ES4)
B CFES355E (CFES355EB4)

POS. NO	PART NO.		DESCRIPTION
1	318107105	A B	Drawer
4	318298906	A -	Panel, drawer, white, front
4	318298908	- B	Panel, drawer, black, front
7	318332200	A B	Roller, nylon
11	318298601	A B	Bracket, drawer support, (2)
13	318018100	A B	Channel, drawer, RH
13A	318018101	A B	Channel, drawer, LH
15 #	316442301	A B	Element, surface, 8"/large, 2100W
15A#	316439801	A B	Element-surface, small/6 inch, 1500w
16	318225602	A -	Main Top, white
16	318225601	- B	Main Top, black
17	3051554	A B	Rod, support, main top panel
18	318227710	A B	Hinge, maintop, (2)
19	318067018	A B	Pan, surface element, large, chrome
19A	318067017	A B	Pan, surface element, small, chrome
27 #	5303912666	A B	Terminal Block Kit, surface element
28	5303017715	A B	Medallion, 1 1/2"dia, black, surface element
93	318366410	A B	Support, terminal block, (4)
* #	318301001	A B	Wiring Harness, surface units
*	5303211311	A B	Screw, 8 x 0.500
*	5303300265	A B	Screw, 8-18 X 1/2, (4)
*	5303311333	A B	Screw, 8-32 x 3/8

DOOR

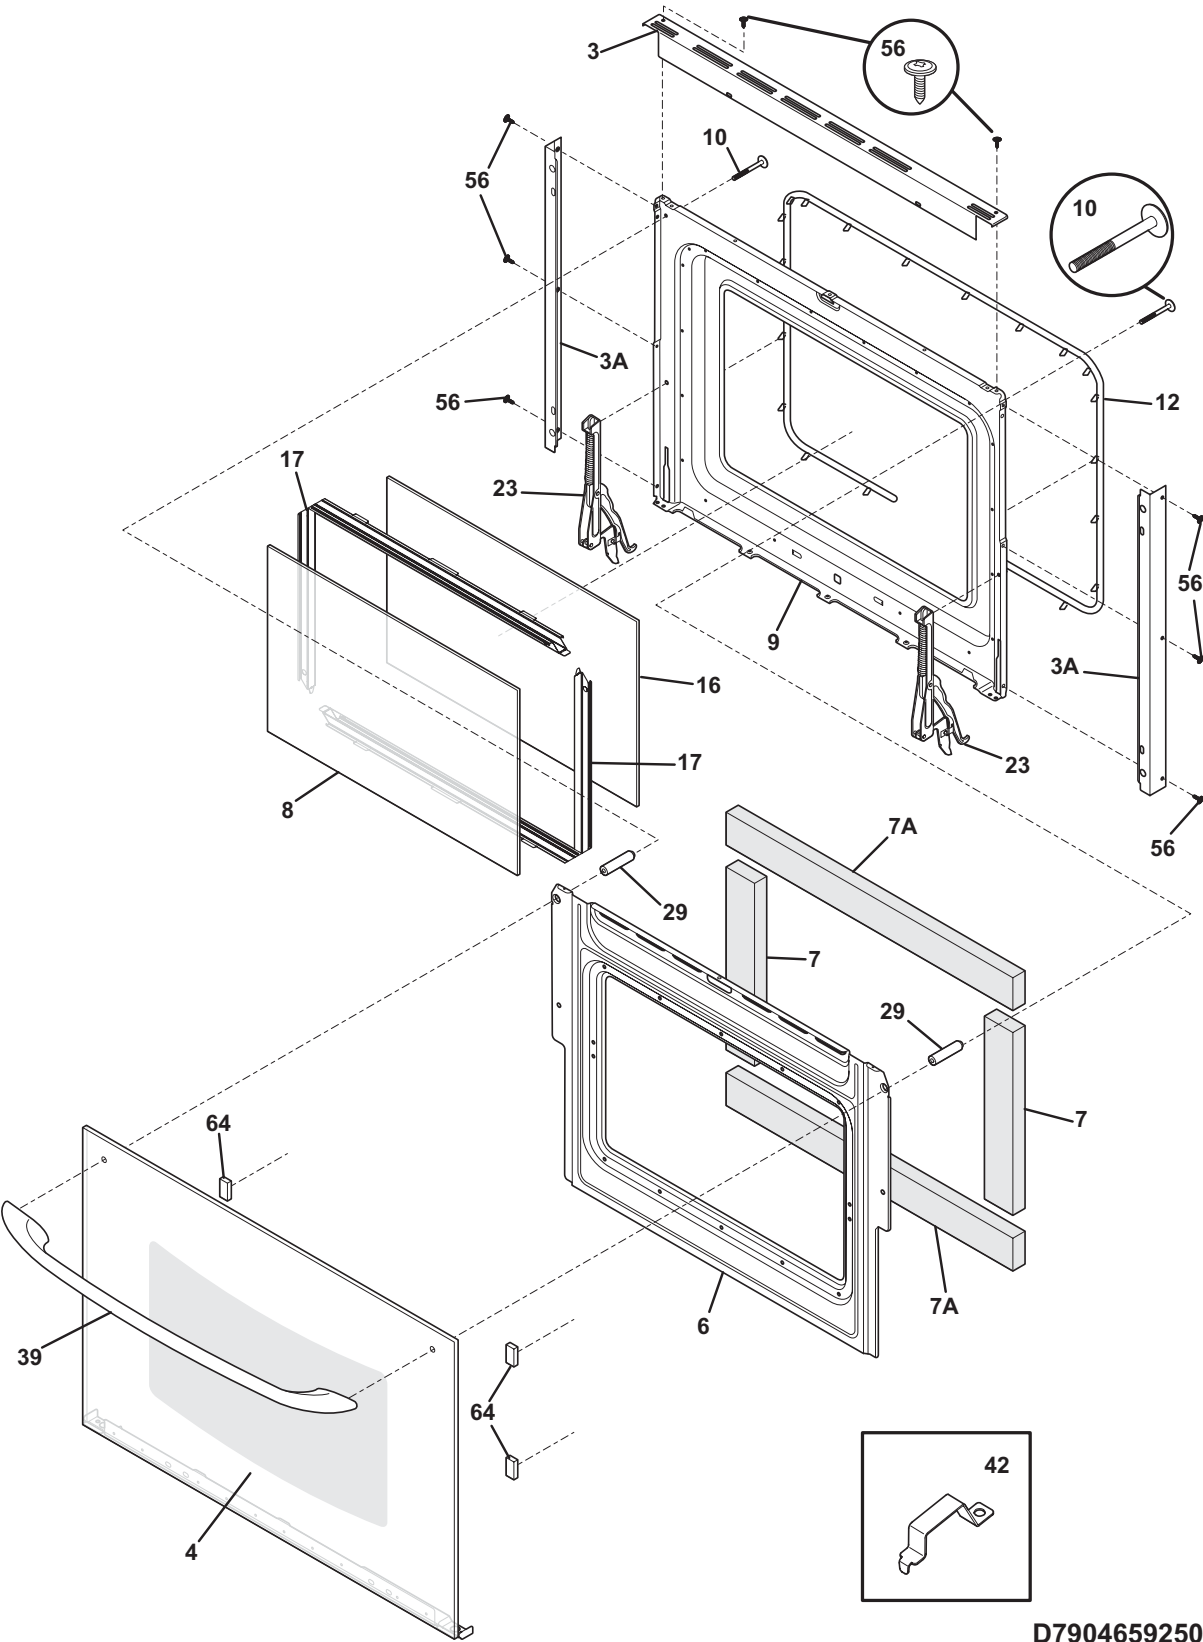

D79046592501

DOOR

Model Index: **A** CFES355E (CFES355ES4)
B CFES355E (CFES355EB4)

POS. NO	PART NO.		DESCRIPTION
3	318260201	A B	Trim, oven door, black, upper
3A	318260401	A B	Trim, oven door, side, (2)
4	318261301	A -	Glass Assy., oven door, white, outer, w/trim
4	318261300	- B	Glass Assy., oven door, black, outer, w/trim
6	318260522	A B	Baffle, door
7	318372000	A B	Insulation, door, (2)
7A	318372002	A B	Insulation, door, (2)
8	316117500	A B	Glass, oven door, heat barrier
9	318360111	A B	Liner, oven door
10	5304453223	A B	Screw, handle mtg, 10-14 x 1.82, (2)
12	318053130	A B	Seal, oven door, lower
16	318212210	A B	Glass, oven door, heat barrier, lower door
17	318264710	A B	Spacer, glass, lower, (2)
23	316456307	A B	Hinge, oven door, purple titan, (2)
29	318014405	A B	Spacer, door
39	316270201	A -	Handle, door, white
39	316270200	- B	Handle, door, black
42	318382301	A B	Bracket, glass retainer, (4)
56	5304436875	A B	Screw, 8-18 X 1/2, black
64	318165800	A B	Spacer
*	316221002	A B	Label, anti-tip
*	5304415832	A B	Screw, 8-18 x 0.406

WIRING DIAGRAM

