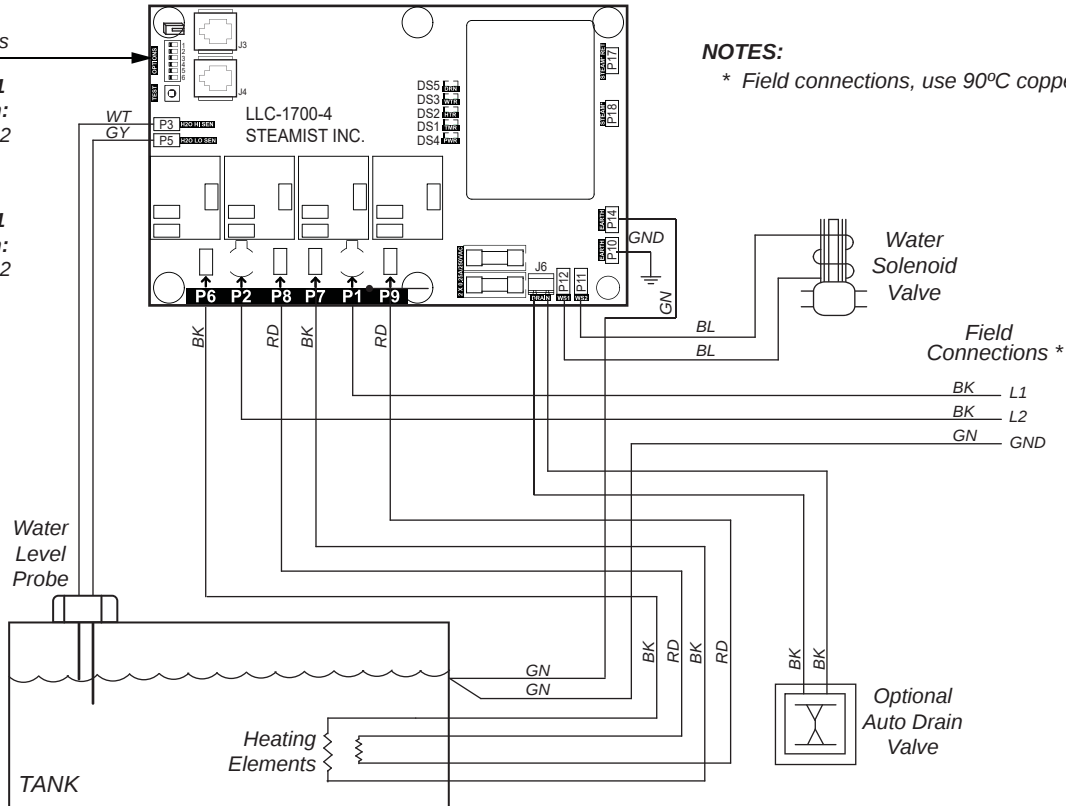


## Wiring Diagram for Models SM-5 through SM-9

Models: SM-5, SM-7, SM-9, &amp; SM-10

Options Switches  
Auto Drain Settings
**9060 / 9061**  
**Auto Drain:**  
 Set Switch 2  
 to the left

**9070 / 9071**  
**Auto Drain:**  
 Set Switch 2  
 to the right


## Specification Chart

| Model No. | Product No. | Max. Cu. Ft. For Area Up To | KW | Volt | Phase | Amps | Breaker Size |
|-----------|-------------|-----------------------------|----|------|-------|------|--------------|
| SM-5      | 5010        | 100                         | 5  | 240  | 1     | 21   | 30           |
|           | 5011        |                             |    | 208  | 1     | 24   | 30           |
| SM-7      | 7010        | 220                         | 7  | 240  | 1     | 29   | 40           |
|           | 7011        |                             |    | 208  | 1     | 34   | 40           |
| SM-9      | 9010        | 360                         | 9  | 240  | 1     | 38   | 50           |
|           | 9011        |                             |    | 208  | 1     | 43   | 50           |
| SM-10     | 1010        | 450                         | 10 | 240  | 1     | 42   | 50           |
|           | 1011        |                             |    | 208  | 1     | 48   | 60           |

## LED Chart

|     |     |               |
|-----|-----|---------------|
| DS1 | GRN | TIMER ON      |
| DS2 | YEL | HEATER ON     |
| DS3 | AMB | WATER FILL ON |
| DS4 | RED | POWER ON      |
| DS5 | AMB | DRAIN ON      |

\* 90°C copper wire is required for generator connection. Installation shall be in accordance with NEC and local electrical codes.