

BEFORE YOU BEGIN

NOTES

- For illustrative purposes, only the double foot control model is shown. Installation of the single foot control model is identical.
- Shut off the main water supply.
- Observe all local plumbing codes.
- Provide sufficient reinforcement to the wall.

REQUIRED TOOLS AND MATERIALS

- Adjustable wrench
- Thread sealant
- Slotted screwdriver

INSTALLATION

Secure the base to the valve with three flathead screws. Tighten securely.

Connect the lavatory or sink supply to the valve according to the instructions packed with the supply.

Use three flathead wood screws (not provided) to secure the base to the finished wall according to the roughing-in information packed with the foot control valve. Make sure sufficient reinforcement has been added to the wall.

Connect the hot and cold water supplies to the valve.

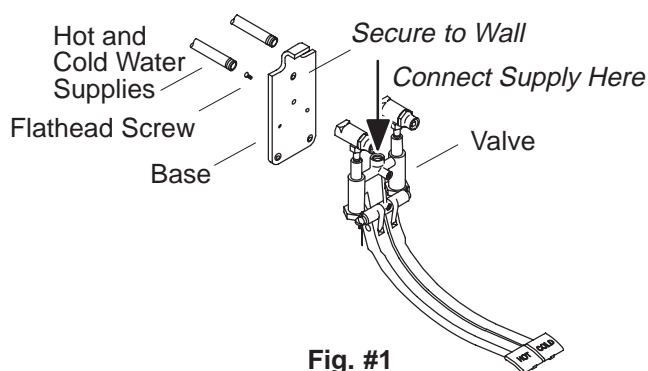


Fig. #1

Fit the cover in place over the valve and base. If the foot pedals make contact with the cover, remove the cover. Loosen the hex nuts on the adjustment screws, and turn the adjustment screws counterclockwise until the foot pedals are even, and no longer touch the cover. Re-tighten the hex nuts securely.

Turn on the water supply, and use the key provided to fully open the valve supply stops. Check for leaks.

Secure the cover to the valve with the plated screw.

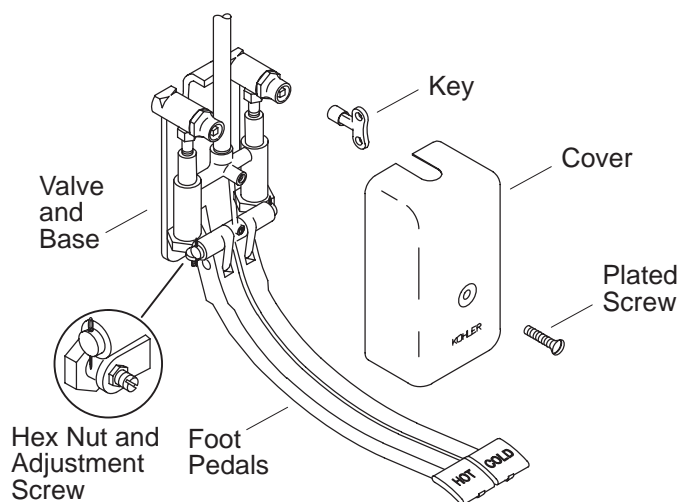


Fig. #2