

The new degree of comfort.™

Rheem *Prestige* Series[™] Communicating Two Stage Variable Speed Multi position Gas Furnaces



R96V-Series

96% A.F.U.E.† Input Rates from 60 to 100 kBTU [17.58 to 29.31 kW]




†A.F.U.E. (Annual Fuel Utilization Efficiency) calculated in accordance with Department of Energy test procedures.

- 96% residential gas furnace CSA certified
- 4 way multi-poise design
- Two stages of operation to save energy and maintain optimal comfort level.
- Variable speed blower motor technology provides ultimate humidity control, quieter sound levels, and year round energy savings.
- EcoNet[™] enabled HVAC Product
- PlusOne[™] Diagnostics 7-Segment LED all units
- PlusOne[™] Ignition System DSI for reliability and longevity
- PlusOne[™] Water Management System with patented Blocked Drain Sensor
- Heat exchanger is removable for improved serviceability. Aluminized steel primary and stainless steel secondary construction provide maximum corrosion resistance and thermal fatigue reliability.

- Low profile "34 inch" cabinet ideal for space constrained installations.
- · Blower Shelf design serviceable in all furnace orientations
- Pre marked hoses insures proper system drainage
- Vent with 2" or 3" PVC
- Replaceable Collector box
- Hemmed edges on cabinet and doors
- · Quarter turn fasteners for tool less access
- Integrated control boards feature dip switches for easy system set up
- Self priming condensate trap
- Solid bottom included
- Compatible with single or two stage thermostats. For optimal performance a two stage thermostat is recommended.

TABLE OF CONTENTS

Standard & Optional Equipment	3
Physical Data & Specifications	4
Model Number Identification	5
Dimensional Data	6
Blower Performance Data	7
Accessories	8
Limited Warranty	9

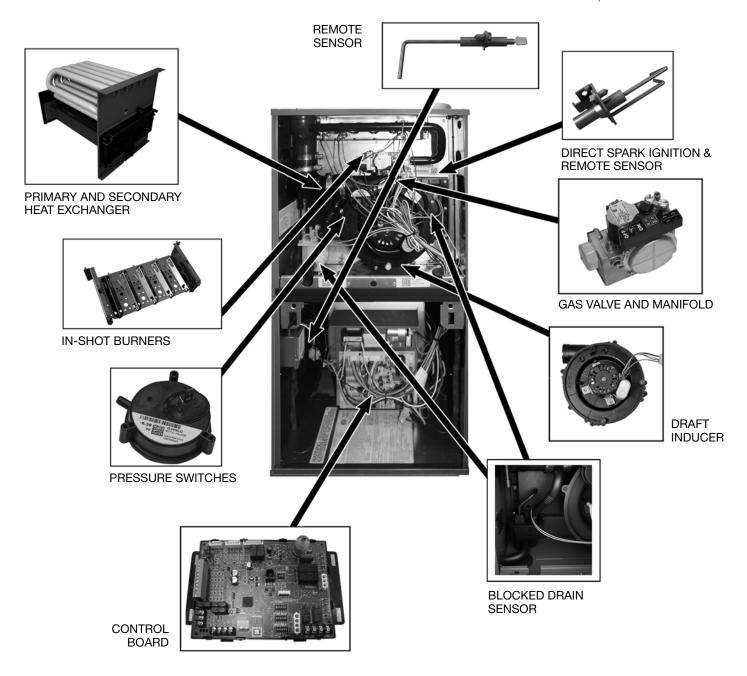

STANDARD EQUIPMENT

Completely assembled and wired; blocked drain sensor, 7 segment LED and marked hoses; heat exchanger; primary: aluminized steel, secondary: 29-4C stainless steel; 2 stage induced draft; pressure switches; redundant 2 stage main gas control; blower compartment door safety switch; solid state time on/off blower control; limit controls; manual shut-off valve; 100% safety lock out; cool fan off delay; field selectable heat fan off delay; one hour automatic retry; power and selftest diagnostics; flame sense current diagnostics; electronic air cleaner connections; twinning (built-in) features; humidifier connections; humidifier on/off delay; low speed continuous fan option; single speed option for heating and cooling applications; transformer; direct drive, multi-speed blower motor. Solid bottom. (Please note: a thermostat is not included as standard equipment.)

OPTIONAL EQUIPMENT

Side and bottom filter racks; return air cabinet for all sizes.

NOTE: Furnace is not listed for use with fuels other than natural or L.P. (propane) gas.

All models can be converted by a qualified distributor or local service dealer to use L.P. (propane) gas without changing burners. Factory approved kits must be used to convert from natural to L.P. (propane) gas and may be ordered as optional accessories from a parts distributor.

For L.P. (propane) operation, refer to Conversion Kit Index Form.

WARNING THIS FURNACE IS NOT APPROVED OR RECOMMENDED FOR USE IN MOBILE HOMES

Physical Data and Specifications—Upflow Models U.S. and Canadian Models

MODEL NUMBERS	R96VA0602317MSA	R96VA0702317MSA	R96VA0852521MSA	R96VA1002521MSA
HIGH FIRE INPUT BTU/HR [kW] ①	56,000 [16.41]	70,000 [20.50]	84,000 [24.61]	98,000 [28.72]
LOW FIRE INPUT	RE INPUT 39,200 [11.49]		58,800 [17.23]	68,600 [20.11]
HEATING CAPACITY BTU/HR [kW]	53,760 [15.75]	67,200 [19.68]	80,640 [23.63]	94,080 [27.57]
HIGH ALTITUDE OUTPUT 10% DERATE [kW] [©]	48,384 [14.18]	60,480 [17.72]	72,756 [21.27]	84,672 [24.81]
BLOWER (D x W) [mm]	11 x 8 [279 x 203]	11 x 8 [279 x 203]	11 x 10 [279 x 254]	11 x 10 [279 x 254]
Motor H.P. [W]- Type	1/2 [373] E.C.M.	1/2 [373] E.C.M.	3/4 [559] E.C.M.	3/4 [559] E.C.M.
MOTOR FULL LOAD AMPS	8.9	8.9	10.8	10.8
MINIMUM EXT. STATIC PRESSURE (IN. W.C.) [kPa]	.20 [.050]	.23 [.057]	.28 [.070]	.28 [.070]
MAXIMUM EXT. STATIC PRESSURE (IN. W.C.) [kPa]	1.0 [0.249]	1.0 [0.249]	1.0 [0.249]	1.0 [0.249]
HEATING CFM @ .2" [.049 kPa] W.C. E.S.P. [L/s]	1025 [484]	1015 [479]	1470 [694]	1710 [807]
COOLING CFM @ .5" [.124 kPa] W.C. E.S.P. [L/s]	1050 [496]	1050 [496]	1750 [826]	1750 [826]
TEMPERATURE RISE-HIGH FIRE RANGE IN DEGREES °F [°C]	30 - 60 [17 - 33]	40 - 70 [22 - 39]	30 - 60 [17 - 33]	40 - 70 [22 - 39]
TEMPERATURE RISE-LOW FIRE RANGE IN DEGREES °F [°C]	20 - 50 [11 - 28]	30 - 60 [17 - 33]	20 - 50 [11 - 28]	30 - 60 [17 - 33]
RETURN AIR CABINETS (OPT.) RXGR- FILTER SIZE [mm]	C17B (2) 12" x 16" [305 x 406]	C17B (2) 12" x 16" [305 x 406]	C21B (2) 12" x 20" [305 x 508]	C21B (2) 12" x 20" [305 x 508]
APPROX. SHIPPING WEIGHT (LBS.) [kg]	128 [58]	132 [60]	147.5 [67]	152 [69]
AFUE 3	96.00%	96.00%	96.00%	96.00%

NOTES: All models are 115V, 60HZ, 1 phase Gas connection size for all models is 1/2" [13 mm] N.P.T.

① Installation instructions for high altitude derate.

② Canadian installations only.


③ In accordance with D.O.E. test procedures.

*S=Standard Models

 $\label{eq:NOTE: Standard model complies with California low nox requirements.$

Model Number Identification

<u>R</u>	<u>96</u>	<u>v</u>	<u>A</u>	<u> </u>	<u>2</u>	<u>3</u>	<u>17</u>	M	<u>s</u>	<u>A</u>
Rheem	96% Efficient	Motor - ECM	Design Series A = 1st Design	Input BTU/HR 060 = 56,000 [16.41 kW] 070 = 70,000 [20.51 kW] 085 = 84,000 [24.62 kW] 100 = 98,000 [28.72 kW]	Stage - Two	Airflow 3 - Up to 3 Tons 5 - Up to 5 Tons	17 = 17.5"	Configuration - Multi-Position	S = Standard N = NOx	Revision - Marketing (A - First Time Release)

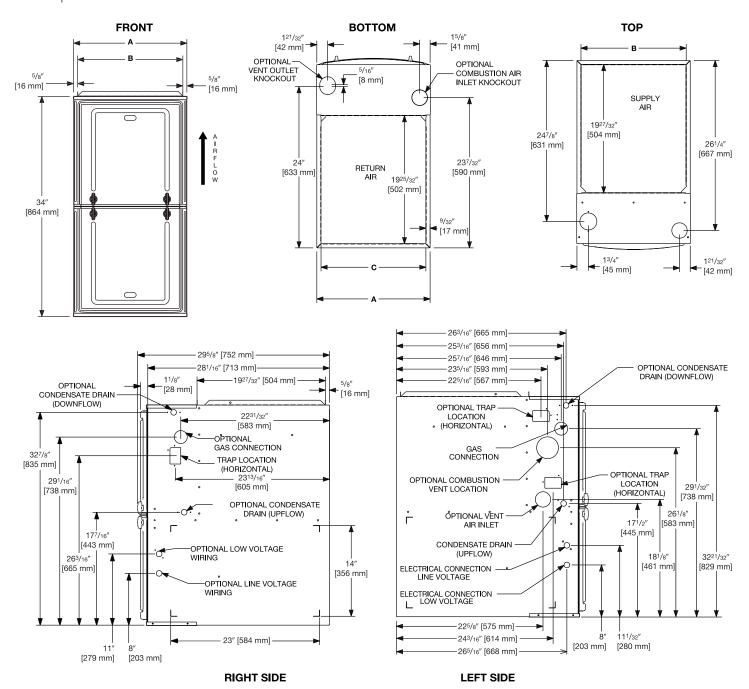

UNIT DIMENSIONS (CLEARANCE TO COMBUSTIBLES)

MODEL	LEFT		MINIMUM	CLEARANCE	(IN.) [mm]		SHIP	F	LANGE DIMENSION	S
R96V	SIDE	RIGHT SIDE	BACK	TOP	FRONT	VENT	WGTS.	A	В	C
060	0	0	0	1 [25]	2 [51]	0	128 [58]	171/2 [445]	16 ¹⁷ /64 [413]	16 ^{13/64} [412]
070	0	0	0	1 [25]	2 [51]	0	132 [60]	171/2 [445]	16 ¹⁷ /64 [413]	16 ^{13/64} [412]
085	0	0	0	1 [25]	2 [51]	0	147.5 [67]	21 [533]	19 ^{49/64} [502]	19 ⁴⁵ /64 [500]
100	0	0	0	1 [25]	2 [51]	0	152 [69]	21 [533]	19 ⁴⁹ /64 [502]	19 ⁴⁵ /64 [500]

*A service clearance of at least 24" is recommended in front of all furnaces

Supply and return depicted as upflow configuration.

Flange configuration will vary depending on installation orientation.



Air Blower Performance Data R96V Series

	MODEL NUMBER				R96VA0702317MSA	R96VA0852521MSA	R96VA1002521MSA	
		SW 15 = 0FF	SW 16 = 0FF	1025 [484]	1015 [479]	1470 [694]	1710 [807]	
	HIGH HEATING	SW ON = ON	SW 16 = 0FF	880 [415]	950 [448]	1235 [583]	1490 [703]	
	CFM [L/s]	SW 15 = 0FF	SW 16 = 0N	1250 [590]	1190 [562]	1850 [873]	1965 [927]	
TARGET GAS		SW 15 = 0N	SW 16 = 0N	780 [368]	900 [425]	1120 [529]	1400 [661]	
HEATING AIRFLOW		SW 13 = 0FF	SW 14 = 0FF	925 [437]	900 [425]	1300 [614]	1500 [708]	
	LOW HEATING CFM [L/s]	SW 13 = 0N	SW 14 = 0FF	750 [354]	770 [363]	1065 [503]	1335 [630]	
		SW 13 = 0FF	SW 14 = 0N	1210 [571]	1050 [496]	1775 [838]	1800 [850]	
		SW 13 = 0N	SW 14 = 0N	660 [311]	700 [330]	925 [437]	1210 [571]	
	HIGH COOLING CFM [L/s]	SW 4 = 0FF	SW 5 = 0FF	1050 [496]	1050 [496]	1750 [826]	1750 [826]	
		SW 4 = 0N	SW 5 = 0FF	875 [413]	875 [413]	1400 [661]	1400 [661]	
		SW 4 = 0FF	SW 5 = 0N	700 [330]	700 [330]	1225 [578]	1225 [578]	
TARGET COOLING/		SW 4 = 0N	SW 5 = 0N	525 [248]	525 [248]	1050 [496]	1050 [496]	
HEAT-PUMP AIRFLOW	LOW COOLING CFM [L/s]	SW 4 = 0FF	SW 5 = 0FF	788 [372]	788 [372]	1313 [619]	1313 [619]	
		LOW COOLING	SW 4 = 0N	SW 5 = 0FF	656 [310]	656 [310]	1050 [496]	1050 [496]
		SW 4 = 0FF	SW 5 = 0N	525 [248]	525 [248]	919 [434]	919 [434]	
		SW 4 = 0N	SW 5 = 0N	394 [186]	394 [186]	788 [372]	788 [372]	

 $^{\star}\mathrm{S}$ = Standard Models NOTE Standard model complies with California low NOx requirements.





VENT TERMINATION KITS: =

RXGY-E02: Vertical/Horizontal Concentric Vent Termination Kit 2" Pipe (US Only)

RXGY-E02A: Vertical/Horizontal Concentric Vent Termination Kit 2" Pipe (US & Canadian)

RXGY-E03: Vertical/Horizontal Concentric Vent Termination Kit 3" Pipe (US Only)

RXGY-E03A: Vertical/Horizontal Concentric Vent Termination Kit 3" Pipe (US & Canadian)

RXGY-G02: Direct Vent Furnace Side Wall Vent 2" or 3" (US Only)

RXGY-D05: Combustion Air Drain Kit 2"

RXGY-D06: Combustion Air Drain Kit 3"

NEUTRALIZER KIT: RXGY-A01 (Replacement Cartridge 54-22120-01) FOSSIL FUEL KIT: RXPF-F01, RXPF-F02 (TVA)

RETURN AIR PLENUM: RXGR-C17B RXGR-C21B RXGR-C24B

EXTERNAL BOTTOM FILTER (UPFLOW/HORIZONTAL) RACK: RXGF-CB

EXTERNAL SIDE (UPFLOW) FILTER RACK: RXGF-CD

EXTERNAL (DOWNFLOW) FILTER RACK: RXGF-CC

FILTER RACK FILTER SIZES* INCHES [mm]							
MODEL	RXGF-CB (UPFLOW/ HORIZONTAL)	RXGF-CD (UPFLOW)	RXGF-CC (DOWNFLOW)				
R96VA060	15 ³ /4 x 25	15 ^{3/} 4 x 25	12 x 20				
	[400 x 635]	[400 x 635]	[305 x 508]				
R96VA070	15 ^{3/4} x 25	15 ^{3/4} x 25	12 x 20				
	[400 x 635]	[400 x 635]	[305 x 508]				
R96VA085	19 ¹ /4 x 25	15 ^{3/4} x 25	12 x 20				
	[489 x 635]	[400 x 635]	[305 x 508]				
R96VA100	19 ¹ /4 x 25	15 ^{3/4} x 25	12 x 20				
	[489 x 635]	[400 x 635]	[305 x 508]				

*Filter racks are shipped without filters.

Filters shipped with furnace may be used or a suitable 1" [25.4 mm] filter.

INDOOR COIL CASINGS

MODEL NUMBER	
RXBC-D17A1	
RXBC-D21A1	
RXBC-D21B1	
RXBC-D24A1	

FOR HIGH ALTITUDES:

NOTE: For Canadian installations only, an optional derate (manifold gas pressure reduction) method may be used to adjust the furnace for altitude. See Installation Instructions for more information. This optional method may **NOT** be used for U.S. installations. See installation instructions as appropriate orifice change is required.

L.P. CONVERSION KIT: RXGJ-FP33

RETURN AIR PLENUM KIT: RXGR-C17B RXGR-C21B RXGR-C24B

CONDENSATE PUMP KIT: PROSTOCK & 1PCB151TUL

DOWNFLOW/HORIZONTAL CONVERSION KIT: RXGY-CK

DOWNFLOW/HORIZONTAL LEFT ZERO CLEARANCE CONVERSION KIT: RXGY-ZK

COMBUSTIBLE FLOOR BASE: RXGC-B17 RXGC-B21 RXGC-B24

THERMOSTATS

RECOMMENDED COMMUNICATING FURNACE THERMOSTAT



RETST600SYS UETST600SYS

CONTRACTOR BENEFITS:

- Auto/Self Configuration
- Day-at-a-glance scheduling, with programmable fan
- Intuitive wiring connections
- Dual fuel ready
- Automatically optimizes airflow
- System status & mode information
- · Complete diagnostic information on display

HOMEOWNER BENEFITS:

- Large, easy to read icons and characters
- Auto-mode control
- Smart recovery
- · Continuous Fan Mode (5 speeds)
- Humidity Control
- Water heater, pool heater integration* (check model compatibility)

*PROGRAMMABLE THERMOSTAT ACCESSORIES:

Wall Plate = RETSTWPL Face Plate = RETSTFPL

*Available through PROSTOCK®.




GENERAL TERMS OF LIMITED WARRANTY*

Rheem will furnish a replacement for any part of this product which fails in normal use and service within the applicable period stated, in accordance with the terms of the limited warranty.

*For complete details of the Limited and Conditional Warranties, including applicable terms and conditions, contact your local contractor or the Manufacturer for a copy of the product warranty certificate.

Conditional Parts	
(Registration Required)	Ten (10) Years
Heat Exchanger	Limited Lifetime
Limited Lifetime	
Conditional Unit Replacement	
(Registration Required)	Ten (10) Years







In keeping with its policy of continuous progress and product improvement, Rheem reserves the right to make changes without notice.

Rheem Heating, Cooling & Water Heating • P.O. Box 17010 Fort Smith, Arkansas 72917 • www.rheem.com Rheem Canada Ltd./Ltée • 125 Edgeware Road, Unit 1 Brampton, Ontario • L6Y 0P5