

ROHL.

Authentic Luxury for Kitchen and Bath®

www.ferguson.com



TRADITIONAL AND TRANSITIONAL PAN FOR THE RFE2350 TANK

Vitreous China

RFE2354

FEATURES


- Pan for RFE2350 tank
- Must order RFE2350 tank to complete
- Two-piece toilet
- Vitreous china
- Elongated bowl with 12" minimum rough-in, flush wall to mounting hole
- 1/2" water inlet located on the left side of tank in back.
- 15" height from deck to bottom of inlet
- 16 1/2" high bowl, ADA compliant with seat
- High efficiency 1.28 GPF (4.8 LPF)
- 2" fully glazed trapway
- Includes slow close seat and cover
- EPA WaterSense certified
- Mounting hardware included
- 8 1/2" x 6" water spot
- Includes ROHL logo

COLORS/FINISHES

- White
- Biscuit

WARRANTY

- 1 year on manufacturer defects

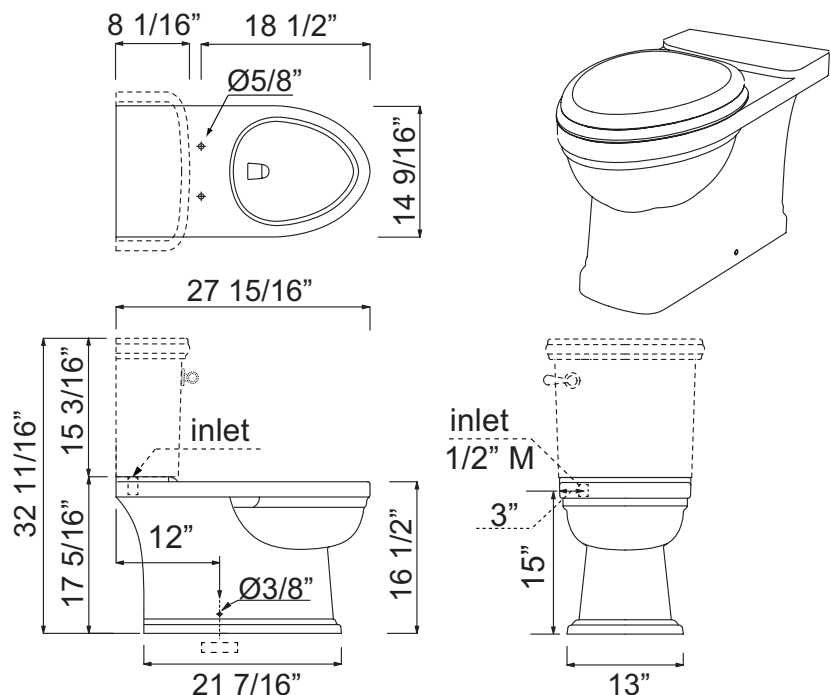

INSTALLATION INSTRUCTIONS


Concealed Toilet With Lever Installation Instructions

- RFE2350WH and RFE2350BS
- RFE2354WH and RFE2354BS

INSTALLATION PROCEDURE


PARTS:

A	Lever handle (Pre-Installed)	x1
B	Complete Flush Valve (Pre-Installed)	x1
C	Complete Fill Valve with Float (Pre-Installed)	x1
D	Toilet Seat	x1
E	Mounting Bracket Kit	x1
F	Rubber Bolt Washer	x2
G	Metal Washers	x2
H	Tank Bolts	x2
I	Metal Nuts	x2
J	Rubber Gasket	x1

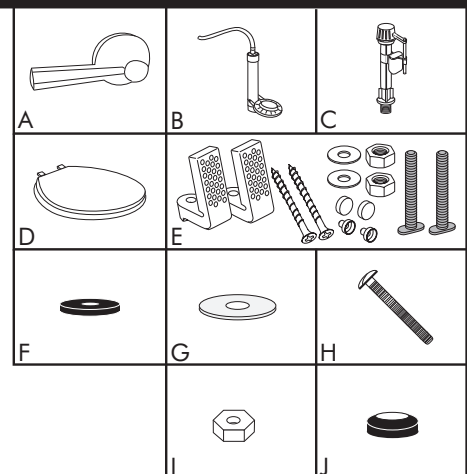

TOOLS AND MATERIALS REQUIRED:

A	Floor Flange
B	Water Supply Kit (Not needed if replacing existing toilet)
C	Sealing Ring
D	Adjustable Wrench
E	Philips Screwdriver
F	Level
G	Putty Knife
H	Measuring Tape

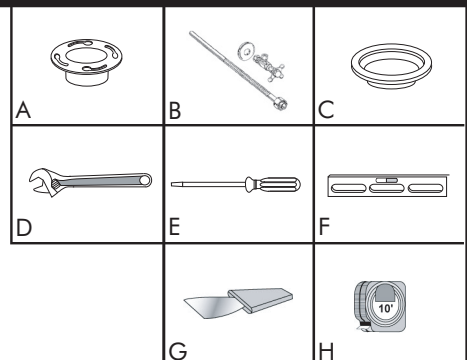



INSTALLATION INSTRUCTIONS

Concealed Toilet With Lever Installation Instructions

- RFE2350WH and RFE2350BS
- RFE2354WH and RFE2354BS

REMOVING YOUR OLD TOILET

- 1 Turn off the water supply.
- 2 Flush the toilet to empty the tank. Remove any water left in the tank or bowl.
- 3 Disconnect the supply line from tank.
- 4 Remove decorative caps. Unscrew nuts that attach the toilet to the floor.
- 5 Remove toilet.

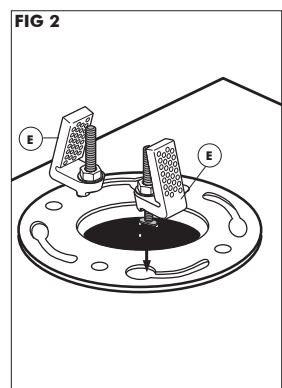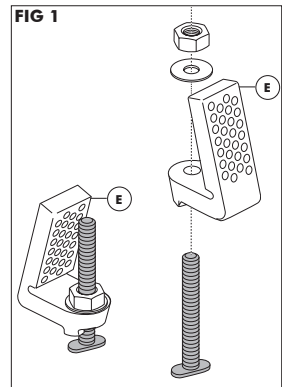

INSTALLATION PROCEDURE

- 1 Make sure the water supply valve is shut off before installation.
- 2 Remove old closet bolts from closet flange. Clean any old wax, putty, etc. from base area.
- 3 Attach white mounting brackets (E) to the flange bolts. Use the washer and bolt to secure. (See Figure 1)
- 4 Install the bracket (E) onto the flange by inserting the bolt into the large part of the slot. Slide the bracket down the slot to the smaller end and tighten the bolt. (See Figure 2)


INSTALLATION INSTRUCTIONS

Concealed Toilet With Lever Installation Instructions


- RFE2350WH and RFE2350BS
- RFE2354WH and RFE2354BS

INSTALLATION PROCEDURE


- 5** Insert tank bolts (H) inside the tank. Use rubber washers (F) supplied to create a seal. (See Figure 3)
- 6** Attach the large rubber sealing gasket (J) to the center drain hole under the tank. (See Figure 3)
- 7** Gently place the tank on the bowl with the bolts (H) protruding out underneath. Then tighten with metal washers (G) and metal nuts (I), tighten enough that the tank sits flat on the bowl.

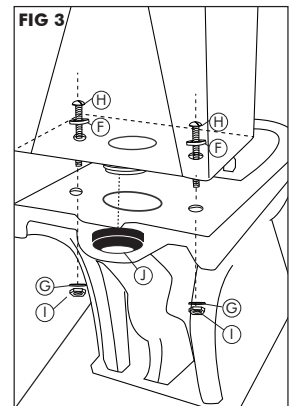


- 8** Turn the toilet side ways onto a soft surface to avoid scratches on the finish. Place a new wax ring (not included) around the waste flange of the toilet bowl. (See Figure 4)

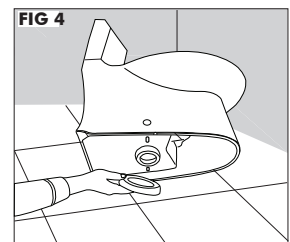

- 9** Lower the toilet into position so that the bracket are parallel to the inner wall of the toilet. (See Figure 5) Using a rocking motion, press the bowl down to position the toilet onto the flange and create a seal with the wax ring.

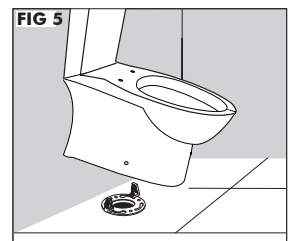

- 10** Insert screw through the mounting hole on the side of the toilet and tighten until it catches the mounting bracket holes. (See Figure 6)
CAUTION: DO NOT OVERTIGHTEN.

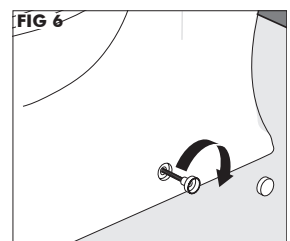

- 11** Attach the decorative screwhead covers on each side of the bowl.

INSTALLATION INSTRUCTIONS


Concealed Toilet With Lever Installation Instructions

- RFE2350WH and RFE2350BS
- RFE2354WH and RFE2354BS

TOILET SEAT INSTALLATION PROCEDURE


1

Place the toilet seat on top of the bowl and then insert the provided seat bolt sets into the holes of the toilet seat and bowl. (See Figure 7)

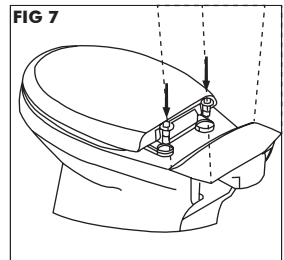


2

Align the toilet seat to the top rim of the toilet bowl. (See Figure 8)

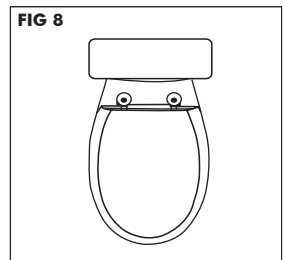

3


Use a screwdriver to firmly tighten both seat bolts down to the bowl. (See Figure 9)

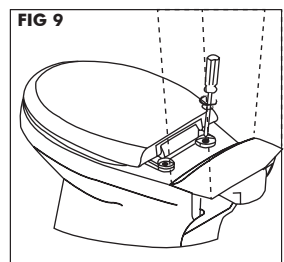

4

Push the decorative caps down over the bolts. (See Figure 10)

CAUTION: Do not push down on the seat with force, doing so may damage the slow close mechanism.

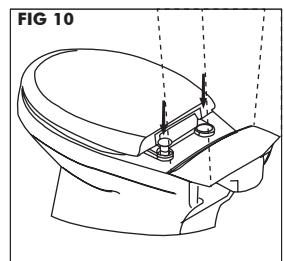

INSTALLATION INSTRUCTIONS

Concealed Toilet With Lever Installation Instructions

- RFE2350WH and RFE2350BS
- RFE2354WH and RFE2354BS

CONNECT WATER SUPPLY

- 1 Connect water supply line (new or existing) between shutoff valve and tank inlet water fitting. Tighten coupling nuts securely.
NOTE: DO NOT OVERTIGHTEN

- 2 Turn on supply valve and allow tank to fill until float rises to shutoff position.

- 3 Check for leakage at fittings, tighten or correct as needed.

TROUBLE SHOOTING FOR REGULAR FLUSH VALVE OR CANISTER FLUSH VALVE

Problem: Poor Flush.

Solution: You need to verify if the chain is too long causing the flapper to not activate the flush properly.

Problem: Continuous water running.

Solution: It may occur if the flush valve seal is not completely closed. 1) Verify if there is any obstruction with the flush seal. 2) Make sure the flush valve chain has the proper length at rest.

REPAIR PARTS

Fill Valve w/Float
Flush Valve
Rubber Gasket
Tank Lever handle
Toilet Seat

Wipe the outside of the toilet gently with a damp cloth and blot dry with a soft towel. Make sure that the complete surface is cleaned and completely dry. NOTE: IMPROPER CARE MAY CAUSE THE WARRANTY TO BECOME INVALID.

INSTALLATION INSTRUCTIONS

WARRANTY

**ROHL products all carry warranties against manufacturing defects.
The factories that produce these products set the terms of these warranties.**

**Bath Fixtures
1 year on manufacturer defects**

ROHL's Promise

ROHL LLC will provide free of charge, at its options, replacement part(s) or product (or a comparable alternative product) to replace those which have proven defective in materials or workmanship.

ROHL LLC will not assume liability for labor expended, freight cost or damages accruing from the use of the material purchased from us. If material is defective, the limit of damage is the price of the defective material. Proof of purchase (original sales receipt) from the original consumer purchaser must be made available to ROHL LLC for all warranty claims. The warranty is not transferable and is extended solely to the original purchaser of the product.

Warranty Exclusion

This warranty is for normal domestic use only and excludes defect or injury caused by or resulting from misuse, abuse, neglect, accidental damage, or improper installation.

General Disclaimer

All warranties other than the Express Warranty herein contained, including but not limited to any implied warranty of merchantability or fitness for a particular purpose, are limited in duration to the applicable warranty period set forth above. Some states do not allow limitations on how long an implied warranty lasts and some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights that vary from state to state.

Commercial Warranty

ROHL warrants its products installed in a commercial application to be free from manufacturing defects for a period of one (1) year from the date of acquisition by original owner.

Outside Use

ROHL products are suitable for outside use. However, due to the harsh environment of sun, wind, rain and snow, we do not offer a warranty for these types of installations.