




Alsons Hand Shower Unit Installation Instructions

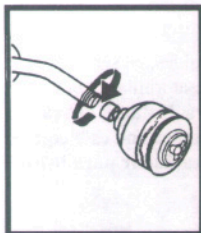


1. Remove Existing Shower Head

Turn the existing shower head counter-clockwise with adjustable wrench or pliers. Use care not to unscrew the shower arm; hold the shower arm secure. **Note: If your shower arm has a ball on the end of it, it will not work with this shower unit and will need to be replaced with a standard shower arm mount, such as Alsons Model 4993F.**


2. Install Shower Mount/Connect the Hose to Shower Arm Mount

It is recommended to wrap Teflon Tape (not included) around the thread of shower arm. Hand tighten the large end of the Shower Arm Mount *clockwise* onto the exposed shower arm threads until tight. Do not use a wrench or pliers.

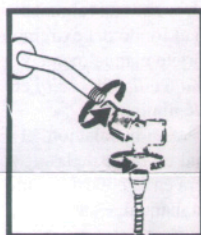

Standard Installation: A Washer, if provided (some of our hoses are washerless), must be firmly seated into the bottom of the standard hex nut end of the Hose. Then firmly hand tighten the hose nut *clockwise* onto the Shower Arm Mount outlet. Do not use a wrench or pliers.

Installation with Vacuum Breaker: If a Vacuum Breaker is required for your installation, the Vacuum Breaker should be connected to the standard hex nut end of the Hose and then attach it to the Shower Arm Mount at the water supply connection. If you attach the Vacuum Breaker to the Hand Shower, it will not function as desired.

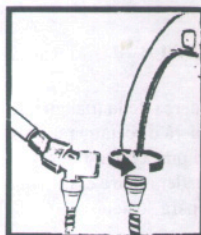

3. Connect Tapered End of Hose to Hand Shower

Seat the Washer, if provided, firmly into the Hose nut. Carefully align the thread of the tapered end of the Hose directly to the Hand Shower. Hand tighten – do not use a wrench or pliers. Then place the Hand Shower into the Shower Arm Mount. Rotate the Shower Arm Mount into the desired position to hold the Hand Shower.

Limited Lifetime Warranty Alsons Corporation warrants to the owner of this product that the product is free from defects in material or workmanship for the period stated above from the date of purchase. For services in the USA, either return it to the retailer where purchased or return the product postage prepaid (we recommend United Parcel Service) to Alsons Corporation at 3010 West Mechanic Street, Hillsdale, MI 49242. We will repair or replace, at our discretion, at no charge. This warranty gives you specific legal rights. You may also have other rights that vary where you reside. *If this product malfunctions or becomes damaged, stop use and return it to Alsons for examination and/or repair.*

For assistance or problems with installation: In the USA, call toll free 1-800-421-0001, 8:00 a.m. to 6:00 p.m. Eastern Standard Time Monday – Friday

If outside USA, write to: Alsons Corporation, 3010 West Mechanic Street, Hillsdale, MI 49242