



# QuickPro® PUMP HEAD REPLACEMENT

## for Single Head Adjustable & Fixed Output Pumps

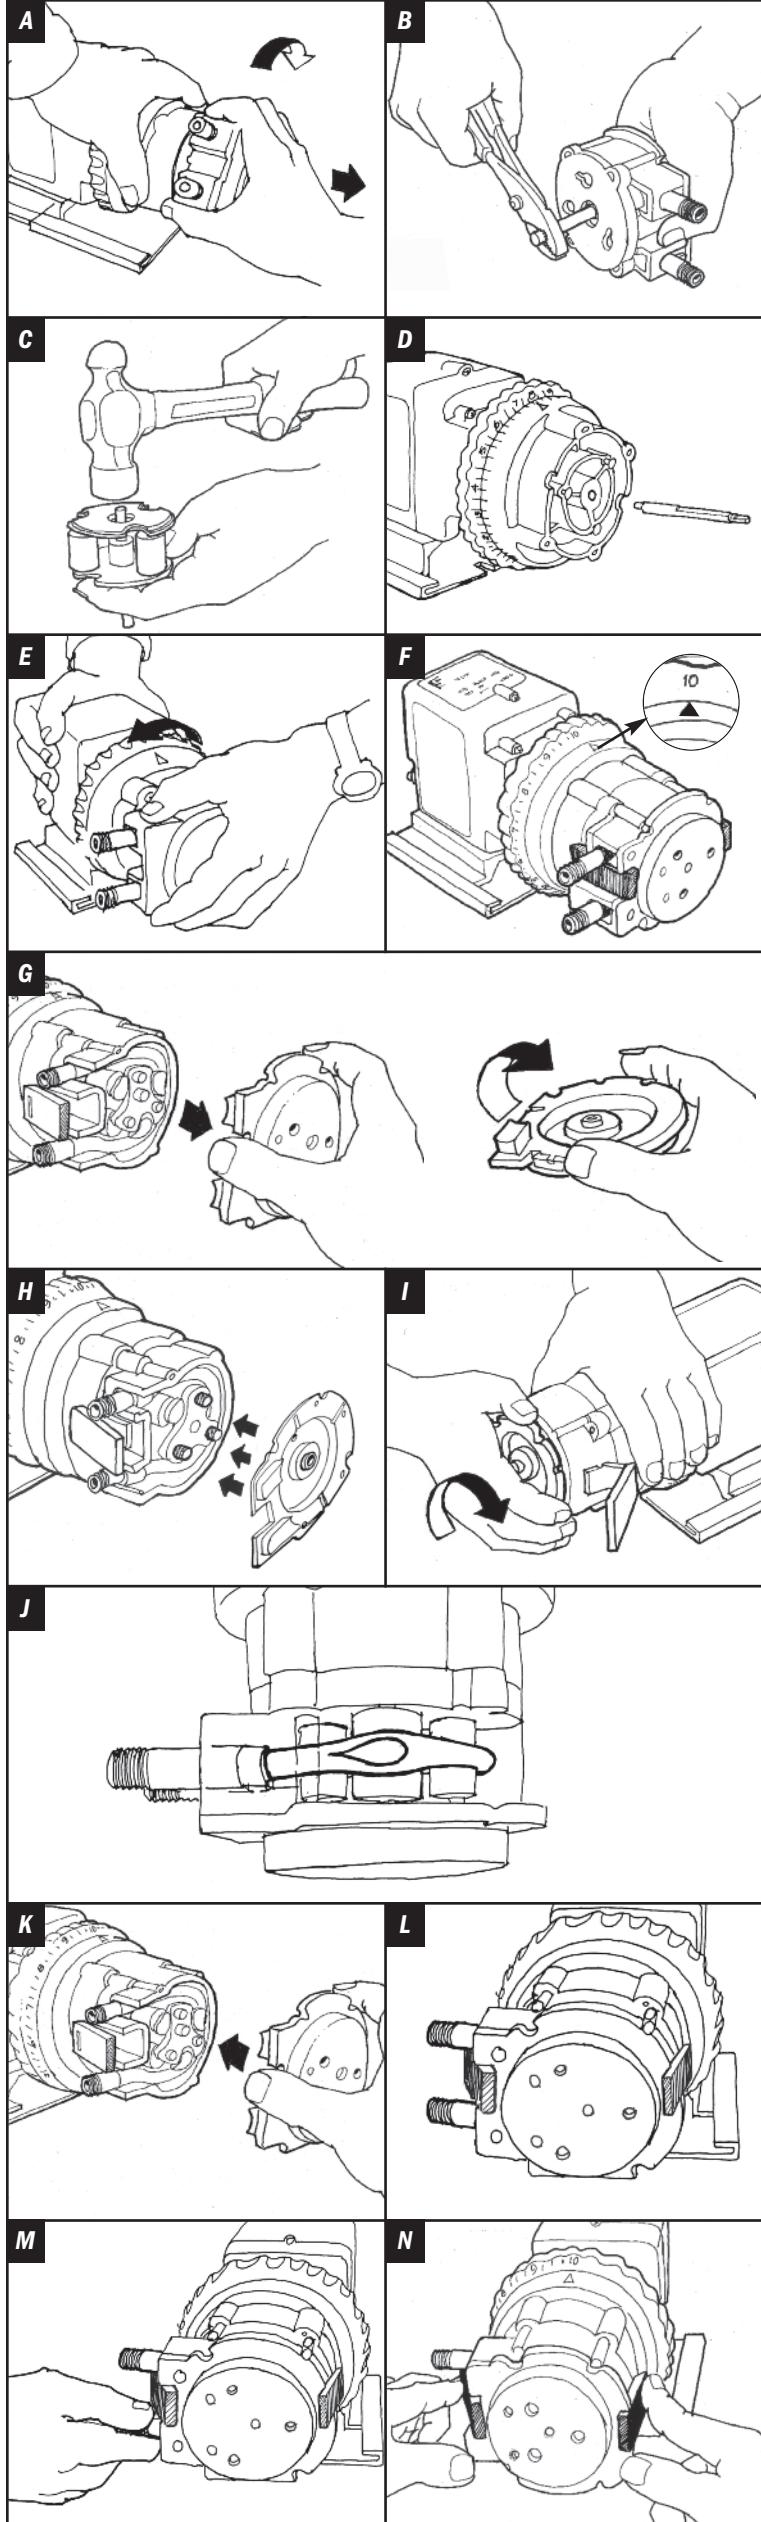

**NOTICE:** Before installing or servicing the pump, read the pump manual for all safety information and complete instructions. The pump is designed for installation and service by properly trained personnel.

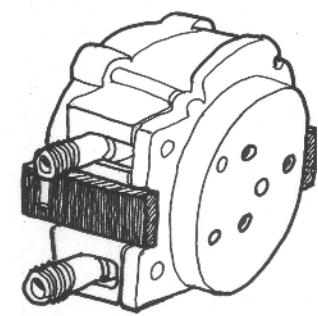

### REMOVE AND INSTALL THE QuickPro® PUMP HEAD

- Turn off the pump and unplug the power cord.

#### Adjustable Model

- To remove the pump head, hold the feed rate securely, grasp the head and turn it clockwise until it stops. **Figure A**
- Remove the head by pulling it straight out from the pump. The main shaft will come out with the pump head.
- Using a pair of pliers, grasp the main shaft and rock it back and forth (clockwise and counter-clockwise) while pulling it straight out of the pump head. Set aside the shaft to be reinstalled later. Discard the old tube, housing and cover. If the shaft will not come out, remove the cover from the pump head and use a hammer to tap the shaft from the front of the roller assembly to dislodge it. **Figure B & C**
- Insert the shaft back into the feed rate control. **Figure D**
- Put the new pump head onto the feed rate control and turn it counterclockwise until the shaft falls into place. Proceed to step 2.

- Push the pump head in while turning it counterclockwise. Line up the rivet holes on the pump head with the rivets on the feed rate control (adjustable pump) OR motor (fixed output pump). **Figure E**
- Continue to push until the rivets are inside the holes.
- Turn the pump head counterclockwise to secure the rivets in the rivet slots, firmly attaching the pump head.

### EXPAND THE ROLLER ASSEMBLY

- On the adjustable model, ensure the feed rate control is set to 10. With the cover latched, plug the pump in and turn the power on. Allow the pump to run the roller assembly in its collapsed position for approximately one minute to relax the tube. **Figure F**

- Turn the pump off and unplug the power cord.

- Remove the tube housing cover and flip to use as a tool in the next step. **Figure G**

- Align the center of the inverted cover with the center of the roller assembly so that the three holes on the face of the cover align with the three knurled lugs on the roller assembly. Position the cover feet near the bottom. **Figure H**

NOTE: The roller assembly needs to be expanded so the tube is pressed against the tube housing wall.

- Expand the roller assembly.

#### Adjustable Model

- Hold the feed rate control securely, use the cover as a wrench and quickly (snap) rotate the roller assembly clockwise to expand the roller assembly. The tube will be pressed against the tube housing wall. **Figure I** Proceed to step 6.

NOTE: Clockwise is viewed from facing the head of the pump.

- Proceed to step 6.

#### Fixed Output Model (manufactured before 04/29/11)

##### **WARNING** Only the Stenner fan brake tool should be used for this step.


- Insert the fan brake tool into the vent in the rear of the motor housing. Refer to the figures below.

NOTE: The fixed output pump doesn't have a clutch so the fan brake keeps the shaft from rotating when expanding the roller assembly.

- Holding the pump securely, use the cover as a wrench and quickly (snap) rotate the roller assembly clockwise to expand the roller assembly. The tube will be pressed against the tube housing wall. **Figure I & J**

NOTE: Clockwise is viewed from facing the head of the pump.

- Remove the fan brake tool. Proceed to step 6.

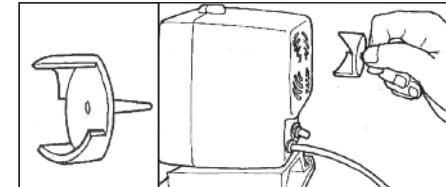

- Place the tube housing cover on the tube housing, affix the front of the latches to the cover lip and then press the latches back to secure. **Figure K**

### CENTER THE TUBE

- Ensure the pump is off. Lift the latch located between the tube fittings, leaving the end of the latch engaged with the lip on the tube housing cover. Leave the latch on the opposite side engaged. **Figure L**
- Plug the pump in and turn it on. Turn the tube fitting on the suction side not more than 1/8 of a turn in the direction the tube must move. **Figure M**
- DO NOT let go of the fitting until the tube rides approximately in center of the rollers.
- Turn pump off, let go of the fitting, and secure the latch between the fittings. **Figure N**
- Turn the pump on and run for one minute to verify operation.

INSQPPH 0815




Stenner Pump Company  
3174 DeSalvo Road  
Jacksonville, Florida 32246 USA


Phone 904.641.1666  
US Toll Free 800.683.2378  
Fax 904.642.1012

www.stenner.com  
sales@stenner.com  
© Stenner Pump Company All Rights Reserved

# CAMBIO DEL CABEZAL QuickPro® para Dosificadores de un Cabezal de Caudal Ajustable y Fijo

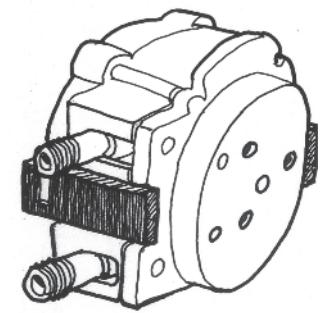

**NOTICE:** Lea todas las advertencias de seguridad detalladas en el manual de instalación antes de instalar o reparar su dosificador. El dosificador ha sido diseñado para ser instalado por personal entrenado debidamente.

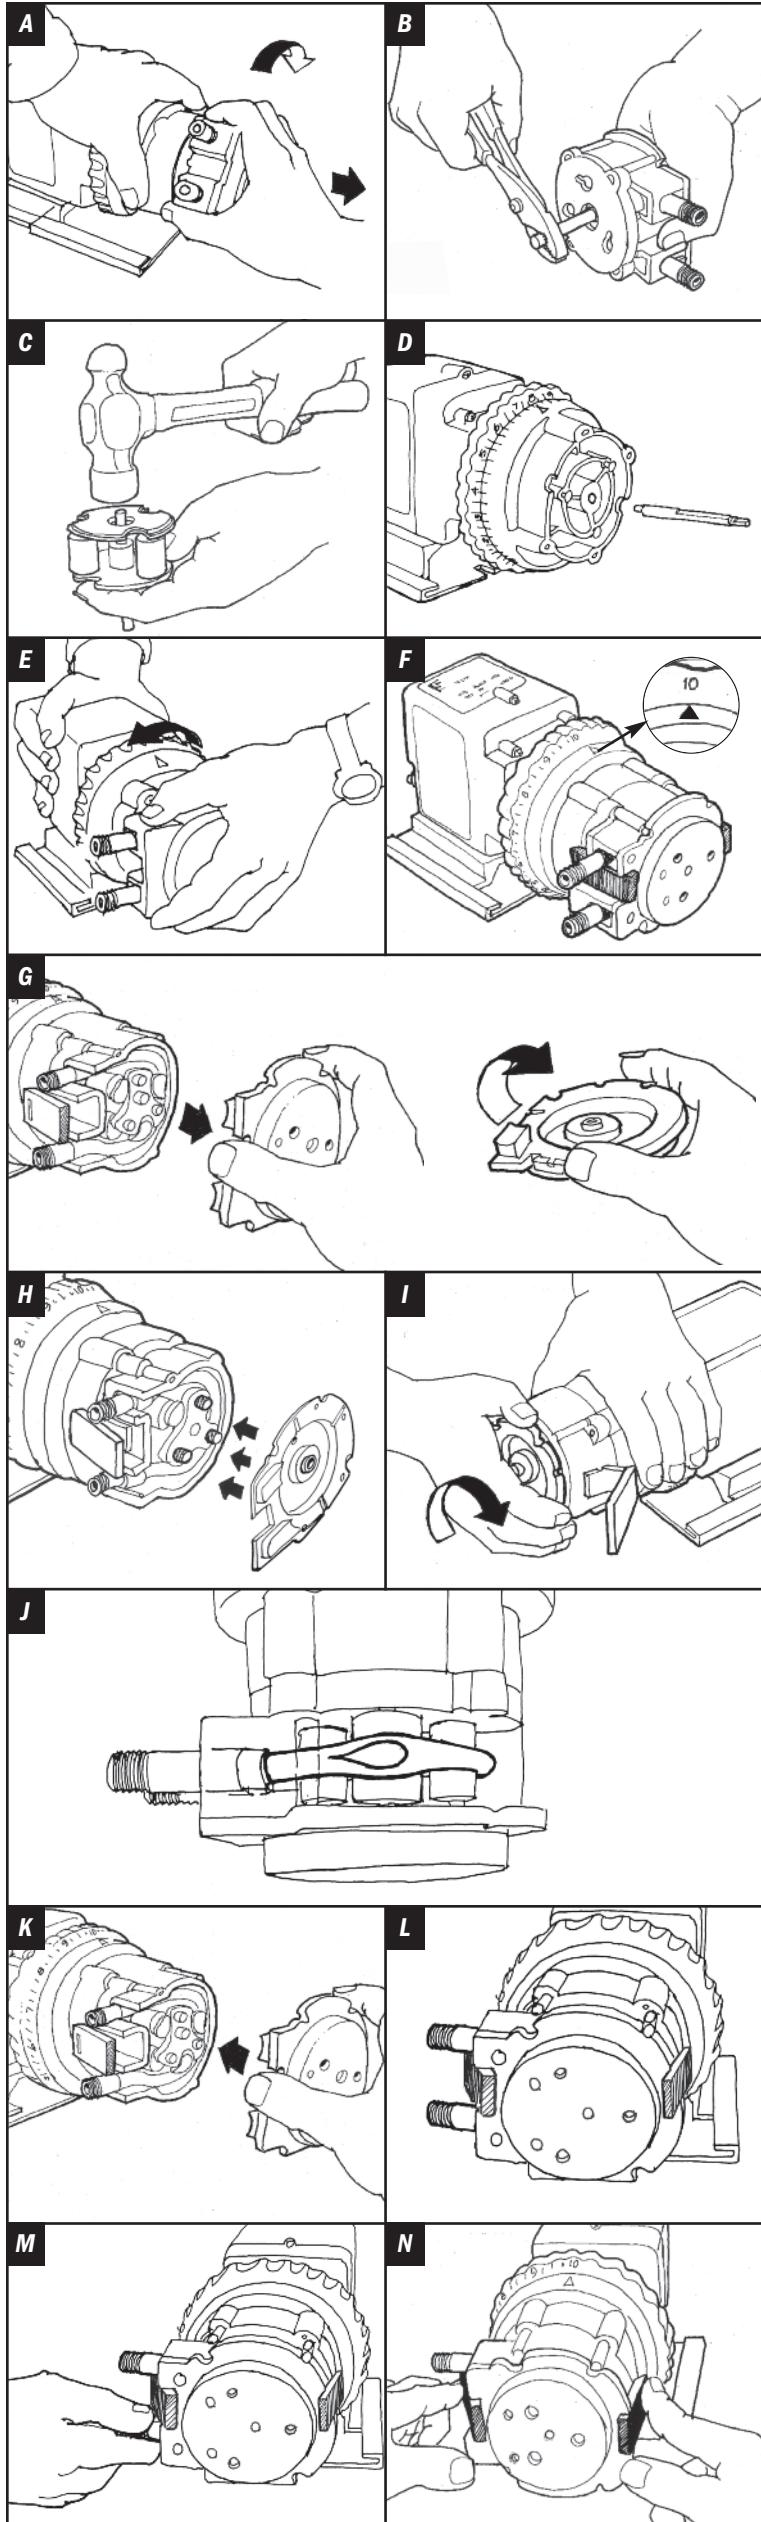

## INSTALACION DEL CABEZAL QuickPro®

### 1 Apague el dosificador y desenchufe.

#### Modelos de Caudal Ajustable

- Para quitar el cabezal, sostenga el controlador de caudal y gire el cabezal en el sentido de las agujas del reloj hasta que se detenga. **Ilustración A**
- Tire del cabezal para separarlo del controlador de caudal. El eje saldrá junto con el cabezal.

- Utilizando un alicate o pinza, tire del eje, girándolo en ambos sentidos (en contra y con el reloj) para separarlo del cabezal. Colóquelo a un costado para instalarlo nuevamente más adelante. Descarte el tubo, carcasa y tapas viejas. Si el eje no se separa, quite la tapa del cabezal y utilice un martillo para golpear suavemente al eje (del lado de los rodillos) y aflojarlo. **Ilustración B & C**

- Inserte el eje en el controlador de caudal. **Ilustración D**
- Coloque el cabezal deslizándolo en el eje y gírelo en sentido contrario al reloj hasta que el eje caiga en su lugar. Proceda al paso 2.

- Presione el cabezal mientras lo gira en sentido contrario al reloj. Alinee los agujeros en el cabezal con los remaches en el controlador de caudal (dosificadores de caudal ajustable) o el motor (dosificadores de caudal fijo). **Ilustración E**

- Presione hasta que los remaches queden insertados en los agujeros.

- Gire el cabezal en sentido contrario al reloj hasta trancar los remaches y asegurando que quede firmemente instalado.

## EXPANDA EL CONJUNTO DE RODILLOS

- En modelos de caudal ajustable, asegúrese que el controlador de caudal esté colocado en 10. Con la tapa instalada, prenda el dosificador y déjelo prendido, con el conjunto de rodillos contraídos, por un minuto, para relajar el tubo de bombeo. **Ilustración F**

- Asegúrese que el dosificador esté apagado y desenchufado.

- Remueva la tapa y voltéela para usar como herramienta en el próximo paso. **Ilustración G**

- Alinee el centro de la tapa volteada con el centro del conjunto de rodillos, de modo que los tres orificios en la cara de la tapa estén alineados con los tres remaches en relieve del conjunto de rodillos. Coloque las patas de la tapa cerca de los extremos del tubo. **Ilustración H**

NOTA: El conjunto de rodillos debe estar expandido para presionar el tubo contra las paredes del cabezal.

- Expanda el conjunto de rodillos.

#### Modelos de Caudal Ajustable

- Sujete el controlador de caudal, use la tapa como herramienta y gire la misma de forma rápida (con un movimiento corto y veloz), en dirección del reloj, para expandir los rodillos. El tubo estará presionado contra las paredes del cabezal. **Ilustración I** Proceda al paso 6.

NOTA: Dirección del reloj es visto del frente del cabezal.

#### Modelos de Caudal Fijo (fabricados antes del 29 de Abril del 2011)


**WARNING** Solamente el freno de ventilador hecho por Stenner debe usarse para este procedimiento

- Inserte el freno de ventilador en la parte trasera del motor. Vea las ilustraciones abajo. NOTA: El dosificador de caudal fijo no tiene embrague y el freno de ventilador previene la rotación del eje cuando se expanden los rodillos.

- Sostenga el dosificador con firmeza y gire la tapa de forma rápida (con un movimiento corto y veloz), en dirección del reloj, para expandir los rodillos. El tubo estará presionado contra las paredes del cabezal. **Ilustración I & J**

NOTA: Dirección del reloj es visto del frente del cabezal.

- Remueva el freno de ventilador. Proceda al paso 6.

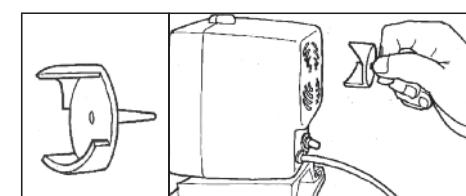

- Reinstale la tapa del cabezal, conecte el frente de los sujetadores al reborde de la tapa y luego presiónelos para fijarlos. **Ilustración K**

## CENTRE EL TUBO

- Asegúrese que el dosificador esté apagado. Levante la parte trasera del sujetador que se encuentra entre las conexiones del tubo, dejando el extremo delantero enganchado en la tapa de la carcasa. Deje el otro sujetador completamente cerrado. **Ilustración L**

- Enchufe el dosificador y enciéndalo. Gire la conexión de tubo del lado de succión hacia donde deba moverse (no más de 1/8 de giro). **Ilustración M**

- No suelte la conexión hasta que el tubo llegue aproximadamente al centro de los rodillos.

- Apague el dosificador, suelte la conexión y fije el sujetador que se encuentra entre las conexiones. **Ilustración N**

- Prenda el dosificador por un minuto para verificar su funcionamiento.

INSQPPH 0815



Stenner Pump Company  
3174 DeSalvo Road  
Jacksonville, Florida 32246 USA

Tel  
Fax

904.641.1666  
904.642.1012

www.stenner.com  
sales@stenner.com  
© Stenner Pump Company Derechos Reservados