

SPEAKMAN®

S-2590 Pivoting Shower Arm Installation, Maintenance & Operation Instructions

DESCRIPTION

Speakman polished chrome plated 10" pivoting extension shower arm. Raises or lowers the shower arm over a 20" range. Key included to set adjustment.

SPECIFICATIONS

1/2" NPSM FEMALE INLET

1/2" NPT MALE OUTLET

SHIPPING WEIGHT: 0.6 LBS.


INSTALLATION

Apply Teflon tape or pipe dope to outlet threads of extension arm. Attach showerhead and wrench tighten. Attach extension arm to shower arm using the rubber washer, then wrench tighten. Loosen adjusting nuts and set desired height, then re-tighten. Check all connections for leaks.

MAINTENANCE

The gleaming finish of your SPEAKMAN S-2590 pivoting shower arm can be cleaned by using mild soap and warm water. Dry immediately with a soft, clean cloth for best results.

ROUGH-IN MEASUREMENTS

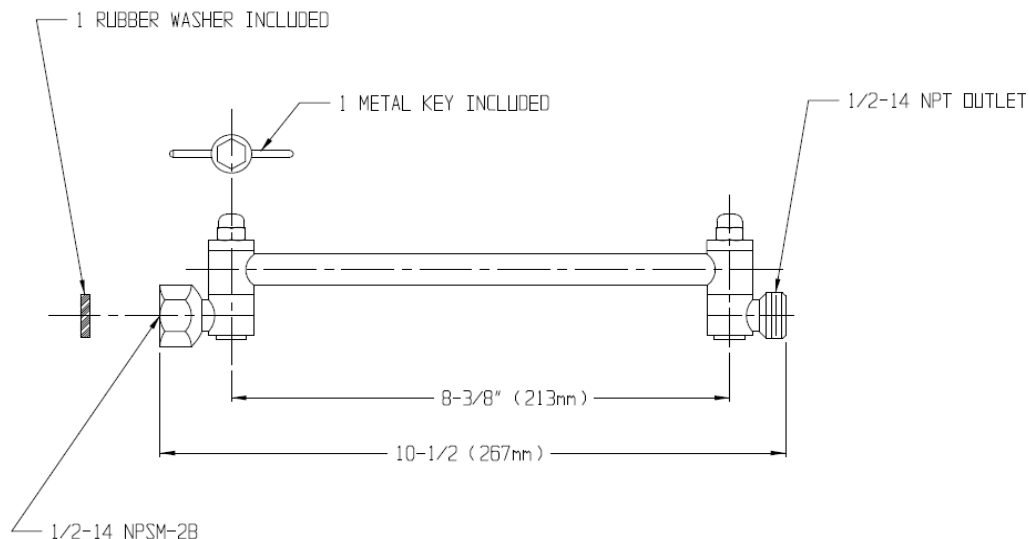

SPEAKMAN®

400 Anchor Mill Rd. New Castle, DE 19720 Phone: 800-537-2107
12/12 Visit us on the web at www.speakmancompany.com

Fax: 800-977-2747
92-S-2590-R2