spirax Sarco

Cast Iron Float & Thermostatic Steam Traps FT-15, FT-30, FT-75, FT-125

continuously at stean temperature, while non-condensible gas are released by a set arate internal balance pressure thermostation air vent.

The trap contains a float valve mechanism which modulates to discharge condensate continuously at steam temperature, while non-condensible gases are released by a sep- arate internal balanced pressure thermostatic air vent.	Model ->	FT-15	FT-30	FT-75	FT-125			
	РМО	15 psig	30 psig	75 psig	125 psig	Typical Ap All process equ		
	Sizes	3	All process equip controlled by mo trol valves; unit h heat exchangers tions.					
	Connections							
	Construction							
	Options	Gauge Glass, Vacuum Breaker				For Capacities See TIS 2.317		

Applications

equipment, particularly when y modulating temperature conunit heaters, air heating coils, ngers and steam main drip sta-

All 1-1/2", 2" 1-1/4" FT-75, FT-125 6 5 18 16 8 7

Limiting Operating Conc	litions		
Max. Operating Pressure (PMO)	FT-15:	15 psig	(1.0 barg)
	FT-30:	30 psig	(2.1 barg)
	FT-75:	75 psig	(5.2 barg)
	FT-125:	125 psig	(8.6 barg)
Max. Operating Temperature	`	,	superheat pressures
Pressure Shell Design C	onditi	ons	

PMA 125 psig/up to 450°F 9 barg/up to 232°C Max. allowable pressure

TMA 450°F/0-125 psig 232°C/0-9 barg Max. allowable temperature


Construction Materials						
Part	Material					
Body	Cast Iron	ASTM A126 CL B				
Cover Screws	Carbon Steel	ASTM A449				
Cover Gasket	Graphite					
Cover	Cast Iron	ASTM A126 CL B				
Valve Seat	Stainless Steel					
Valve Seat Gasket	Stainless Steel					
Ball Float	Stainless Steel					
Float Arm	Stainless Steel					
Air Vent Assembly	Stainless Steel					
Air Vent Head	Stainless Steel					
Air Vent Seat	Stainless Steel					
Seat Bracket	Stainless Steel					
Pivot Pins	Stainless Steel					
Head Bracket, Stop, Link Stainless Steel						
Valve Head	Stainless Steel					
	Part Body Cover Screws Cover Gasket Cover Valve Seat Valve Seat Gasket Ball Float Float Arm Air Vent Assembly Air Vent Head Air Vent Seat Seat Bracket Pivot Pins Head Bracket, Stop, L	PartMaterialBodyCast IronCover ScrewsCarbon SteelCover GasketGraphiteCoverCast IronValve SeatStainless SteelValve Seat GasketStainless SteelBall FloatStainless SteelFloat ArmStainless SteelAir Vent AssemblyStainless SteelAir Vent HeadStainless SteelAir Vent SeatStainless SteelSeat BracketStainless SteelPivot PinsStainless SteelHead Bracket, Stop, Link Stainless Steel				

Local regulation may restrict the use of this product below the conditions quoted. Limiting conditions refer to standard connections only. In the interests of development and improvement of the product, we reserve the right to change the specification.

All 3/4", 1" 1-1/4" FT-15, FT-30 1 7 8,18 5 15 6

Cast Iron Float & Thermostatic Steam Traps FT-15, FT-30, FT-75, FT-125

All 1-1/2", 2"

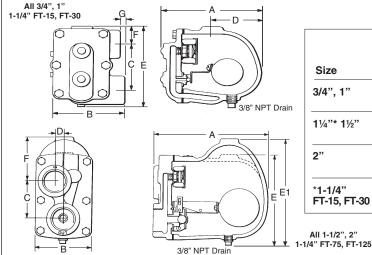

Dimensions (nominal) in inches and millimeters									
Size	Α	в	С	D	Е	E1	F	G	Weight
3/4", 1"	6.2 157	4.6 117	3.3 <i>84</i>	3 77	5.75 146	- -	1.3 33	0.3 7.9	9 lb 4.1 kg
1¼"* 1½"	8.5 216	4.25 108	3 76	0.7 17	_	8.4 213	3.5 <i>89</i>	- -	18 lb 8.2 kg
2"	9.8 249	4.9 124	4.9 124	0.12 3	9.1 230	-	1.9 49	_	26 lb 11.8 kg
*1-1/4" FT-15, FT-30	6.2 157	4.7 119	3 76	2.8 72	5.75 146	_	1.5 <i>38</i>	0.3 7.9	9.3 lb 4.2 kg

Sample Specification

Steam traps shall be of the mechanical ball float type having cast iron bodies, NPT connections, and all stainless steel internals. Incorporated into the trap body shall be a stainless steel balanced pressure thermostatic air vent capable of withstanding 45°F(25°C) of superheat and resisting waterhammer without sustaining damage. Internals of the trap shall be completely servicable without disturbing the piping.

Installation


A pipeline strainer should be installed ahead of any steam trap. Full port isolating valves should be placed to permit servicing. The trap should be installed below the drainage point of the equipment with a collecting leg before the trap, in a position so that the float arm is in a horizontal plane so that the float rises and falls vertically, and with the direction of flow as indicated on the body. Refer to IM-2-300 for complete instructions.

Maintenance

This product can be maintained without disturbing the piping connections. Complete isolation from both supply and return line is required before any servicing is performed. The trap should be disassembled periodically for inspection and cleaning of the valve head and seat, operating mechanism and air vent.

Worn or damaged parts should be replaced using a complete valve mechanism assembly and/or air vent assembly. Complete installation and maintenance instructions are given in IM-2-300, which accompanies the product.

Spare Parts

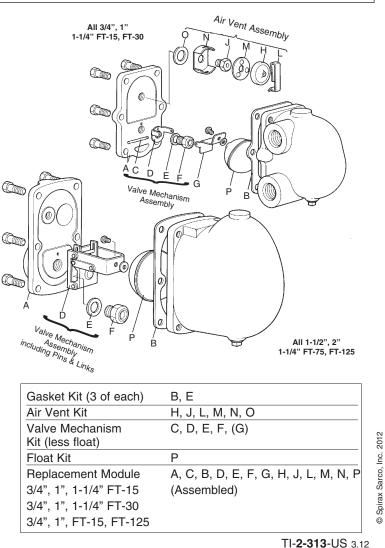

Spirax Sarco, Inc., 1150 Northpoint Blvd, Blythewood, SC 29016

Telephone: (803) 714-2000 FAX (803) 714-2222