
SIEMENS

Technical Instructions

Document No. 155-163P25 EA 599-1 July 7, 2011

Flowrite[™] EA 599 Series SKB/C Electronic Valve Actuator Proportional Control



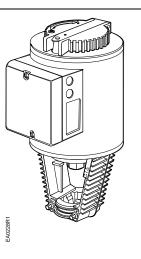

Description	The Flowrite EA 599 Series SKB/C Electronic Valve Actuator requires a 24 Vac supply and receives a 0 to 10 Vdc or a 4 to 20 mA control signal to proportionally control a valve. This actuator is designed to work with Flowrite VF 599 Series valves and Siemens Industry, Inc. standard valves with a 3/4-inch (20 mm) stroke.	
Features	Direct-coupled installation requires no special tools or adjustments	
	Visual and electronic stroke indication	
	Die-cast aluminum housing	
	Manual override	
	Spring return to fail-safe position	
	Automatic stroke calibration	
	Maintenance-free	
Application	These electronic actuators are designed to be used with Flowrite VF 599 Series valves with 3/4-inch (20 mm) stroke (SKB) and 1-1/2 inch (40 mm) stroke (SKC) in liquid service and steam service applications.	

Product Numbers

Actuator Stroke	Order Number	Actuator Prefix Code
3/4-inch (20 mm)	SKB62U	291
1-1/2 inch (40 mm)	SKC62U	294

Warning/Caution Notations

	WARNING:Personal injury/loss of life may occur in perform a procedure as specified.			you do not
	CAUTION:	Equipment dam do not follow a	hage or loss of data may procedure as specified.	occur if you
Specifications	Operating voltage	SKB/C62U	24 Vac ±20%	
-	Frequency SKB/C6	62U	50/60 Hz	
Power Supply	Power consumptio	n		
	SKB62U		18 VA/12W	
	SKC62U		28 VA/20W	
Control signal	Control input (Y) S	KB/C62		
J	Voltage		0 to 10 Vdc or	4 to 20 mA
	Maximum Impe	edance	0 to 10 Vdc, 1 4 to 20 mA, 25	
	Control input (Z) SI	KB/C62U		
	Resistance		0 to 1000 ohm	IS
	Voltage		0 to 1.6 Vdc	
Feedback signal	Control output (U)	SKB/C62U		
	Voltage		0 to 10 Vdc	
	Load impedant	ce	>500 ohms	
	Current		4 to 20 mA	
	Load impedance	ce	<500 ohms	
Equipment rating	Rating SKB/C62U		Class 2 accore	ding to UL, CSA
Function	Nominal stroke			
	SKB62U		3/4-inch (20 m	ım)
	SKC62U		1-1/2 inches (4	40 mm)
	Run time with cont SKB62U	rol operation (full stro	oke) <u>Open/Close</u> 120 seconds	<u>Spring Return</u> 15 seconds
	SKC62U		120 seconds	20 seconds
	Nominal Force SKI	B/C62U	Stroke	Force
	NC and 3-way	upper	0%	640 lbs (2800 N)
	NO and 3-way	by-pass	100%	1000 lbs (4400 N)
Housing	Mounting location		NEMA 1 (inter	ior only)
				3R rated when installed 5 weather shield. See
Ambient conditions	Ambient temperatu	ire (Operation)	5°F to 130°F (-15°C to 55°C)
	Media temperature	•	20°F to 337°F	(-7°C to 170°C)
Agency certification	UL		UL873	
	cUL Certified to	Canadian standard	C22.2 No. 24-	93
	CE Conformity as	per the EMC directive	e 89/336/EEC	
	Low voltage directi	ve	78/23/EEC	

Specifications,	Conduit opening	1/2-inch NPSM	
continued	Dimensions	See Figure 18	
	Weight		
Miscellaneous	SKB62U	18.9 lbs (8,6 kg)	
	SKC62U	22 lbs (10,0 kg)	
Accessories	Installation instructions are included with each accessory.		
		ASC1.6 Auxiliary switcl indicate the valve is in the position. Switching poin stroke position.	he 0% stroke
	E EAOT70RH	Switching capacity	24 Vac 4A resistive, 2A inductive
	Figure 1. Auxiliary Switch.	Lowest recommended current	10 mA
	LANGE CONTRACT	599-00418 Allows the stem to move free in valves which control fluids at temperatures below 32°F (0°C). Prevent ice crystal formation on the stem which may damage the packing.	
		Operating Voltage Heating Output	24 Vac 20W
	Figure 2. Packing Heating Element.		
	POZBEL	599-10065 The SKB/C listed to meet NEMA Ty requirements (a degree against rain, sleet, and o external ice formation) v Weather Shield and out fittings in the vertical pos <i>Kits</i> for replacement ultr cable ties.	pe 3R of protection damage from vhen installed with door-rated conduit sition. See <i>Service</i>

Figure 3. Weather Shield.

Service Kits	Circuit board replacement	4 668 5748 8
Service Kits	Manual override kit	4268 5510 8
	Plastic wiring compartment cover	4 104 5582 8
	Stem retainer kit Contains one stem nut (Figure 7, Item 6) a	nd one stom rotainer clin
	2-1/2 and 3-inch valves	599-10048
	4, 5, and 6-inch valves	599-10049
	Retainer clamp kit	599-10200
	Ultraviolet (UV) resistant cable ties (pkg. of 8)	538-994




WARNING:

This product contains a spring under high compression. Do not attempt to disassemble the actuator.

Operation

A 0 to 10 Vdc or a 4 to 20 mA control signal controls the actuator. The actuator, mounted on a valve, produces a stroke proportional to the input signal. When power is turned off or in the event of a power failure, the actuator spring returns the valve to its normal position.

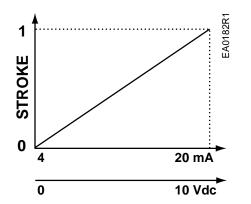

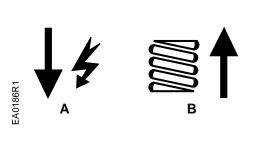


Figure 4. Input Signal.

Figure 5. Spring Return.

SKB/C Details

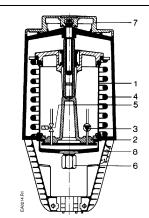


Figure 6. Actuator Design.

Legend

- 1. Pressure cylinder
- 2. Piston
- 3. Oscillating pump
- 4. Return springs
- 5. Bypass valve
- 6. Coupling piece (stem nut)
- 7. Manual setting knob
- 8. Position indicator

Mounting and Installation

The vertical position is the required position for mounting and the only position for NEMA Type 3R rating with the Weather Shield. Acceptable mounting positions are shown in Figure 7.

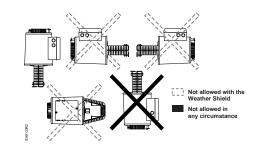


Figure 7. Acceptable Mounting Positions.

Allow four inches (100 mm) around the sides and back of the actuator and eight inches (200 mm) above and to the front of the actuator.

See dimensions in Figure 18.

Detailed installation instructions for field mounting are shipped with the actuator.

CAUTION:




Use care when removing the knockout. Do not damage the circuit board. Use the top knockout position, if possible.


Start up Check the wiring for proper connections.

NOTE: The valve body assembly determines the complete assembly action.

Override Control

The override control input (Z) has three modes of operation:

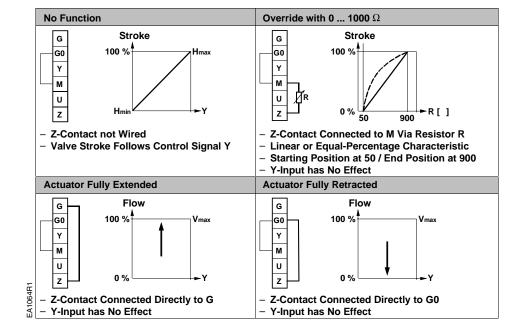



Start-up, continued

Stroke Calibration

To determine the stroke positions 0% and 100% in the valve, calibration is required when the valve/actuator are commissioned for the first time. The actuator must be mechanically connected to a valve and must have a supply voltage of 24 Vac. Repeat the calibration procedure as often as necessary

CAUTION:

Before starting calibration, be sure that the manual adjuster is set to **Automatic** for the actual values to register.

There is a slot on the printed circuit boards for the actuators. To initiate the calibration procedure, the contacts inside this slot must be short-circuited (possibly with a screwdriver). See Figure 8.

Automatic calibration proceeds as follows (see Figure 9):

- Actuator runs to the 0% stroke position (1), green LED flashes.
- Actuator then runs to the 100% stroke position (2), green LED flashes.
- Measured values are stored in the EPROM.
- The actuator now moves to the position defined by control signal Y or Z (3), and the green LED now glows steady (normal operation).
- Throughout this procedure, output U is inactive, meaning the values only represent actual positions when the green LED stops flashing and remains on continuously.



Figure 8.

Stroke 0 %

Figure 9. Automatic Calibration

LED	Display	Function	Action
	ON	Normal Operation	Automatic operation
Green	Flashing	Stroke calibration In Progress	Wait for calibration to be completed (LED stops flashing)
Red	ON	Faulty stroke calibration	 Check mounting Restart stroke calibration (by short-circuiting calibration slot) Replace electronics
	Flashing	Inner valve jammed	Check the valve
	OFF	No power supplyFaulty electronics	-Check mains -Replace electronics

Table 1. LED Status.

Start-up, continued

Standard Features

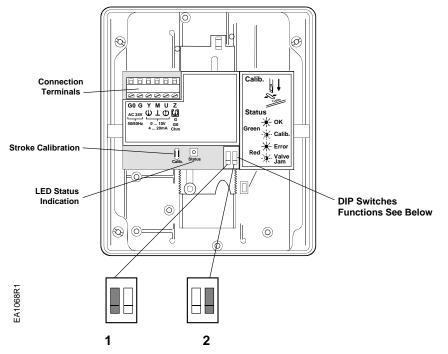


Figure 10. DIP Switches.

DIP Switches (From Left to Right)	1 Selection of Control Signal	2 Selection of Flow Characteristic
ON	4 to 20 mA	Modified*
OFF (Factory Settings)	0 to 10 Vdc	Default

* Changing the default setting will modify an equal percentage valve to a linear flow characteristic. When set to default, the flow characteristic is determined by the valve body.

Start-up,	Actuator pressure cylinder moves:	
continued	Outward (0 to 1): Valve opens.	
Normally Closed Valve	Inward (1 to 0): Valve closes.	
Normally Open Valve	Actuator pressure cylinder moves:	
	• Outward (0 to 1): Valve closes.	
	Inward (1 to 0): Valve opens.	
Three-way Valve	Actuator pressure cylinder moves:	
	• Outward (0 to 1): Valve opens between ports NC and C.	

• Inward (1 to 0): Valve opens between ports NO and C.

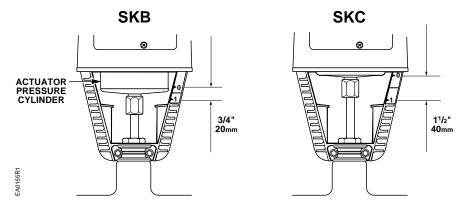


Figure 11. Valve Stem Travel Indication.

Start-Up, continued

Release the crank arm of the manual setting knob located on the top of the actuator. See Figure 12.

Manual operation A red scale appears in a window in the manual setting knob as you turn the crank clockwise, (see Figure 12). This scale indicates the effective valve stroke in millimeters.

Each complete revolution (360°) is equal to 2 mm of stroke. The numbers 2 to 20 or 2 to 40 are visible depending on the stroke of the actuator.

If a signal is sent to the actuator while it is in manual operation, the actuator will move but the control will not be accurate. The valve cannot be commanded to its 0% position while in manual operation.

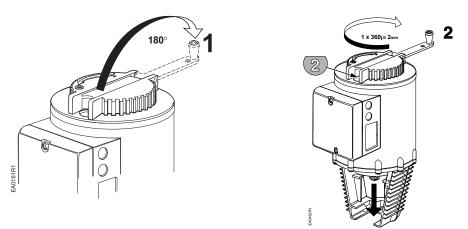


Figure 12. Manual Operation.




CAUTION:

Do not attempt automatic operation of the actuator when the red scale is visible.

Automatic operation When returning to automatic control, turn the crank arm of the manual setting knob counterclockwise until the red numbers disappear. It is essential that the window is clear and the crank arm is snapped into position. See Figure 13.

NOTE: It is possible to secure the manual override handle in place by inserting a $\# 8 \times 1-1/4$ -inch or M5 $\times 30$ mm thread-forming screw through the handle.

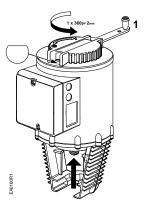

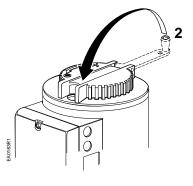


Figure 13. Automatic Operation.

Wiring

Do not use autotransformers. Use earth ground isolating step-down Class 2 transformers.

Determine supply transformer rating by summing total VA of all actuators used. The maximum rating for Class 2 step-down transformer is 100 VA.

Actuator	Power Consumption	Actuators per Class 2 Supply Circuit* (80% of transformer VA)
SKB62U	17 VA	4
SKC62U	28 VA	2

* Operating more actuators requires additional transformers or separate 100 VA power supplies.

Wiring Diagrams The position output signal U will switch from 0 to 10 Vdc to 4 to 20 mA when a 4 to 20 mA input signal is selected and used on the Y terminal.


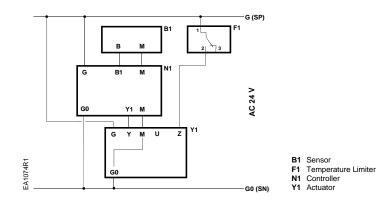


Figure 14. Connecting Terminals.


24 Vac		
G	System potential (SP)	
G0	System neutral (SN)	
Y	Control input 0 to 10 Vdc or 4 to 20 mA	
	(DIP switch selectable)	
Z	Override control	
Μ	Measuring neutral	
U	Output for 0 to 10 Vdc or 4 to 20 mA measuring	
	voltage. See Table 1.	

Table 1.	Actuator	Output	Signal.
----------	----------	--------	---------

Actuator Input Signal	Receiving Impedance	
Actuator Input Signal	Low (<500 ohm)	High (>10K ohm)
0 to 10 Vdc	0 to 20 mA	0 to 10 Vdc
4 to 20 mA	4 to 20 mA	2 to 10 Vdc

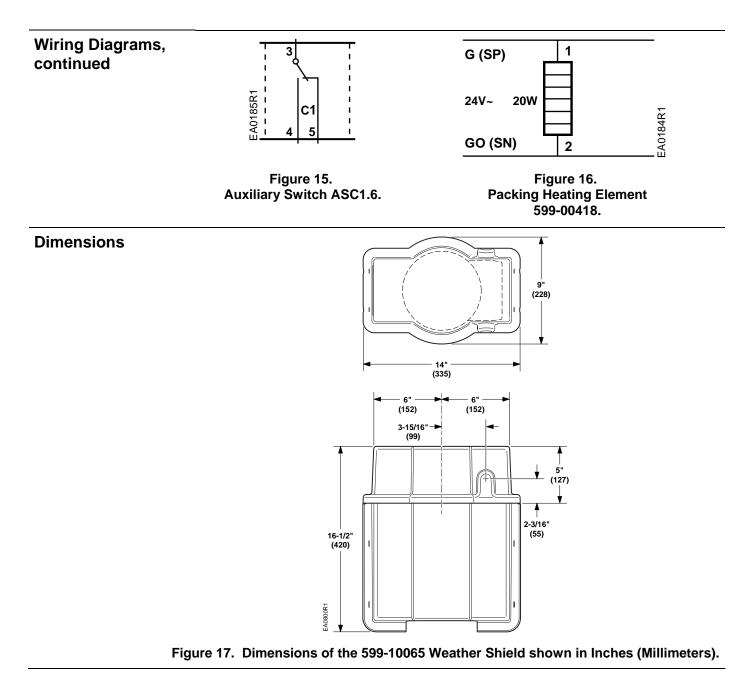

Dimensions, continued

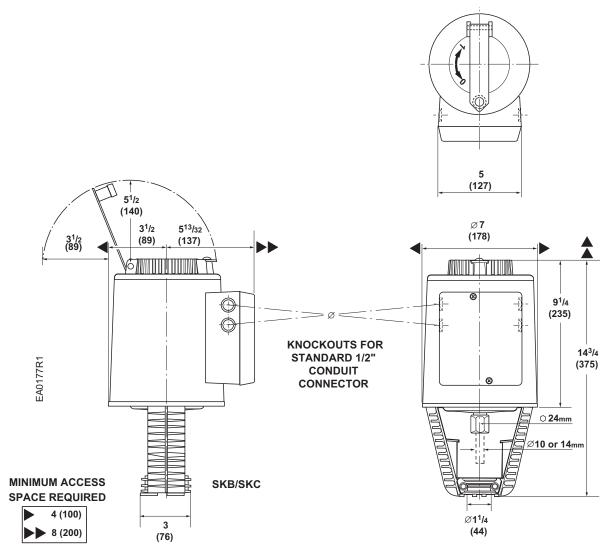



Information in this publication is based on current specifications. The company reserves the right to make changes in specifications and models as design improvements are introduced. Flowrite is a trademark of Siemens Industry, Inc. Other product or company names mentioned herein may be the trademarks of their respective owners. © 2011 Siemens Industry, Inc.

Siemens Industry, Inc. Building Technologies Division 1000 Deerfield Parkway Buffalo Grove, IL 60089 USA 1-847-215-1000 Your feedback is important to us. If you have comments about this document, please send them to sbt_technical.editor.us.sbt@.siemens.com