



**C. MAINTENANCE**

The only maintenance operation required is the removal of dirt and lint from the condenser of the water cooler. Inspection should be made at 3-month intervals. Disconnect power supply cord, then clean condenser with small stiff non-wire brush when required. Observance of this procedure will ensure adequate air circulation through condenser so operation is efficient and economical.

**D. OVERLOAD PROTECTION (water cooler)**

Compressor motor, where used, is equipped with automatic reset protector which will disconnect motor from line in case of an overload.

**E. LUBRICATION (water cooler)**

This unit is equipped with a hermetically sealed compressor and requires no additional lubrication. The fan motor on this unit seldom needs oiling, but if required, a few drops of SAE 10 oil should be used.

**F. TO DISCONTINUE USE OF WATER COOLER AND WATER FOUNTAIN**

1. Close water shut off valve.
2. Provide container to catch water to be drained.
3. Disconnect the water supply line at the water cooler "WATER SUPPLY" tube. Disconnect water cooler "DRAIN/REMOTE COLD WATER" tube from water fountain "WATER IN" tube. Place container under water cooler "DRAIN/REMOTE COLD WATER" tube, then push and hold push button on the water cooler until water cooler is completely drained. Place container under water fountain "WATER IN" tube, then push and hold push button on the water fountain until water fountain is completely drained.
4. Disconnect the power supply cords.
5. Plug both water cooler "DRAIN/REMOTE COLD WATER" tube, and water fountain "WATER IN" tube.
6. ALWAYS DRAIN ALL WATER WHEN FREEZING TEMPERATURES ARE ANTICIPATED AND BEFORE SHIPPING THE WATER COOLER.

\*American With Disabilities Act

**WARNING**

The warranty and the Underwriters' Laboratory listing for this machine are automatically voided if this machine is altered, modified, or combined with any other machine or device. Alteration or modification of this machine may cause serious flooding and/or hazardous electrical shock or fire.

**EXCEPT AS SET FORTH HEREIN, THE MANUFACTURER MAKES NO OTHER WARRANTY, GUARANTEE OR AGREEMENT EXPRESSED, IMPLIED OR STATUTORY, INCLUDING ANY IMPLIED WARRANTY OR MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.**

OASIS INTERNATIONAL

222 East Campus View Blvd. • Columbus, OH 43235 U.S.A.


1-800-950-3226

www.oasiscooler.com

OASIS is a registered trademark of LVD Acquisition, LLC dba Oasis International  
A WBENC - Certified Women's Business Enterprise


©2014 LVD Acquisition, LLC  
030099-350 Rev D

WATER FOUNTAIN  
RIGHT SIDE PANEL

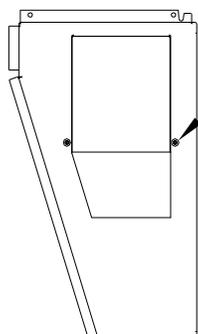


2 T15 TORX HEAD  
SCREWS (PROVIDED)

WATER COOLER  
LEFT SIDE PANEL

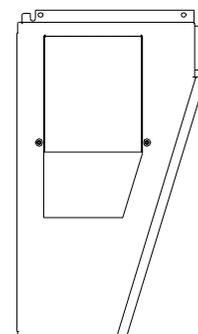


PATCH PLATE LOCATION  
FOR COOLER CONFIGURED  
FOR RIGHT SIDE LOW

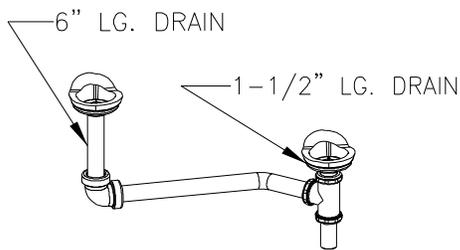

DRAIN CONFIGURATION  
RIGHT SIDE LOW

MOUNT DRAINS WITH PROVIDED  
1-1/4" LONG SCREWS



PATCH PLATE LOCATION  
FOR COOLER CONFIGURED  
FOR RIGHT SIDE HIGH

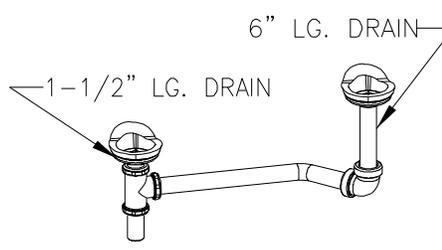

DRAIN CONFIGURATION  
RIGHT SIDE HIGH


MOUNT DRAINS WITH PROVIDED  
1-1/4" LONG SCREWS

**OASIS® VERSACOOLER® II MODELS**  
**PACSL, P8ACSL, P8ACSL(E), P8ACSL, P8ACSL(E), PV8ACSL, PV8ACSL, PGACSL, PGACSL, PG8ACSL**  
**SUNROC MODELS ADA8ACB, ADA8ACBHF, ADAF8ACB, ADAF8ACBHF**

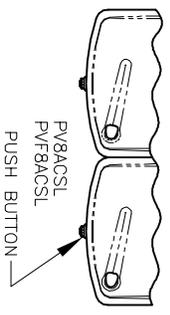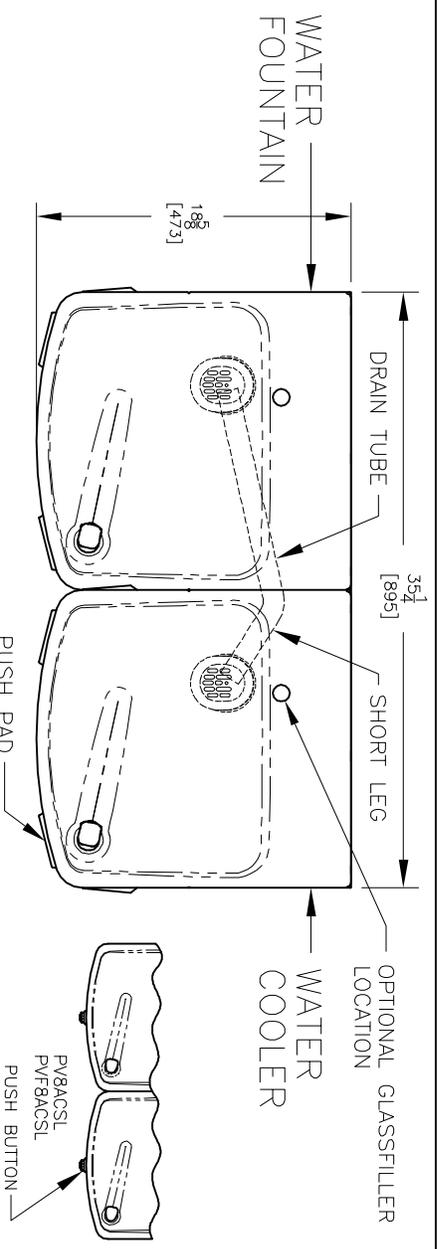

3/8 O.D. WATER INLET WITH STRAINER  
 CONNECT COOLER REMOTE OUTLET TO SUPPLIED  
 FOUNTAIN WATER INLET WITH FITTING

PUSH PAD  
 WATER COOLER AND FOUNTAIN

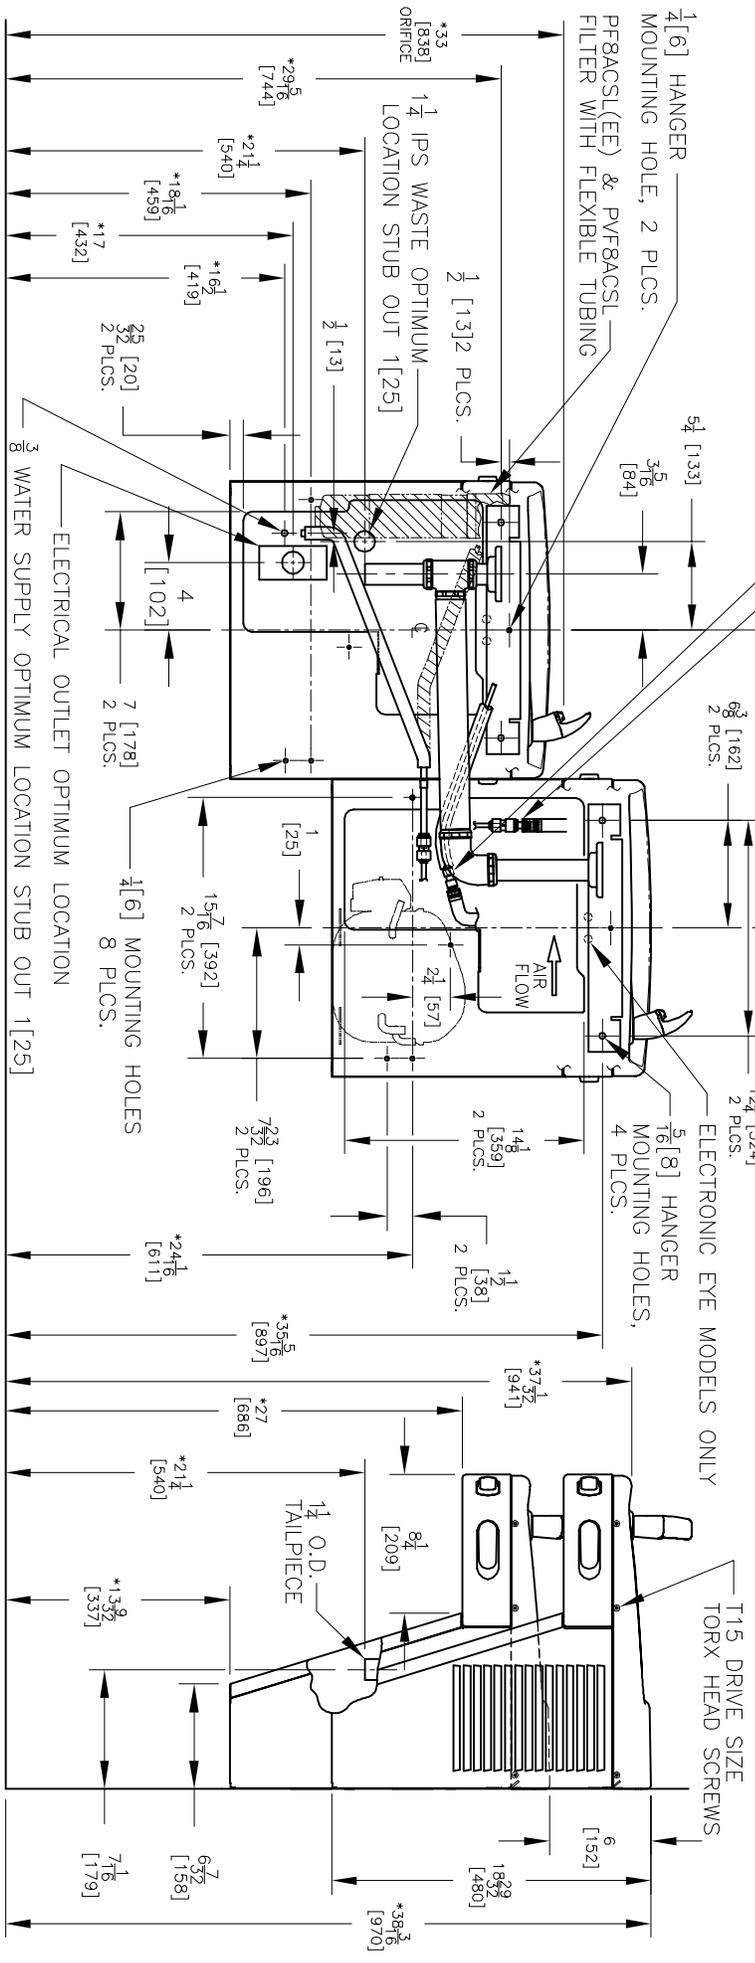

115 DRIVE SIZE  
 TORX HEAD SCREWS

**NOTES:**

- TRAP, STOP VALVE AND ELECTRICAL OUTLET NOT FURNISHED.
- ALLOW 4 INCHES [102 MM] MIN. PER SIDE FOR VENTILATION.
- RECOMMENDED ADULT BARRIER FREE HEIGHT INSTALLATION SHOWN. REDUCE HEIGHT BY 3 INCHES FOR INSTALLATIONS USED PRIMARILY BY CHILDREN AGES 12 AND YOUNGER. UNIT SHALL ALSO HAVE A MINIMUM CLEAR FLOOR SPACE 30[760] BY 48[1220]. ADJUST VERTICAL DIMENSIONS AS REQ'D TO COMPLY WITH FEDERAL, STATE, AND LOCAL CODES.
- ALL DIMENSIONS ARE IN INCHES. DIMENSIONS IN BRACKETS [ ] ARE IN MILLIMETERS.

**RIGHT SIDE HIGH  
 CONFIGURATION**



