INSTALLATION INSTRUCTIONS



For more information contact...

WOODFORD MANUFACTURING COMPANY

2121 Waynoka Road, Colorado Springs, Colorado 80915 • Phone: (800) 621-6032 • Fax: (800) 765-4115

To view our complete product line visit: www.woodfordmfg.com or email: sales@woodfordmfg.com

A Division of WCM Industries Inc.

AAL 6E 0 67

Model 65 & 67

Automatic Draining Wall Hydrant



Model 65 with Single Check Vacuum Breaker

Model 67 with Double Check Backflow Preventer


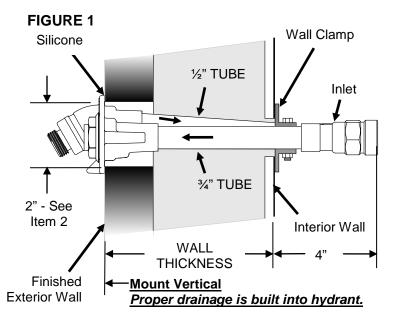


FIGURE 2

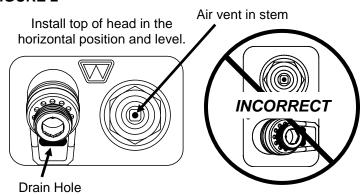

The hydrant must be properly installed and operated to insure drainage. Improperly installed or operated hydrants may freeze and burst in freezing weather.

INSTALLATION INSTRUCTIONS:

- 1. Before installation, flush supply line to remove any debris.
- 2. Cut a 2" X 3 7/8" opening through the wall in the desired location and insert the faucet from the outside. *FIGURE 1*
- 3. Install top of head in the horizontal position and level. *Do not install in vertical position.*FIGURE 2
- Note: Proper drainage is built into hydrant:
 <u>FIGURE 1</u>
 (½" tube must slope slightly down toward inlet.)
 (¾" tube must be level.)
- 5. Apply silicone or equivalent to seal and help support hydrant *FIGURE 1*
- 6. Air vent in stem *must not* be plugged to ensure proper draining. *FIGURE 2*
- Hydrant Inlet must be in a warm area. <u>FIGURE 1</u>
- 8. Install adjustable Wall Clamp over water tubes and slide snug to interior wall. *FIGURE 1*

Note: For solder connection, open hydrant to full open position before soldering. Excessive heat can damage valve seat rubber.

OPERATING INSTRUCTIONS:

To OPEN, turn stem counter-clockwise

To **CLOSE** and **DRAIN**, turn stem clockwise until seated and water drains out the drain hole.