

Installation Instructions

Moments Lavatory Faucet with SELECTRONIC™ Technology 2506.1XX

CAUTION: Use only American Standard supplied cable sets. Using non-AS supplied cables, or cutting, splicing or modifying any components will void the warranty.

Product No.'s & Options	1
Specifications	2
How to Install	2-3
Electrical Hook-up	4-6
Maintenance	7-8
FAQ,s	9
Replacement Parts	10

M968506 REV. 1.1

American Standard

NOTE TO INSTALLER: Please give this manual to the customer after installation.

To learn more about American Standard Faucets visit our website at: www.us.amstd.com or U.S. customer's e-mail us at: sensor@americanstandard.com

For Parts, Service, Warranty or other Assistance,
please call **(855) 752-9259 (In Canada: 1-800-387-0369)**
(In Toronto Area only: 1-905-3061093)

Thank you for selecting American-Standard...the benchmark of fine quality for over 100 years. To ensure that your installation proceeds smoothly--please read these instructions carefully before you begin.

UNPACKING

All American Standard Faucets Are Water Tested At Our Factory. Some Residual Water May Remain In The Faucet During Shipping.

1. Remove the fitting and loose items from the carton. The illustration below shows the fitting and all loose items after they have been removed from the carton. Some items may be packaged partially assembled to other items.

- | | |
|--|---|
| 1. Selectronic Spout Assembly | 7. 10 ft. Extension Wire (for 2506.175/172 series) |
| 2. Mounting Kit | 8. Y-Connector |
| 3. Electrical Enclosure | 9. Mixing Valve (optional must be ordered separately) |
| 4. Supply Hose | 10. Key for vandal resistant aerator |
| 5. DC Power Supply (for 2506.155/153 series) | 11. 27" Extension Wire |
| 6. AC Power Supply (for 2506.165/162 series) | 12. Installation Instructions. |

How to order the Selectronic Product

1. Choose Power Supply
2. Choose Desired Spout

Base Product

- Single Hole Sink
- Single Inlet



Mixing Valve (optional)



- 1 and 3 Hole Sinks
- Hot and Cold Inlets

B a s e P r o d u c t

Mixing Valve

MODEL NUMBER:

- **DC POWERED; single inlet**
 - 2506.155 with cast spout, 0.5 GPM vandal resistant aerator.
 - 2506.153 with cast spout, 2.2 GPM vandal resistant aerator.
- **AC POWERED; single inlet**
 - 2506.165 with cast spout, 0.5 GPM vandal resistant aerator.
 - 2506.162 with cast spout, 2.2 GPM vandal resistant aerator.
- **MULTI AC POWERED; single inlet**
 - 2506.175 single inlet operates up to 15 units in series from one AC power supply, 0.5 GPM vandal resistant aerator.
 - 2506.172 single inlet operates up to 15 units in series from one AC power supply, 2.2 GPM vandal resistant aerator.

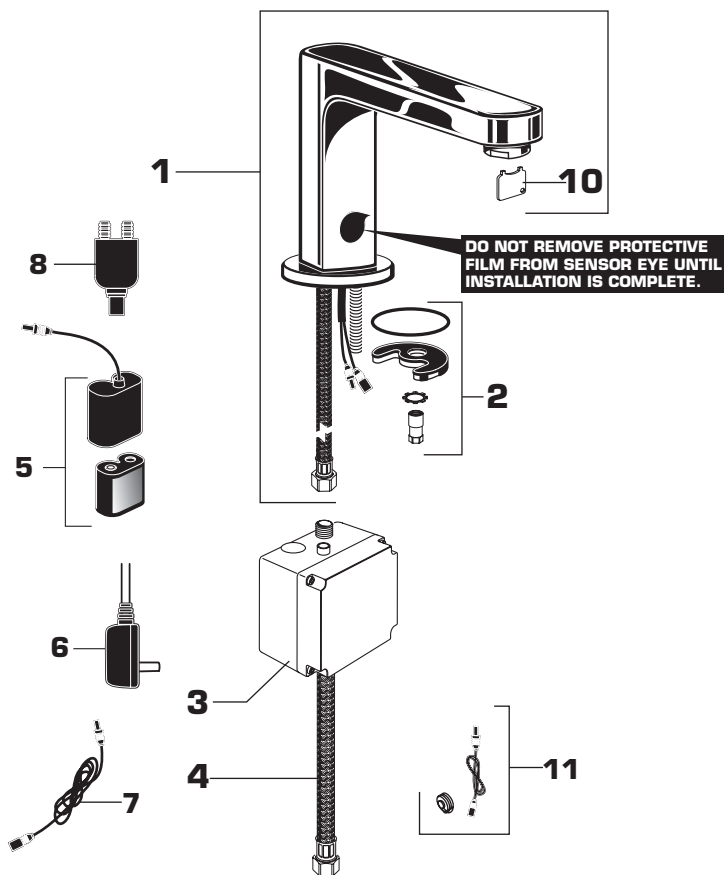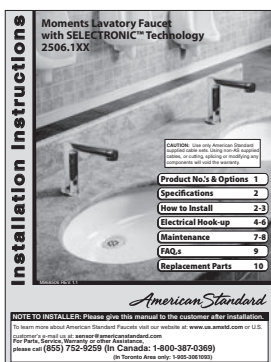

- **OPTIONAL Mixing Valve**
 - 605XTMV Thermostatic mixing valve, flex hoses 3/8" compression 20" hose length.

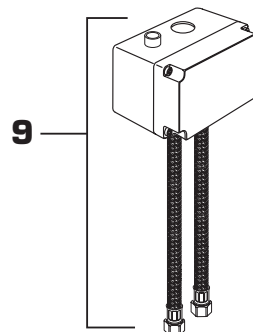
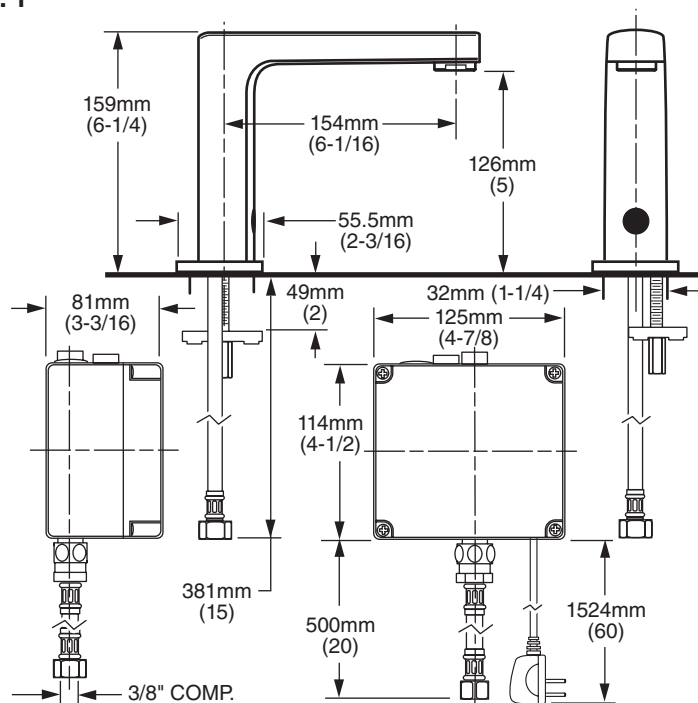


Fig. 1

Roughing-in Dimensions

GENERAL DESCRIPTION:

Electronic faucet with proximity operation. Vandal resistant solid brass construction single post mounting. Operates on DC (battery) or AC permanent power. Water pressure range from 20 to 125 psi. In-line strainer for solenoid is integral. Single inlet 3/8 compression, built-in checks, and flexible stainless steel 15" reach inlet hose for spout connection.

CODES AND STANDARDS:

These products meet or exceed the following coded standards:


ANSI A117.1
ASME A112.18.1
CSA B 125
NSF 61/Section 9



CAUTION: Use only American Standard supplied cable sets. Using non-AS supplied cables, or cutting, splicing or modifying any components will void the warranty.

TOOLS REQUIRED; Fig. 2

- 1 Channel Locks
- 2 Adjustable Wrench
- 3 Plumbers' Putty or Caulking
- 4 Phillips Screwdriver
- 5 Flat Blade Screwdriver
- 6 Electric Drill & 1/4" Drill Bit
- 7 Tape Measure

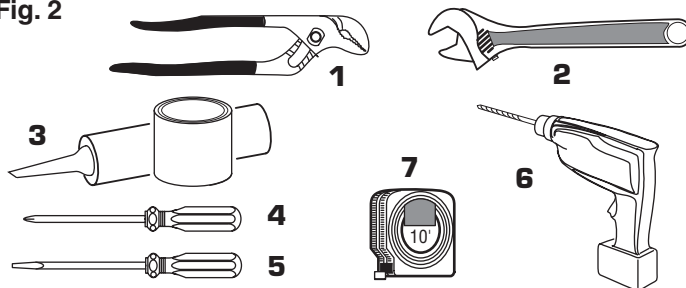Fig. 2

INSTALLATION

1 INSTALL SPOUT ASSEMBLY; Fig. 1

CAUTION



Turn off hot and cold water supplies before beginning

1. Connect the two 27" EXTENSION CABLES (1) to the Faucet Sensor Cables. **Fig. 1.**

2. Insert EXTENSION CABLES (1), FLEX HOSE (2) and SPOUT SHANK (3) through center hole of mounting surface. **Fig. 1a.**

3. Assemble "C" WASHER (4), STAR WASHER (5) and LOCKNUT (6) onto threads of SPOUT SHANK (7) from underside of mounting surface. **Fig. 1b.**

4. Align FAUCET and tighten LOCKNUT (6). **Fig. 1b.**

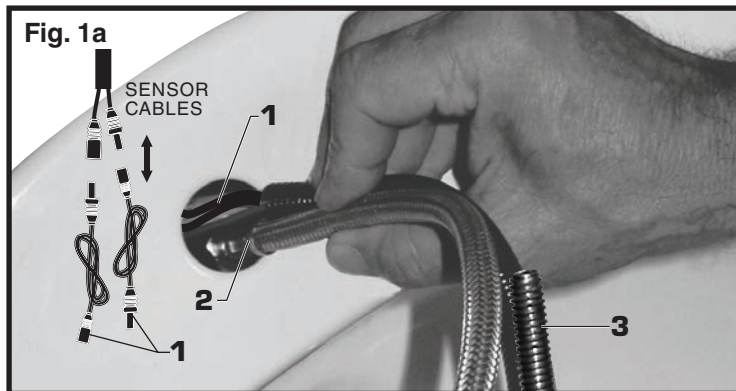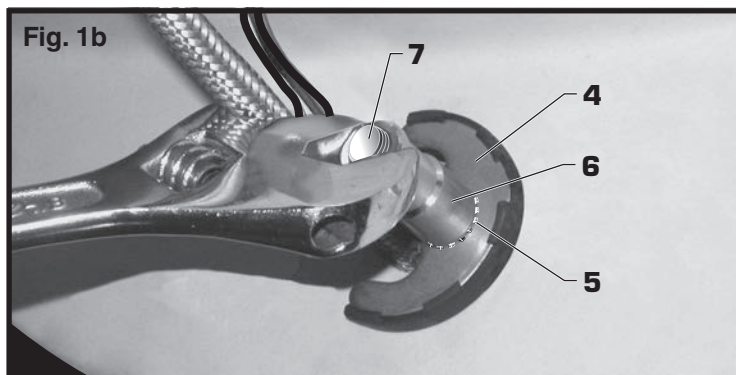Fig. 1a**Fig. 1b**

2 MOUNT ENCLOSURE; Fig. 2

1. Determine location of ENCLOSURE (1). It must be located with-in the 14" (356mm) by 21" (533mm) shaded area shown in **Figure 2** in order for electrical connections from the spout assembly to be made.
NOTE: ENCLOSURE SUPPLY HOSE is 20". Distance between wall supply and ENCLOSURE (1) must be taken into consideration.

2. Remove 4 screws from COVER (2) and pull off COVER (2). Hold the ENCLOSURE (1) in desired location and mark the four mounting hole locations as shown. **Fig. 2.**

NOTE: For AC installation see "AC VERSION; Fig. 2." Make power supply connection before mounting ENCLOSURE (1) to wall.

3. The ENCLOSURE (1) works best if secured to a wall stud or cross brace within the wall, using the SCREWS (3) supplied. If the ENCLOSURE (1) is to be installed on a tile or plaster wall the ANCHORS (4) and SCREWS (3) should be used.

4. For installations on drywall or tiled walls; use ANCHORS (4) and SCREWS (3) for securing ENCLOSURE (1) to finished wall. Drill four 1/4" dia. holes a minimum of 1-3/4" deep. Insert the four ANCHORS (4) flush with face of the finished wall. Align the ENCLOSURE (1) and Install the MOUNTING SCREWS (3). Tighten to secure ENCLOSURE (1) to mounting surface.

3 CONNECT SPOUT HOSE TO ENCLOSURE; Fig. 3

1. Connect SUPPLY NUT (1) from spout assembly to nipple on top of ENCLOSURE (2). Tighten with adjustable wrench to make a water tight connection. **Fig. 3.**

4 CONNECT WATER SUPPLY TO ENCLOSURE AND WALL SUPPLY; Fig. 4

NOTE; If using the optional Mixing Valve See Sheet #M968808 for installation instructions.


1. Insert FIBER WASHER (4) into SUPPLY NUT (1) on ENCLOSURE (2).

2. Connect SUPPLY NUT (1) on ENCLOSURE (2) to FLEXIBLE SUPPLY HOSE (3). Tighten to make a water tight connection. Use two wrenches to tighten if necessary. **Fig. 4.**




3. Connect FLEXIBLE SUPPLY (3) directly to wall supply. Connection on FLEXIBLE SUPPLY (3) is 3/8" compression. Use adjustable wrench to tighten connection. Do not over tighten. **Fig. 4a.**

Note: FLEXIBLE SUPPLY (3) measures 20" from the bottom of the ENCLOSURE (1) base. If additional supply length is required, installer must purchase parts separately.

Important: If FLEXIBLE SUPPLY (3) is too long, loop to avoid kinking.

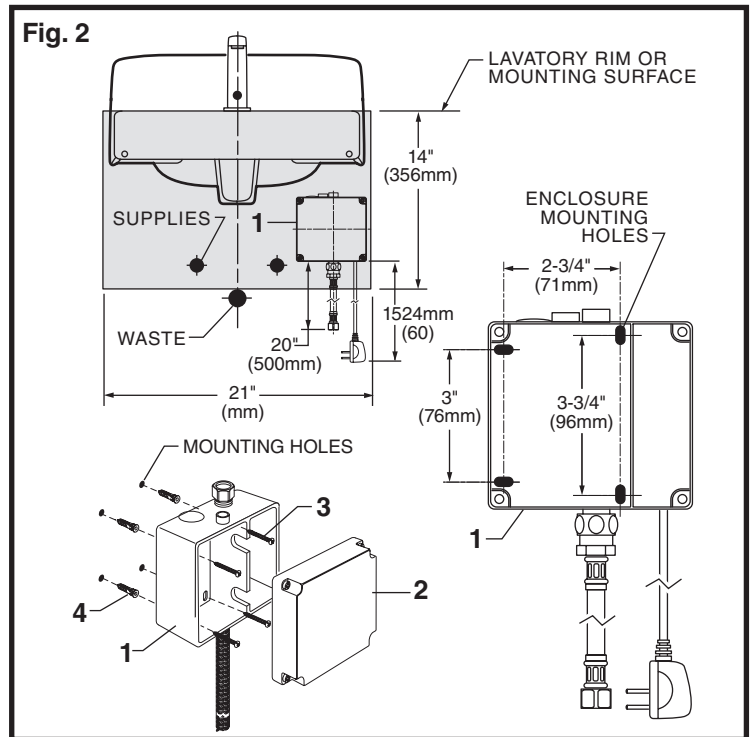

NOTE: If using Mixing Valve (optional) See Sheet #M968808 for installation instructions.

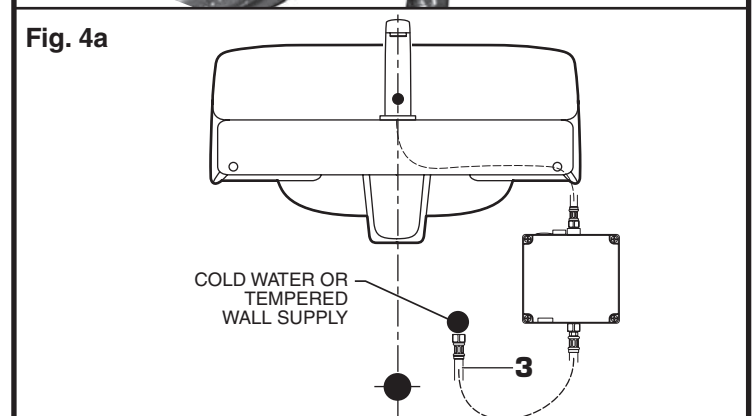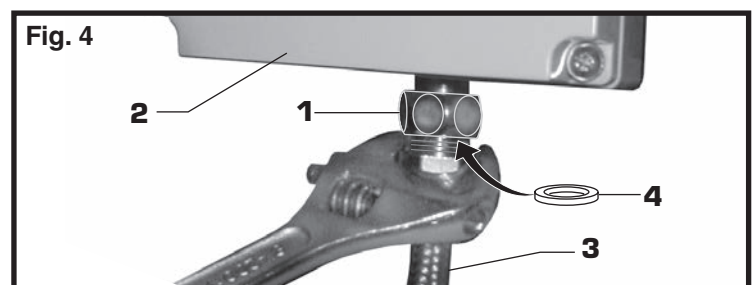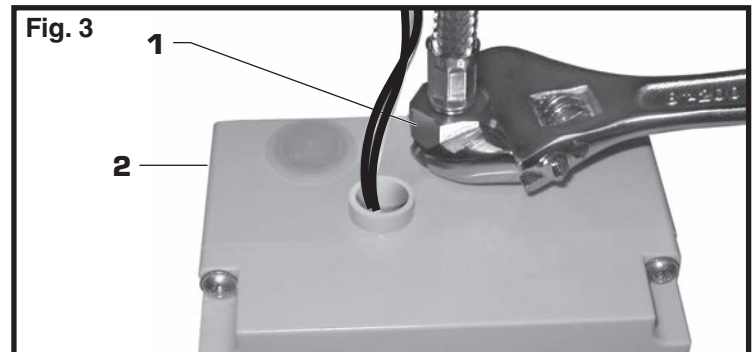

ELECTRICAL INSTALLATION

1 DC VERSION (BATTERY); Fig. 1

1. Remove ENCLOSURE COVER (1). **Fig. 1.**
2. Feed the EXTENSION CABLES (2) from the Faucet through the top of ENCLOSURE (3). **Fig. 1a.**
3. Install BATTERY (4) if not already installed, make sure the shape of the BATTERY (4) follows the shape of the BATTERY HOLDER (5). **Fig. 1b.**
4. Insert the BATTERY CONNECTOR (5a) through GROMMET (6) as shown. **Fig. 1c.**
5. Connect SOLENOID CABLE (7) and BATTERY CONNECTOR (5a) to EXTENSION CABLES (2) from Faucet Sensor. **Fig. 1d.**
6. Replace ENCLOSURE COVER (1). Tighten cover screws firmly.

CAUTION: Use only American Standard supplied cable sets. Using non-AS supplied cables, or cutting, splicing or modifying any components will void the warranty.

Fig. 1

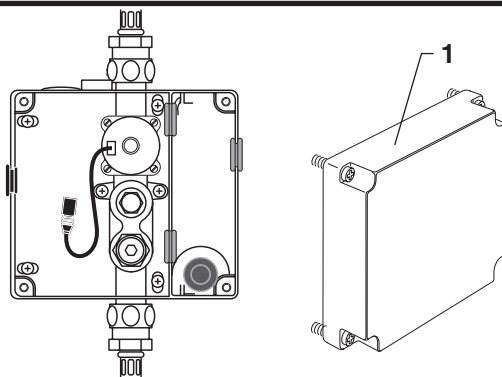


Fig. 1a

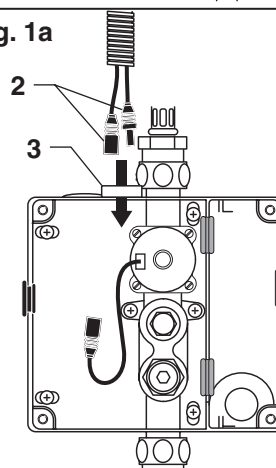


Fig. 1b

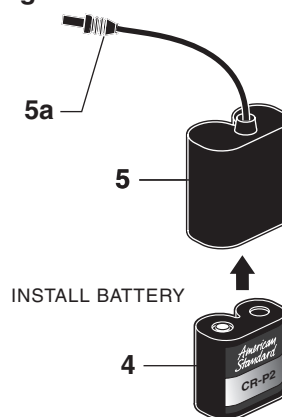


Fig. 1c


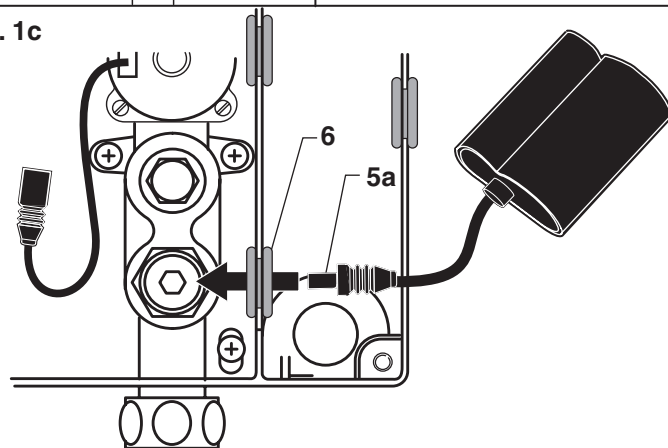


Fig. 1d

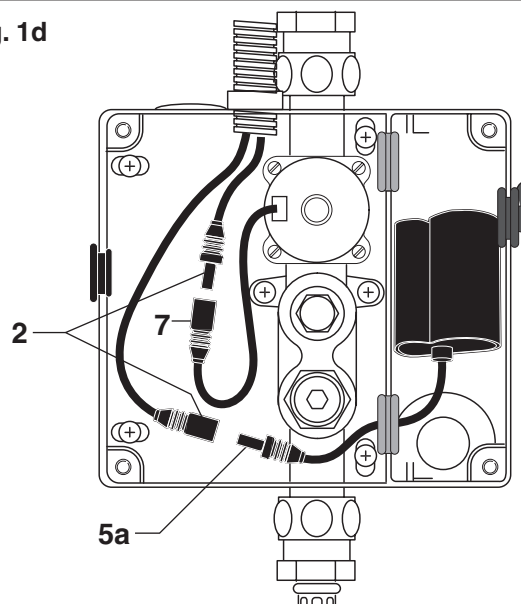

2 AC VERSION; Fig. 2

CAUTION

Before opening ENCLOSURE disconnect AC power supply.

NOTE: For AC installation see Fig. 2b.
Make power supply connection before mounting ENCLOSURE (1) to wall.

1. Remove ENCLOSURE COVER (1). **Fig. 2.**

2 Feed the EXTENSION CABLES (2) from the Faucet through the top of ENCLOSURE (3). **Fig. 2a.**

3. Remove SPLIT PLUG (4) from POWER SUPPLY GROMMET (5). Insert POWER CORD (7) into SPLIT PLUG (4). Insert POWER CORD CONNECTOR (6) through POWER SUPPLY GROMMET (5). Push SPLIT PLUG (4) into POWER SUPPLY GROMMET (5) to seal. **Fig. 2b.**

4. Insert POWER CORD CONNECTOR (6) through GROMMET (8) as shown.

5. Connect SOLENOID CABLE (9) and POWER CORD CONNECTOR (6) to EXTENSION CABLES (2) from Faucet Sensor. **Fig. 2d.**

6. Replace ENCLOSURE COVER (1). Tighten cover screws firmly.

Fig. 2

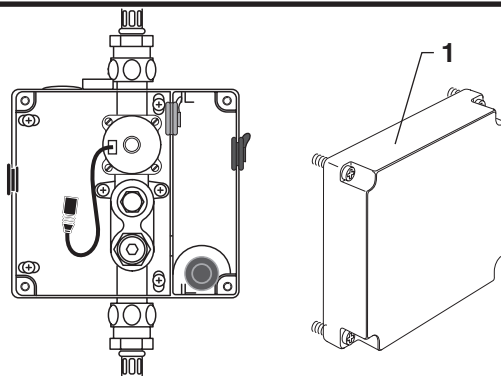


Fig. 2a

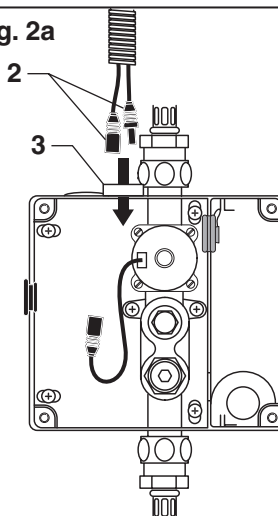


Fig. 2b

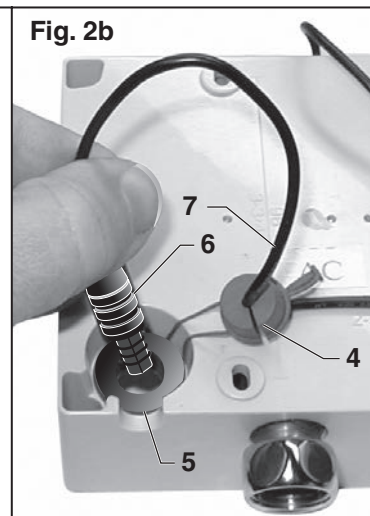


Fig. 2c



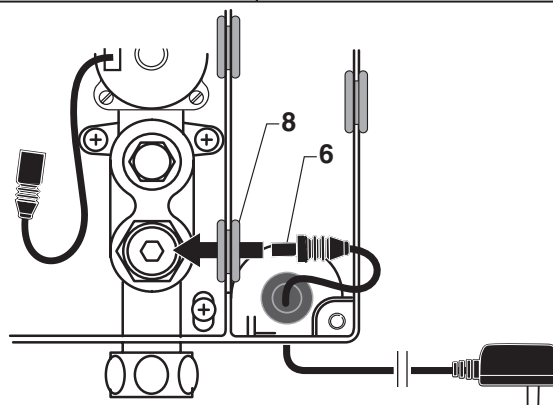


Fig. 2d

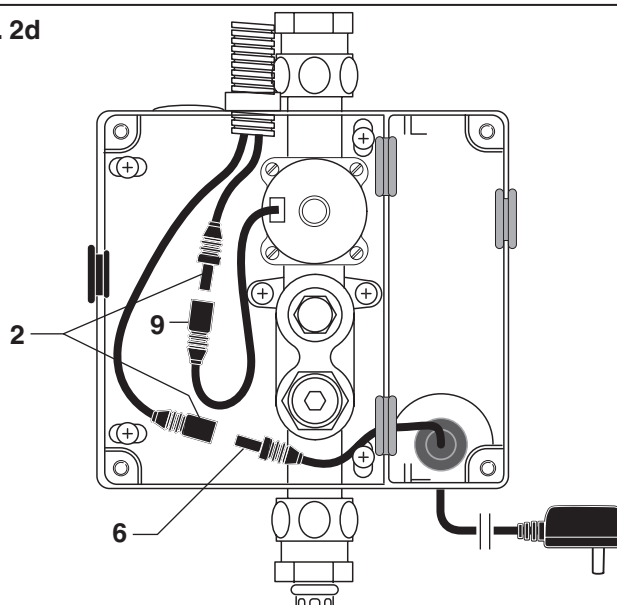


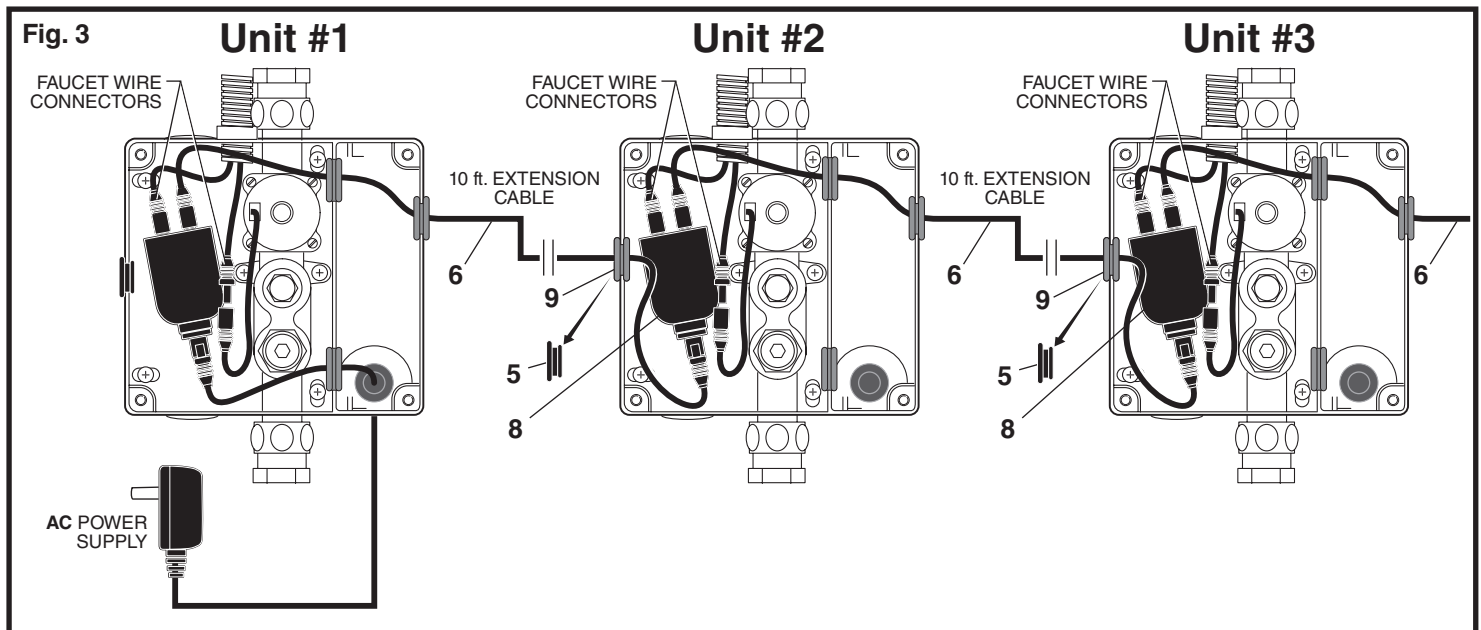

3 FOR AC-VERSION (MULTI HOOK-UP); Fig. 3, 3a, 3b

NOTE: For AC installation see “AC VERSION; Fig. 2b.”
Make power supply connection before mounting ENCLOSURE (1) to wall.

1. Remove COVERS from all ENCLOSURES (2). **Fig. 3.**
2. Remove SOLID BLACK INSERT (5) from left side of all ENCLOSURES (2), except from **Unit #1**. Replace with GRAY GROMMET (9). (Supplied with each Faucet). **Fig. 3.**
3. **All Units:** Connect the two 27" EXTENSION CABLES (4) to the Faucet Sensor Cables. Feed the 27" EXTENSION CABLE CONNECTORS (1, 1a) from the Faucet through the top of ENCLOSURE (2). **Fig. 3a.**
4. Connect one 27" EXTENSION CABLE (1) to the SOLENOID (3). **Fig. 3, 3a.** Connect the second 27" EXTENSION CABLE (1a) to the top of the Y-CONNECTOR (8).
5. Connect the 10 ft. EXTENSION CABLE (6) to the top of the Y-CONNECTOR (8). Feed the other end through the two GRAY GROMMETS (9) and connect to the bottom of the next Y-CONNECTOR (8). Place Y-CONNECTOR (8) into ENCLOSURE (2) as shown **Fig. 3a, 3b.**
6. Repeat Steps above for each additional **Unit**, for a Max. of 15 **Units** on one POWER SUPPLY (7). **Fig. 3.**
7. Replace ENCLOSURE COVERS. Tighten cover screws firmly.

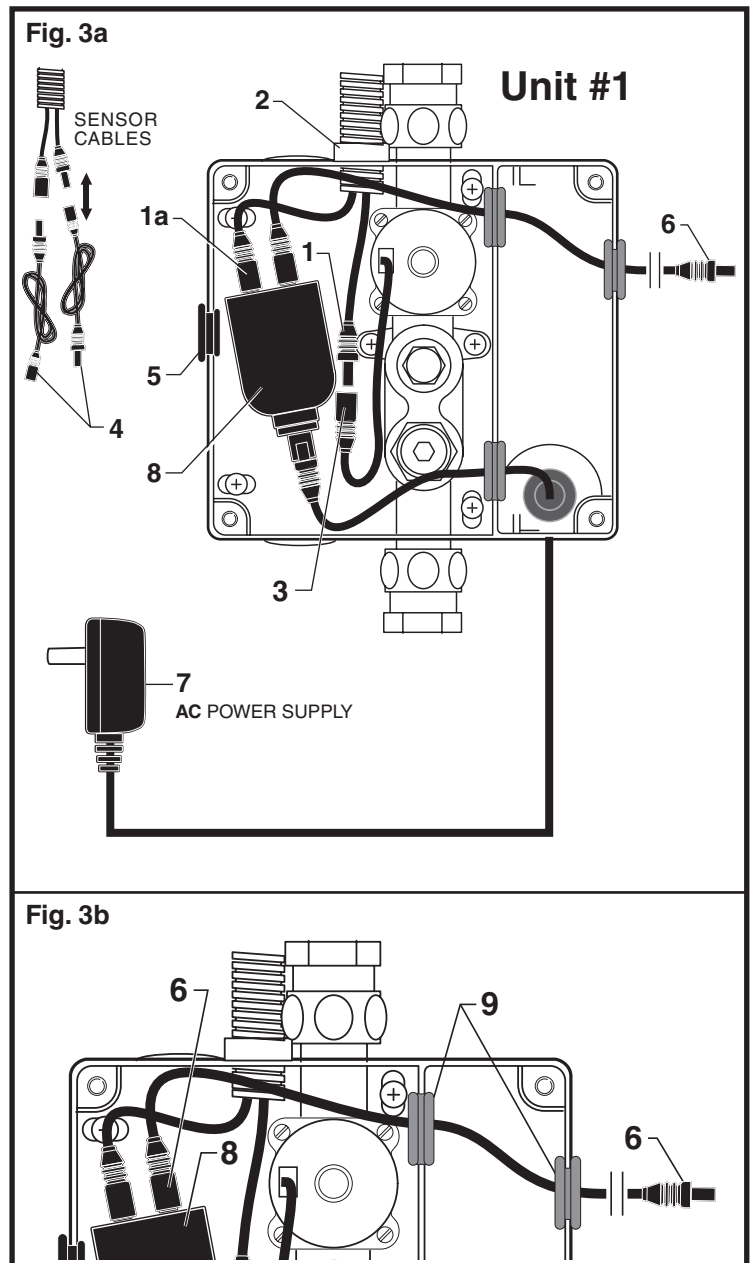

MAINTENANCE

1 HAND WASH SENSOR OPERATION; Fig. 1

When the Sensor detects a user, the water immediately starts to flow. Water flow will stop Two seconds after user is out of sensor range. The off delay allows the user to comfortably move his hands without the flow cycling on to off. As a precaution, a safety timer will turn off the water, after the sensor has been blocked for 59 seconds. The water will stay off until the blockage is removed from the detection zone.

Detection Zone: 2" - 10" (50mm - 250mm)

Default: Set at Factory 6" (150mm)

2 HOW TO CHANGE SENSOR RANGE; (Factory set at 6") Fig. 2

1. Setting the Detection Zone (Distance):
Remove cover from ENCLOSURE. Disconnect Power Supply (1), then reconnect. **Fig. 2.**
2. While the SENSOR CONTROL LED (2) is blinking slowly, place your hand 1 - 2 in. (30-50mm) in front of the sensor. **Fig. 2a.**
3. When the LED stops blinking and stays "ON", move your hand to the desired position and hold in place until the LED begins to blink again. **Fig. 2a.**
4. Once the SENSOR CONTROL LED (2) begins to blink again, remove your hand from the detection zone. When the flashing stops, the detection distance is set.
5. Replace ENCLOSURE COVERS (2). Tighten cover screws firmly.

3 HOW TO INSTALL AND CHANGE BATTERY; Fig. 3

1. Remove COVER from ENCLOSURE (1). **Fig. 3.**
2. Remove old BATTERY (2). Install new BATTERY (3) making sure the terminal side is inserted first and shape of the battery follows the shape of the BATTERY HOLDER (4). **Fig. 3.**
3. Replace ENCLOSURE COVER. Tighten cover screws firmly. **Fig. 3.**

Fig 1

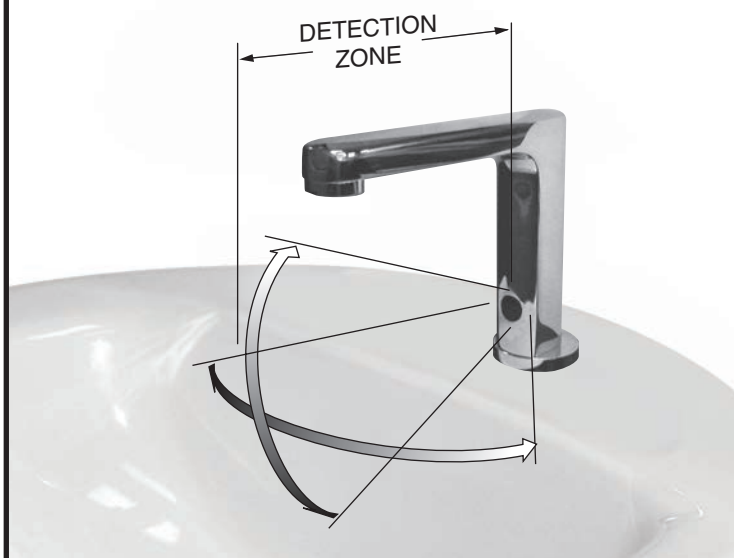


Fig. 2

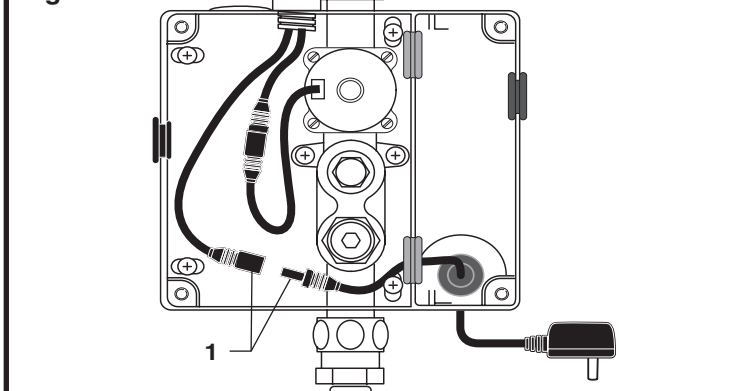


Fig. 2a


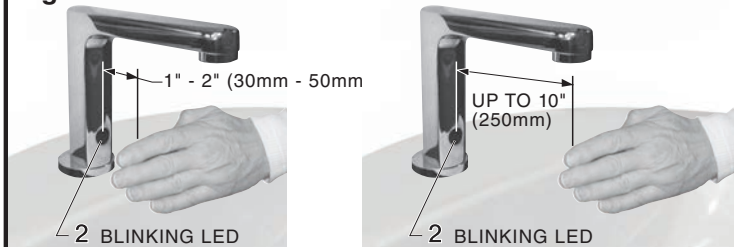



Fig.3

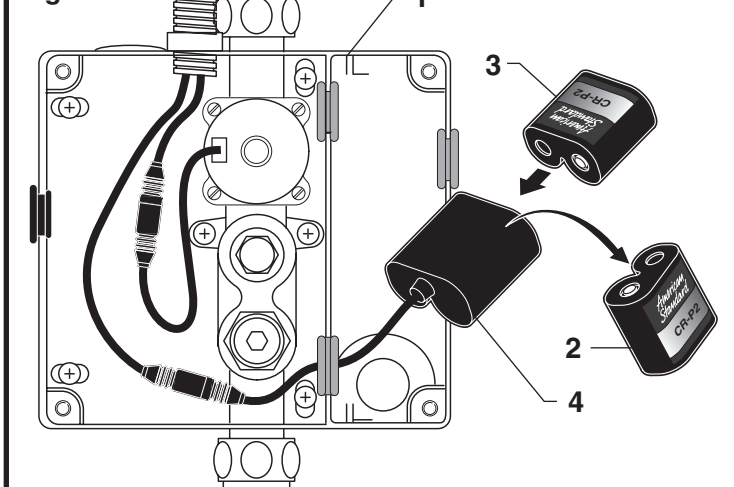

4 HOW TO CLEAN FILTER; Fig. 4


CAUTION Before opening ENCLOSURE disconnect AC power supply.

1. Remove ENCLOSURE COVER.
2. Close SUPPLY STOP (1) with 4mm Hex wrench.
Note: Keep water flowing out of faucet while shutting off.
3. Unthread STRAINER (2) using a 7/16" socket.
4. Pull out the STRAINER (2) and clean with an old toothbrush. Rinse thoroughly with water.
5. Install the STRAINER (2) back in its place and tighten with a 7/16" socket.
Caution: do not over tighten strainer.
Note: It is recommended to clean strainer every 6 months.
6. Open SUPPLY STOP (1) with 4mm Hex wrench.
7. Replace ENCLOSURE COVER. Tighten cover screws firmly.

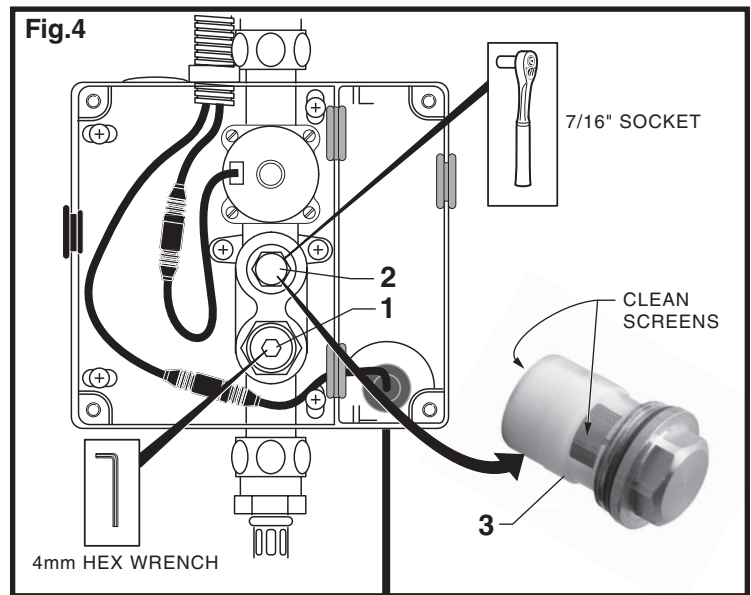

5 HOW TO CLEAN AND REMOVE THE AERATOR; Fig. 5

1. Remove AERATOR HOUSING (1) with KEY supplied with faucet.
2. Clean the AERATOR SCREENS (3) with a old tooth brush to remove dirt.
3. Remove AERATOR (2) from HOUSING (1).
4. Rinse Clean with water. Reassemble and install into spout end. Be sure black seal washer is in place.

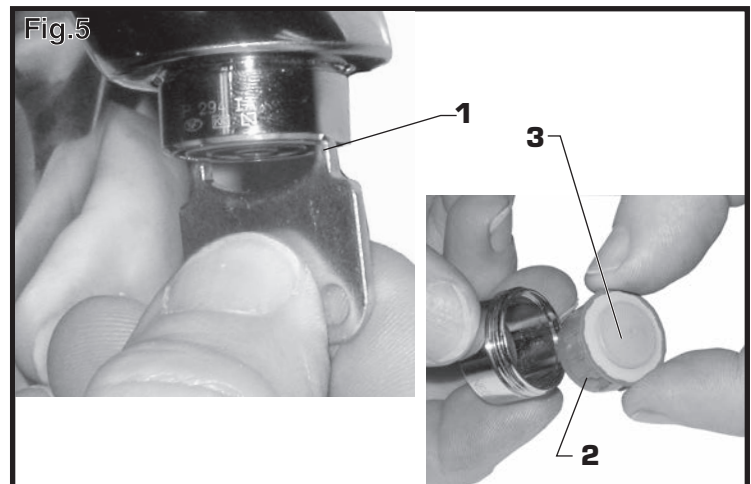

6 GENERAL CLEANING; Fig. 6

1. For general cleaning use a damp, soft cloth to clean the spout and the sensor.
2. For cleaning dirt use a soft cloth with diluted dish washing detergent. Wipe the area using a wet cloth and dry using a soft cloth.

CAUTION

Do not scratch the sensor when cleaning.

Avoid using anything that may scratch the spout surface. Never use polishing power, detergent or a nylon scrub brush. They will damage the surface of the spout or Sensor.



FAQ'S

Q: How will I know if battery needs to be replaced?

A: Valve does not open and sensor blinks 2 times interrupted by pause for up to 7 days.

Q: Why has the flow rate of the faucet reduced significantly?

A: Check and clean aerator and strainer.

Q: There is no flow out of faucet when I'm in the sensor range?

A: Check sensor. If sensor blinks 2 times interrupted by pause, replace battery, or call (855) 752-9259.

Q: Why does the faucet operate the opposite of expected-Turns On when not in sensor range, but turns off when in sensor range?

A: Sensor wires to solenoid are reversed.

Q: What is the normal operating pressure range?

A: Faucet will operate with supply pressures ranging from 20-80 psi.

American Standard