



Air Conditioning & Heating

1½ TO 5 TONS

**Standard Features**

- Compatible with the ComfortNet™ Communicating System family of products
- Maximum four low-voltage wires required for operation in communicating mode
- Auto configuration of the airflow and tonnage in communicating mode
- In non-communicating mode, up to 12 field-selectable airflow settings can be adjusted to optimize the system's CFM for each individual mode of operation
- R-410A refrigerant-compatible
- Factory-installed thermal expansion valves for cooling and heat pump applications
- Variable-speed ECM blower motor
- All-aluminum evaporator coil
- Provides constant CFM over a wide range of static pressure conditions independent of duct system; provides low CFM for efficient fan-only operation
- CFM indicator
- Improved humidity control and comfort
- Compatible with heat pumps and variable-capacity cooling applications
- Built-in coil has horizontal, vertical, and downflow drain pans with secondary drain connections
- AHRI Certified; ETL Listed



# AVPTC

## MULTI-POSITION, VARIABLE-SPEED AIR HANDLERS



**Cabinet Features**


- Fully insulated, painted steel cabinet with attractive Architectural Gray finish
- Compact, versatile upflow, downflow, or horizontal multi-position installations
- Low-voltage cabinet connections; control circuit is arranged to permit staging
- Power supply on top; low-voltage entry on top or side
- Cabinet air leakage less than 2.0% at 1.0 inch H<sub>2</sub>O when tested in accordance with ASHRAE standard 193
- Cabinet air leakage less than 1.4% at 0.5 inch H<sub>2</sub>O when tested in accordance with ASHRAE standard 193
- Foil-faced insulation is glued in place and covers the entire blower case to reduce operating sound and cabinet condensation



\* Complete warranty details available from your local dealer or at [www.goodmanmfg.com](http://www.goodmanmfg.com). To receive the 10-Year Parts Limited Warranty, online registration must be completed within 60 days of installation. Online registration is not required in California or Québec.




NOMENCLATURE

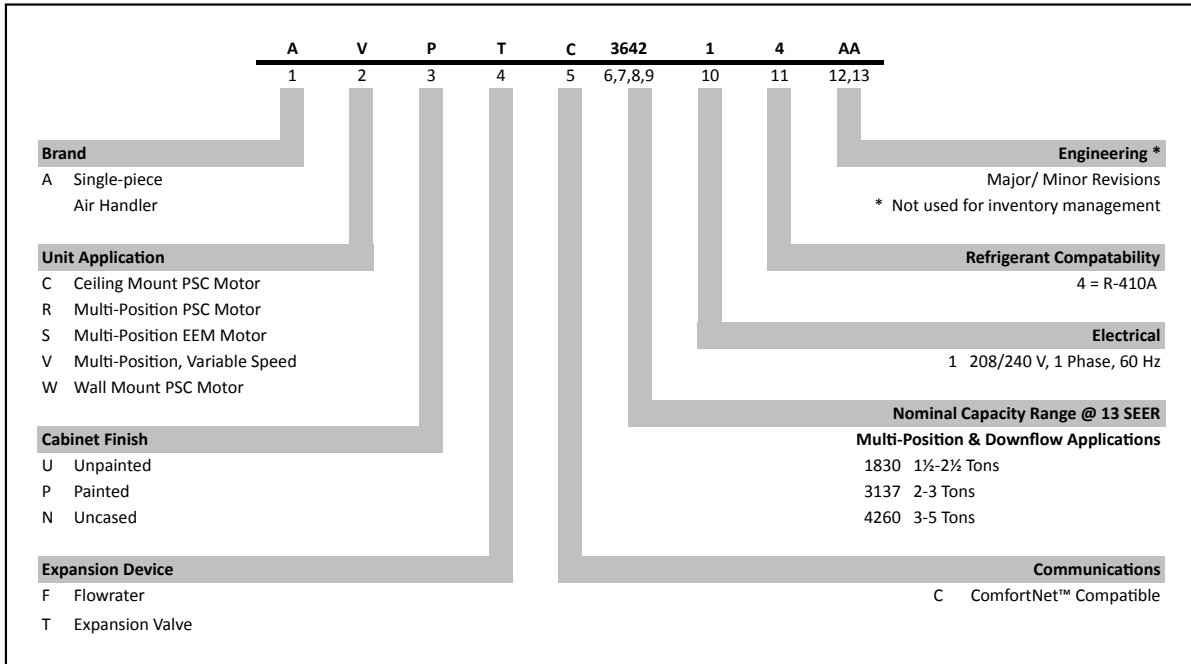

**SPECIFICATIONS**

	<b>AVPTC 183014</b>	<b>AVPTC 313714</b>	<b>AVPTC 426014</b>
<b>NOMINAL RATINGS</b>			
Cooling (BTU/h)	18,000-30,000	30,000-36,000	42,000-60,000
CFM (High/ Low)	1,200/ 600	1,200/ 600	1,800/ 1,200
<b>BLOWER</b>			
Diameter	9½"	10⅝"	10⅝"
Width	8"	10⅝"	10⅝"
Coil Drain Connection FPT	¾"	¾"	¾"
<b>SERVICE VALVE</b>			
Liquid	⅜"	⅜"	⅜"
Suction	¾"	⅞"	⅞"
<b>ELECTRICAL DATA</b>			
Voltage	208/240	208/240	208/240
Electric Heat Capacity (kW)	3, 5, 8, 10	3, 5, 6, 8, 10, 15	3, 5, 6, 8, 10, 15, 20
Min Circuit Ampacity	4.9/4.9	6.5/6.5	8.6/8.6
Max. Overcurrent Device (amps)	15/15	15/15	15/15
Minimum VAC	197	197	197
Maximum VAC	253	253	253
<b>BLOWER MOTOR</b>			
FLA	3.9	5.2	6.9
HP	½	¾	1
<b>SHIP WEIGHT (LBS)</b>			
	127	178	197

DIMENSIONS

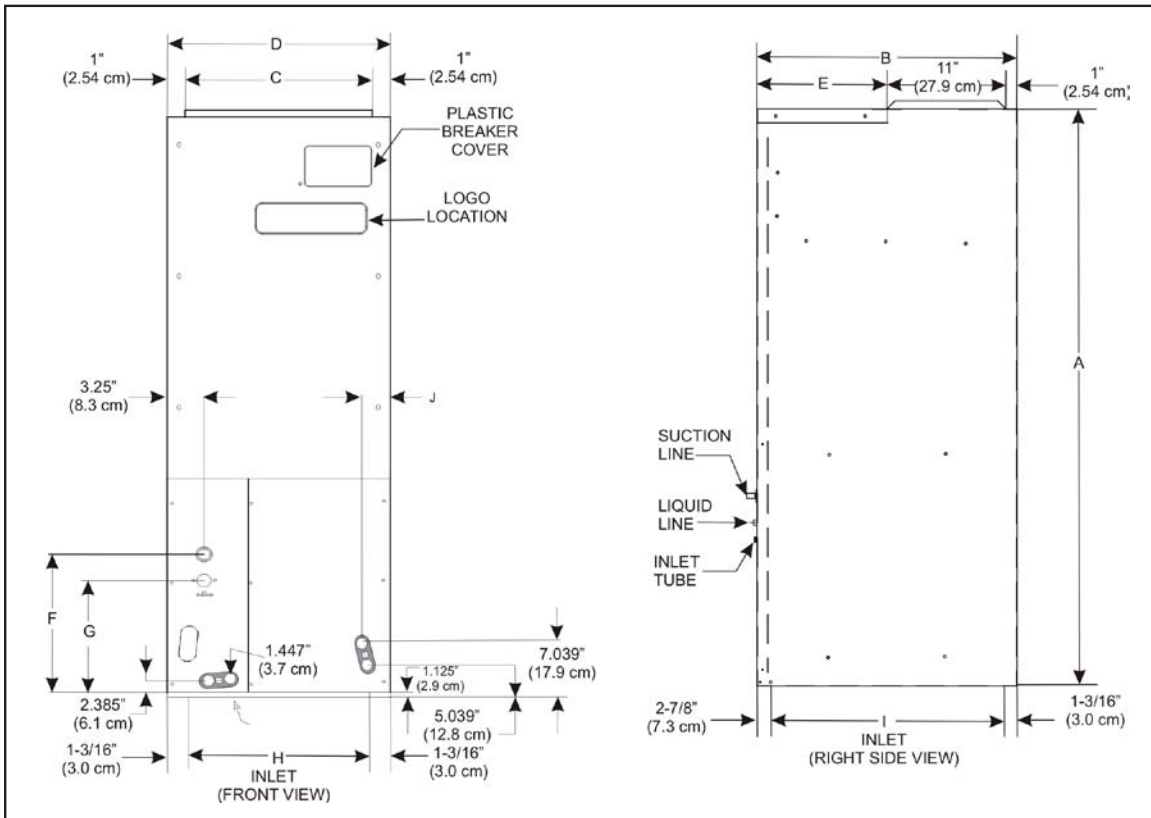

MODEL	A	B	C	D	E	F	G	H	I	J
AVPTC183014	46 $\frac{3}{4}''$	22''	17 $\frac{1}{2}''$	19 $\frac{1}{2}''$	10''	14 $\frac{1}{2}''$	11 $\frac{15}{16}''$	17 $\frac{1}{8}''$	17 $\frac{15}{16}''$	2''
AVPTC313714	53 $\frac{1}{4}''$	24''	20''	22''	12''	14 $\frac{1}{2}''$	11 $\frac{15}{16}''$	19 $\frac{5}{8}''$	19 $\frac{15}{16}''$	1 $\frac{13}{16}''$
AVPTC426014	53 $\frac{1}{4}''$	24''	20''	22''	12''	14 $\frac{1}{2}''$	11 $\frac{15}{16}''$	19 $\frac{5}{8}''$	19 $\frac{15}{16}''$	1 $\frac{13}{16}''$

## AIRFLOW DATA

### ELECTRIC HEAT AIRFLOW

HTR KW	9	10	11	AVPTC 183014*	AVPTC 313714*	AVPTC 426014*
3	ON	ON	ON	630	610	600
5	ON	ON	OFF	730	710	680
6	ON	OFF	ON	840	840	790
8	ON	OFF	OFF	1080	1060	990
10	OFF	ON	ON	1270	1260	1190
15	OFF	ON	OFF	NR	1470	1390
20	OFF	OFF	ON	NR	NR	1580
21	OFF	OFF	OFF	NR	NR	1580

Note: Airflow data shown applies to the emergency heat mode (electric heat only) in either legacy mode operation or fully communicating mode operation.

### COOLING / HEAT PUMP AIRFLOW

MODEL	TAP	LOW-STAGE COOL	HIGH-STAGE COOL
AVPTC183014*	A	420	630
	B	560	840
	C	700	1040
AVPTC313714*	A	410	610
	B	560	830
	C	700	1040
	D	830	1240
AVPTC426014*	A	810	1210
	B	940	1410
	C	1050	1560
	D	1210	1800

#### NOTES

- Airflow data shown applies to legacy mode operation only. For a fully communicating system, see the outdoor unit's installation instructions for cooling and heat pump airflow data. See *ComfortNet™ System — Airflow Consideration* section for details.
- Airflow blink codes are approximations a=of actual airflow.

## DIPSWITCH SETTINGS

### DIPSWITCH 1/2/7/8

#### AVPTC1830

HEATING ELEMENT (kW)	SWITCH POSITION				EMERGENCY BACK-UP	HEAT PUMP WITH BACK-UP
	1	2	7	8		
Up to 10	Off	Off	Off	Off	1,100	1,210
Up to 10	On	Off	Off	Off	890	935
5	Off	On	Off	Off	700	770

#### AVPTC3137

HEATING ELEMENT (kW)	SWITCH POSITION				EMERGENCY BACK-UP	HEAT PUMP WITH BACK-UP
	1	2	7	8		
Up to 15	Off	On	Off	Off	1,600	1,680
Up to 10	On	On	Off	Off	1,200	1,260
Up to 10	On	On	Off	On	1,020	1,070

#### AVPTC4260

HEATING ELEMENT (kW)	SWITCH POSITION				EMERGENCY BACK-UP	HEAT PUMP WITH BACK-UP
	1	2	7	8		
Up to 20	Off	Off	Off	Off	2,050	2,150
Up to 20	On	Off	Off	Off	1,750	1,835
Up to 15	Off	On	Off	Off	1,600	1,680
Up to 10	On	On	Off	Off	1,200	1,260
Up to 10	On	On	Off	On	1,020	1,070

### DIPSWITCH 5/6/7/8

#### AVPTC1830

OUTDOOR UNIT (TONS)	SWITCH POSITION				INDOOR CFM	
	5	6	7	8	COOL	HEAT PUMP
2.5	Off	Off	Off	Off	1,100	1,100
2	On	Off	Off	Off	800	800
1.5	Off	On	Off	Off	600	600

#### AVPTC3137

OUTDOOR UNIT (TONS)	SWITCH POSITION				INDOOR CFM	
	5	6	7	8	COOL	HEAT PUMP
3.5	Off	On	Off	Off	1,480	1,480
3	On	On	Off	Off	1,200	1,200
2.5	On	On	Off	On	1,020	1,020

#### AVPTC4260

OUTDOOR UNIT (TONS)	SWITCH POSITION				INDOOR CFM	
	5	6	7	8	COOL	HEAT PUMP
5	Off	Off	Off	Off	1,800	1,800
4	On	Off	Off	Off	1,580	1,580
3.5	Off	On	Off	Off	1,480	1,480
3	On	On	Off	Off	1,200	1,200
2.5	On	On	Off	On	1,020	1,020

**Note:** When applying a humidistat (normally closed), refer to the installation and operating instructions. The humidistat can adjust the cooling airflow to 85%.

## HEAT KIT SELECTION

MODELS	AVPTC 183014A*	AVPTC 313714*	AVPTC 426014A*
HKR-03*	X	X	X
HKR-05*/-05C*	X	X	X
HKR-06*	X	X	X
HKR-08*/-08C*	X	X	X
HKR-10*/-10C*	X <sup>1</sup>	X	X
HKR-15CA, HKR-15CB		X <sup>2</sup>	X
HKR-20CA, HKR-20CB			X <sup>3</sup>

\* Revision level that may or may not be designated

C Circuit breaker option

#### NOTES:


When 8kW and 10kW heat kits are used with an AVPTC1830 and AVPTC3137, matched with 2-ton outdoor unit, see Note 1 below.

<sup>1</sup> Set Heater Kit dip switches 9, 10 and 11 to 6kW setting (9-ON, 10-OFF, 11-ON) to obtain 840 CFM.

<sup>2</sup> This heater kit can only be used for '1000 CFM or higher' applications.

<sup>3</sup> This heater kit can only be used for '1200 CFM or higher' applications.

# AVPTC WIRING DIAGRAM

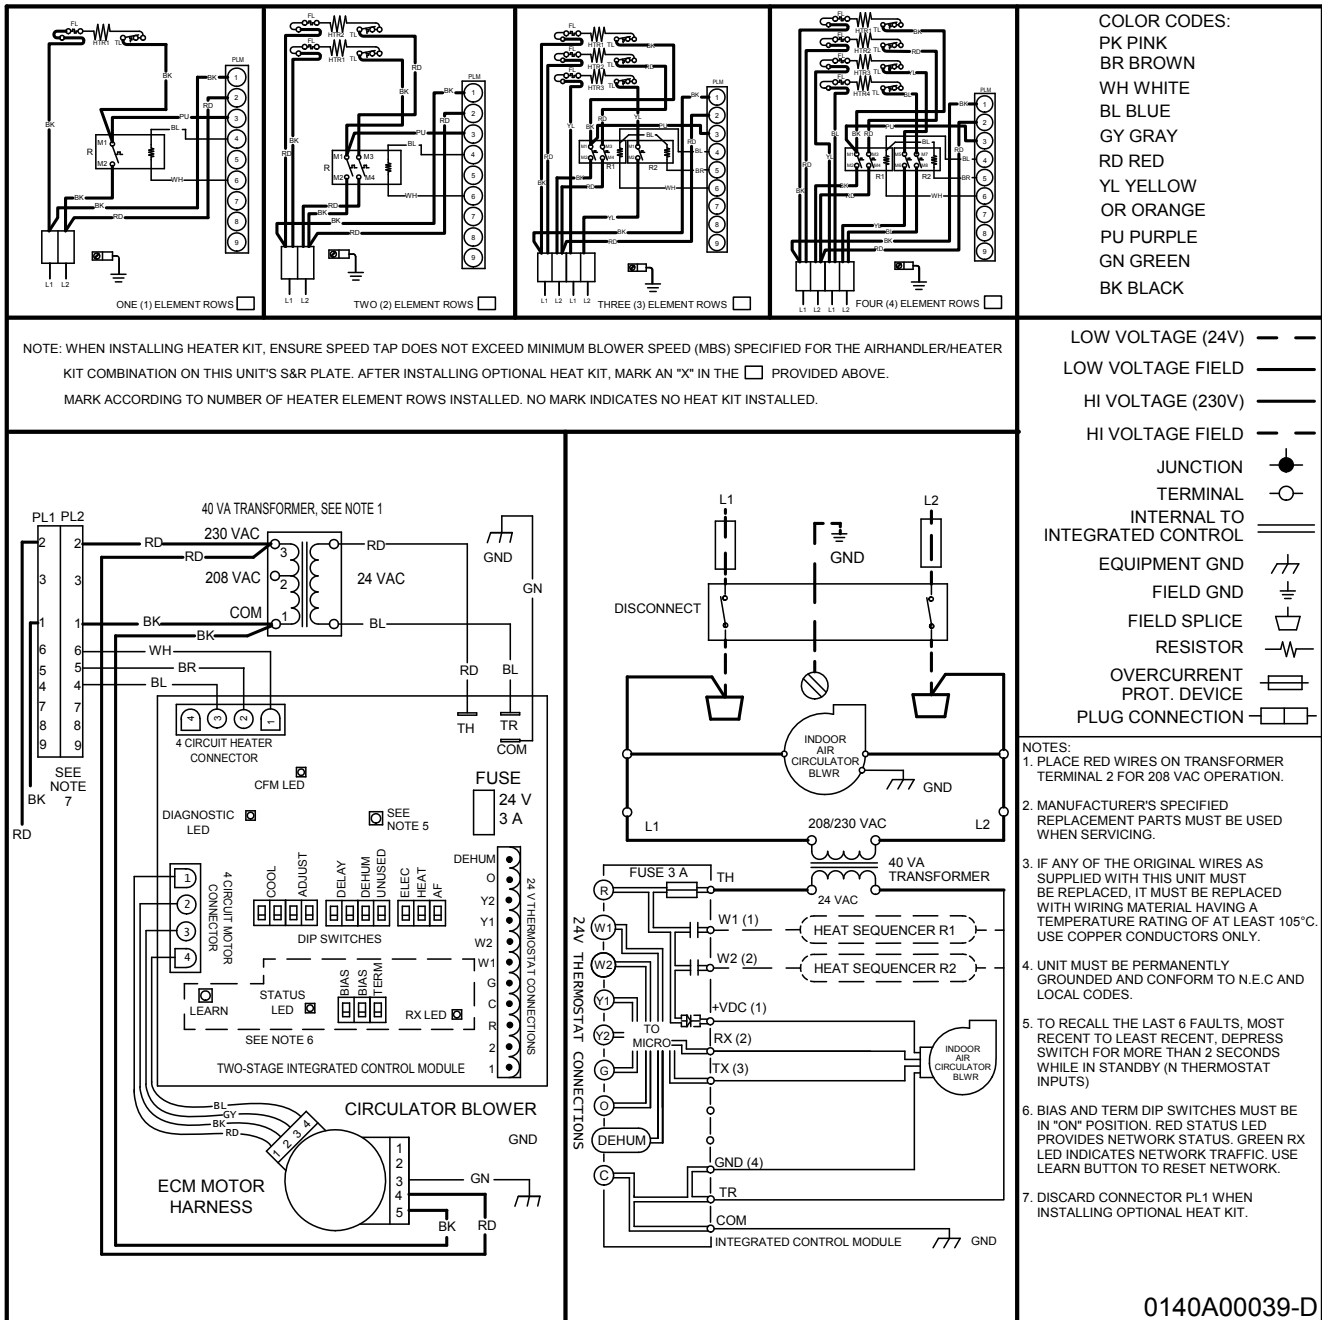

0140A00039-D

Wiring is subject to change. Always refer to the wiring diagram or the unit for the most up-to-date wiring.



**WARNING**

**High Voltage:** Disconnect all power before servicing or installing this unit. Multiple power sources may be present. Failure to do so may cause property damage, personal injury, or death.



**ACCESSORIES**

**DRAIN PAN INSULATION KITS**

**DOWNFLOW APPLICATIONS**

MODEL	INSULATION KIT
1830	DPI36-42/20
3137-4260	DPI48-61/20

Note: Each kit contains enough material to modify 20 coils

**HORIZONTAL APPLICATIONS**

MODEL	INSULATION KIT
1830	DPIH36-42
3137-4260	DPIH48-61

Note: Each kit contains enough material to modify 20 coils

**SINGLE POINT KIT \*\***

MODEL	HKR-15C	HKR-20C	HKR-21C
SPW-01	X	X	X

\*\* Must be installed along with any of the above compatible heat kits. This kit will fit any AVPTC air handler as long as a compatible heat kit is installed in the unit.

**FILTERS**

MODEL	FILTER #	DIMENSIONS (")	QTY REQUIRED
N/A	FIL 18-32	15 x 21 x ¾	1
1830	FIL-36-42	19 x 21 x ¾	1
3137	FIL 48-61	23 x 21½ x ¾	1
4260	FIL 48-61	23 x 21½ x ¾	1